
GROUP 4

**CORROSION
PROTECTION**

CONTENTS


BODY SEALING LOCATIONS	4-2	UNDERCOAT APPLICATION LOCATIONS	4-5
---	------------	--	------------

BODY SEALING LOCATIONS


M4040001000484

**NOTES WITH REGARD TO REPAIR
WORK**

In place where the sealant can be directly seen on surfaces such as the drip rails, pillars, or clinch, and where the appearance of the paint surface is important, apply sealant or wipe away sealant after application to make the amount of sealant even. Be careful not to cover the drain hole. Places indicated by thick dashed lines indicate application locations on the under side of the vehicle.





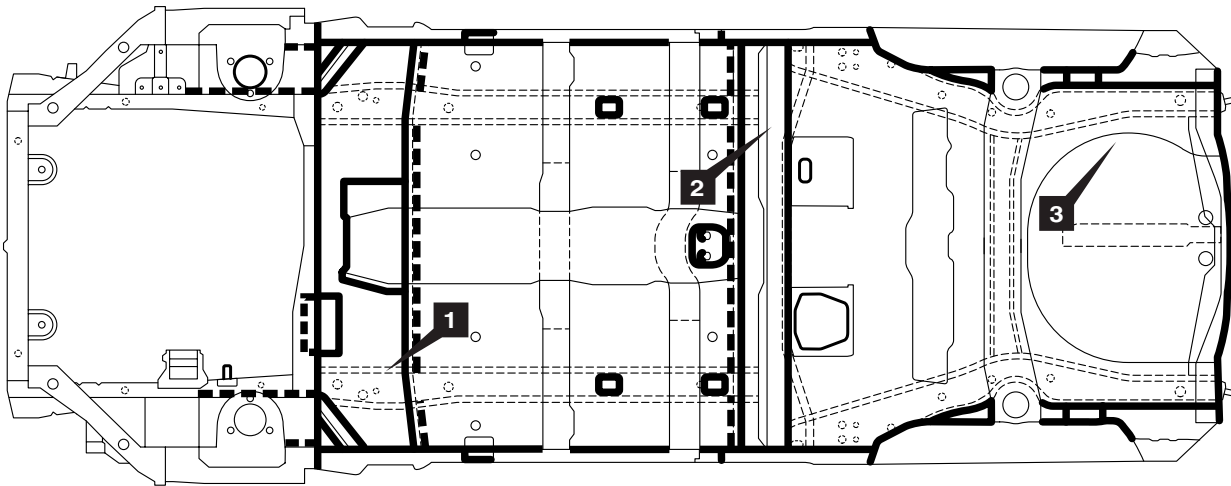
FLOOR









AB401135AB

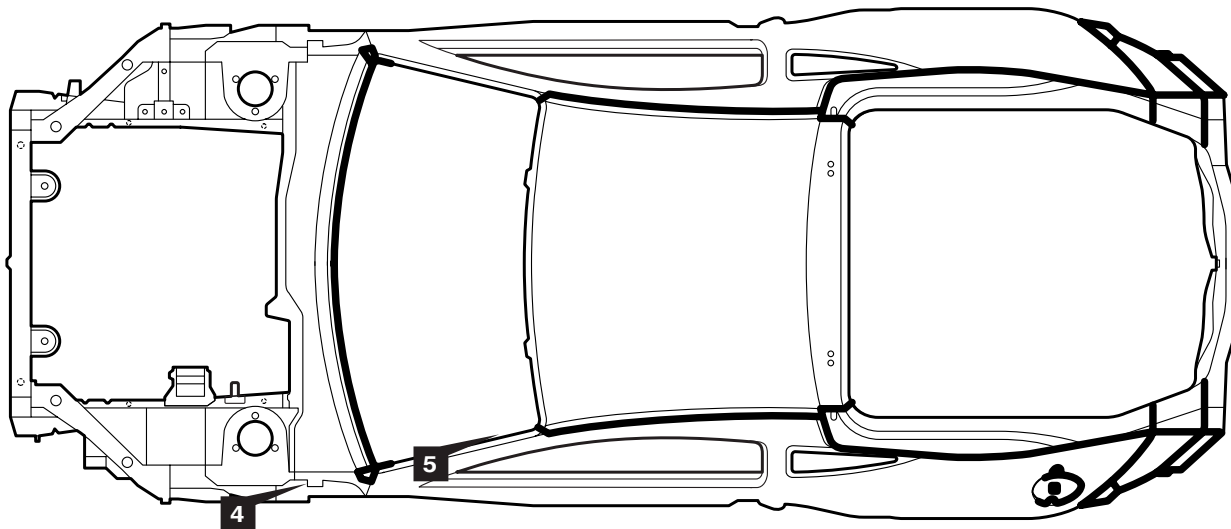UPPER BODY


AB401137AB

SIDE BODY

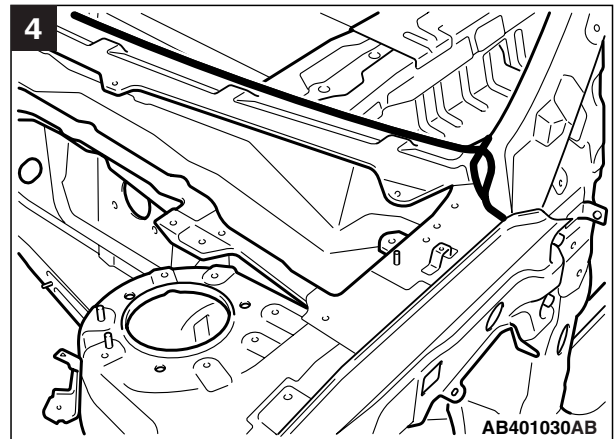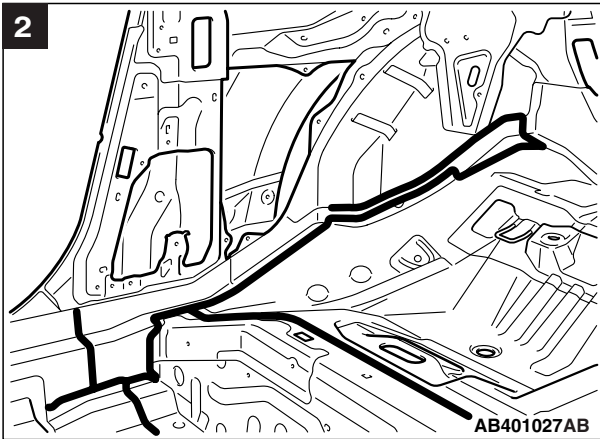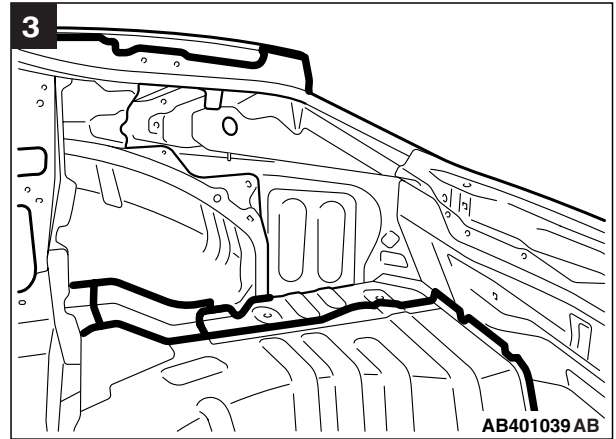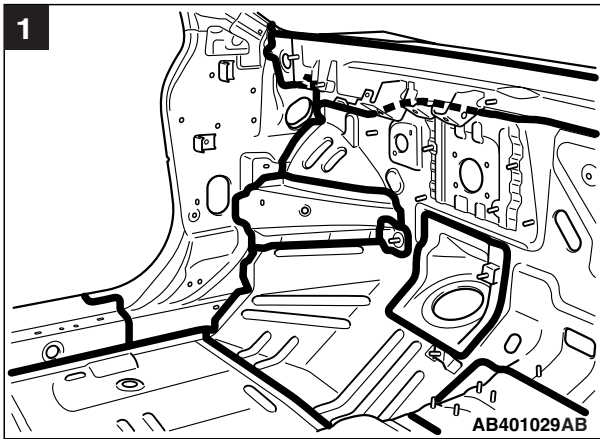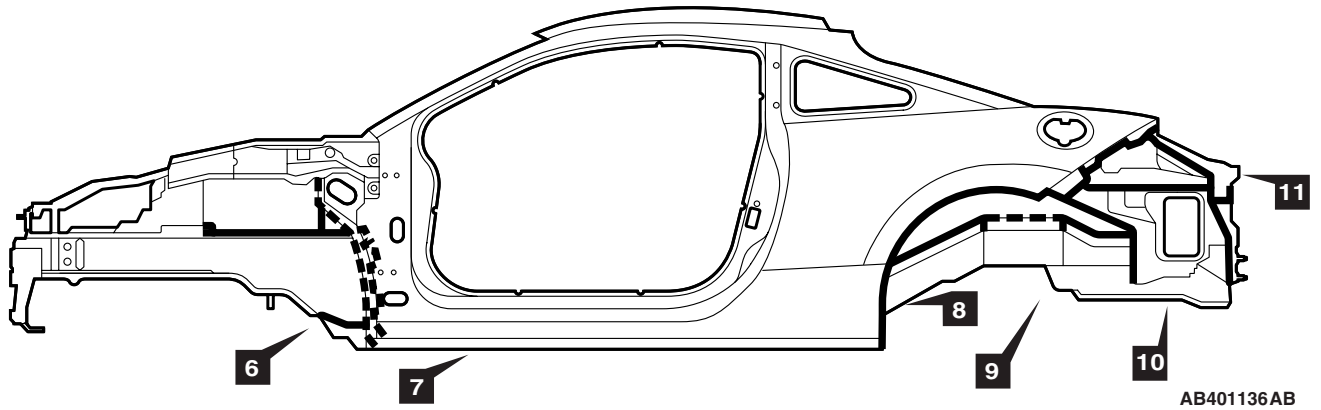

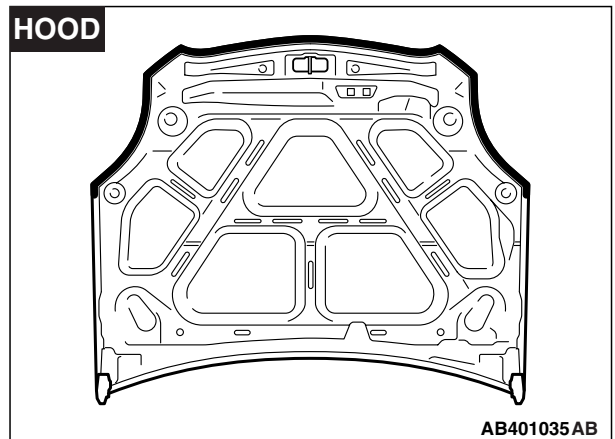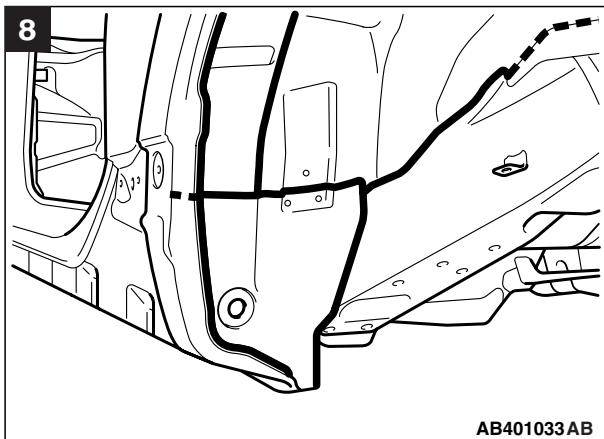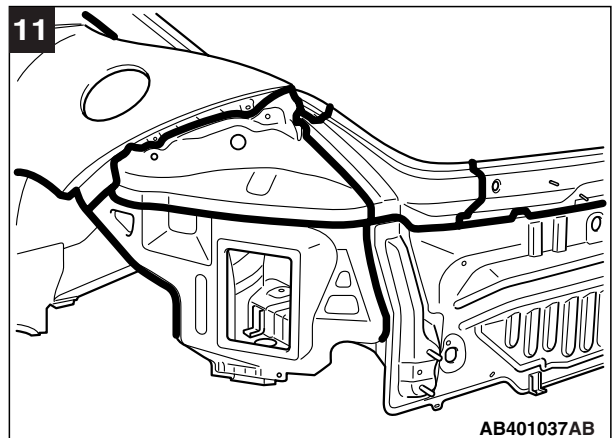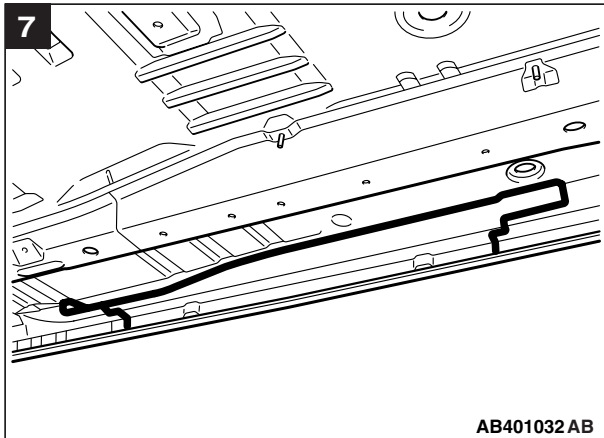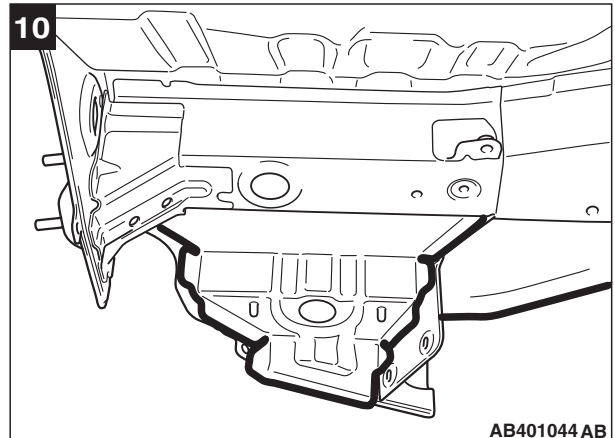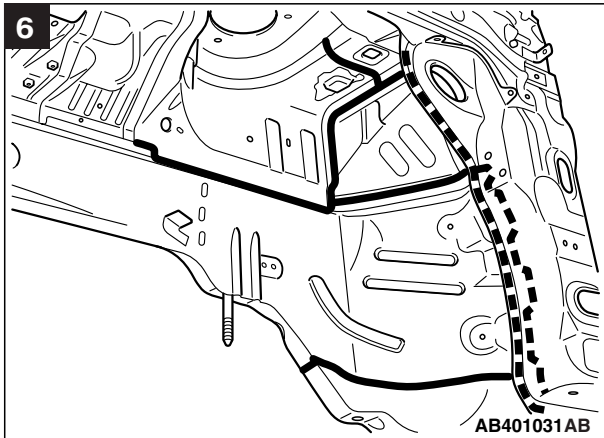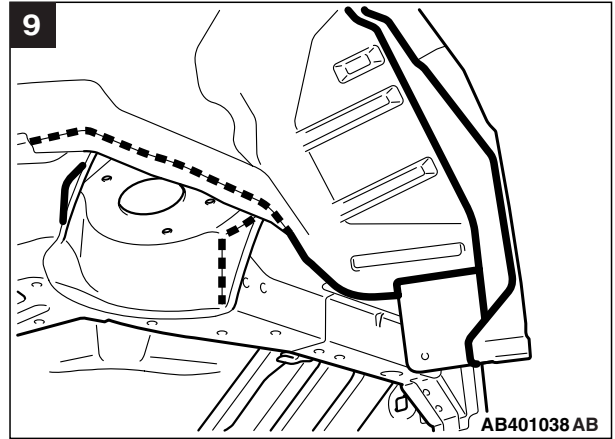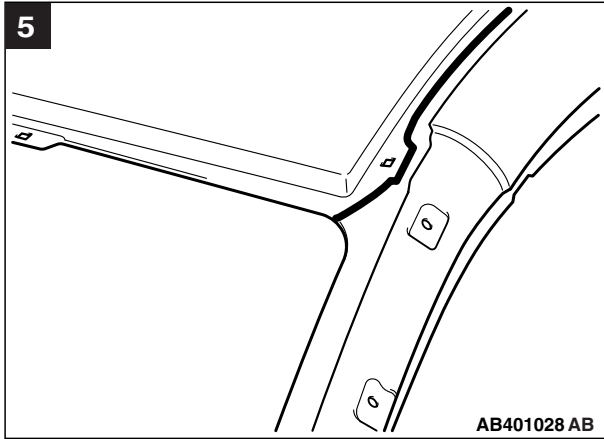


FRONT DOOR

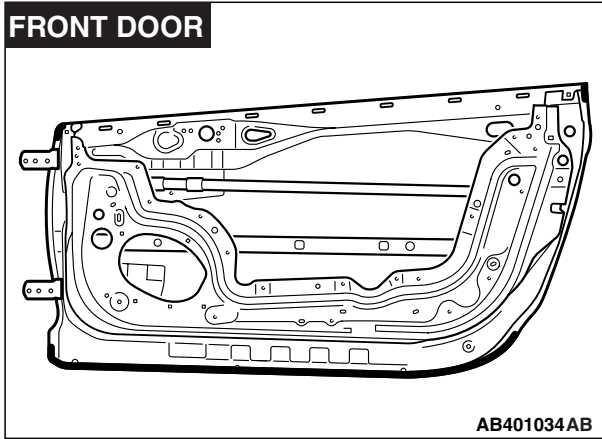

AB401034AB

LIFT GATE

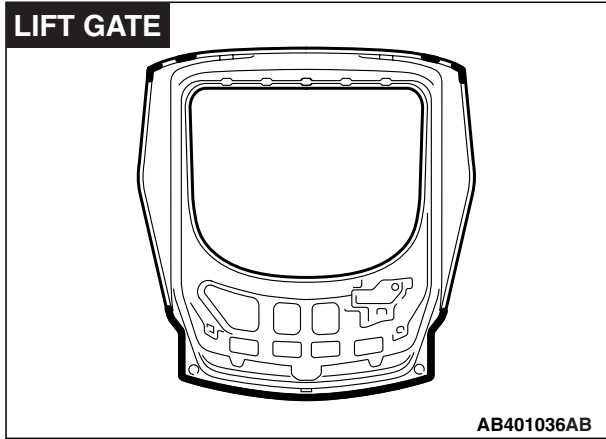

AB401036AB


UNDERCOAT APPLICATION LOCATIONS

M4040003000350

The under parts of the body is undercoated for anti-corrosive, anti-rust, anti-chipping, and anti-vibration performance.

After correcting the body, restore as shown in the instructions of the figure, if necessary.

Tape the areas marked with an asterisks to protect those areas from getting any undercoating on those areas for parts attachment.

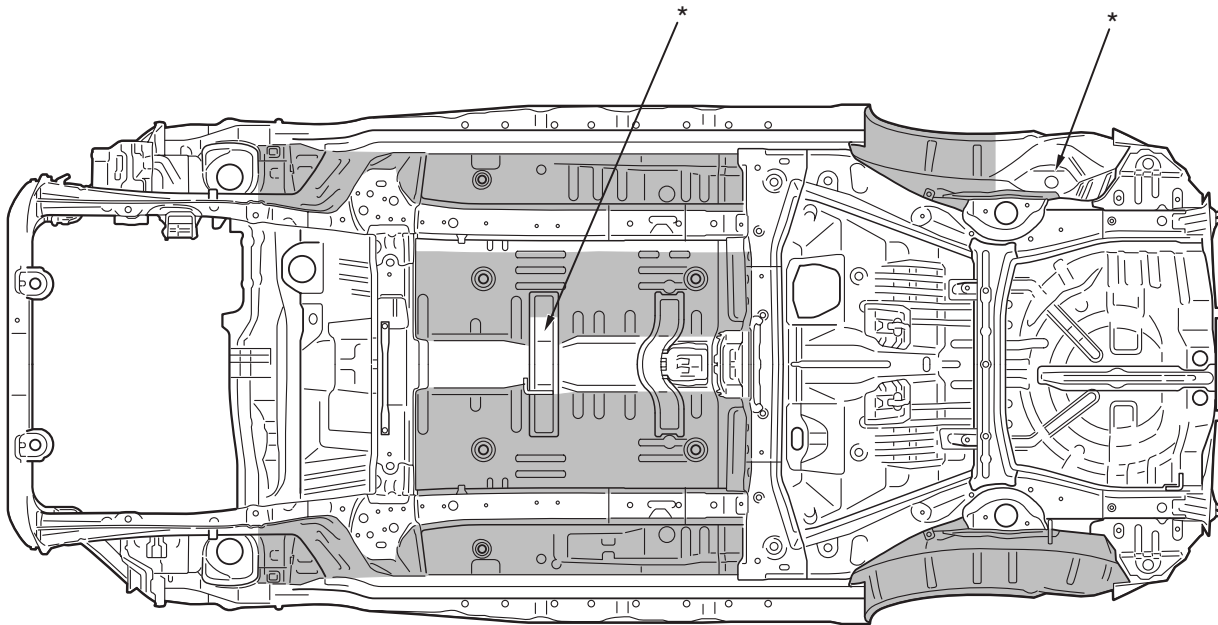

 : UNDERCOAT [FILM THICKNESS OF AT LEAST 0.75 mm (0.03 inch)]

AB401125AB

NOTES