

A

A/C system <2.4 L>.....	13A-1144	Anti-Lock Braking System (ABS)	
A/C system <3.8 L>.....	13B-1227	Circuit Diagram	
A/T Control Component.....	23A-378	VEHICLES WITH TRACTION CONTROL SYSTEM (TCL).....	90-312
A/T Faulty Operation Prevention Mechanism		VEHICLES WITHOUT TRACTION CONTROL SYSTEM (TCL).....	90-306
Diagnosis.....	23A-365	Diagnosis.....	35B-5
A/T Key Interlock and Shift Lock Mechanism.....	23A-398	Audio System	
ABS		Circuit Diagram	
Actuator Test.....	35B-131	VEHICLES WITH AUDIO AMPLIFIER.....	90-258
ECU, Check at Terminal.....	35B-132	VEHICLES WITHOUT AUDIO AMPLIFIER.....	90-254
ABS-ECU		Auto-cruise Control.....	17-9
Check.....	35C-155	Auto-cruise Control <Removal and installation>.....	17-89
Accelerator Pedal.....	17-9	Auto-cruise Control Switch	
Accessory Socket.....	54A-152	Check.....	17-85
Accessory Socket		Auto-cruise Control System	
Circuit Diagram.....	90-264	Circuit Diagram	
Adhesive		2.4L ENGINE-M/T.....	90-274
Automatic Transaxle <F4A4B>.....	23B-76	2.4L ENGINE-A/T.....	90-282
Automatic Transaxle <F5A5A>.....	23C-86	3.8L ENGINE-A/T.....	90-290
Body.....	42-108	3.8L ENGINE-M/T.....	90-298
Engine <3.8 L>.....	11C-68	Component Check.....	17-87
Engine <2.4 L>.....	11A-66	Diagnosis.....	17-10
Engine Cooling.....	14-43	Automatic Glare-Proof Inside Rearview Mirror	
Engine Lubrication.....	12-7	Circuit Diagram.....	90-252
Engine Overhaul <2.4 L>.....	11B-72	Automatic Transaxle	
Engine Overhaul <3.8 L>.....	11D-71	A/T Key Interlock and Shift Lock Mechanism.....	23A-398
Exterior.....	51-47	Adhesive <F4A4B>.....	23B-76
Intake and Exhaust.....	15-27	Adhesive <F5A5A>.....	23C-86
Manual Transaxle Overhaul <F5M42>.....	22B-52	Adjusting Plate, Snap Ring and Spacers <F5A5A>.....	23C-84
Manual Transaxle Overhaul <F6MBA>.....	22C-58	Adjusting Plate, Snap Ring and Spacers <F4A4B>.....	23B-74
MFI <2.4 L>.....	13A-1217	Diagnosis.....	23A-15
MFI <3.8 L>.....	13B-1299	Direct Clutch.....	23C-61
Steering.....	37-67	Fluid Level Check.....	00-60
Adhesive Table.....	00-67	Sealant <F5A5A>.....	23C-86
Air Bag Module		Sealant <F4A4B>.....	23B-76
Disposal Procedures.....	52B-432	Transaxle Assembly.....	23A-401
Air Bag Module(s).....	52B-408	Transaxle Control.....	23A-395
Air Cleaner.....	15-4	Valve Body Spring Identification <F5A5A>.....	23C-83
Air Cleaner Element		Valve Body Spring Identification <F4A4B>.....	23B-73
Replace.....	00-48	Automatic Transaxle Control Component	
Air Conditioning		Check.....	23A-389
Actuator Test <Automatic A/C>.....	55B-185	Automatic Transaxle Fluid	
Actuator Test <Manual A/C>.....	55A-180	Level Check.....	00-60
Automatic, Circuit Diagram		Auto-tensioner	
3.8L ENGINE.....	90-210	Check.....	11A-8
Charging.....	55A-186		
Compressor Drive Belt Adjustment.....	55A-186	B	
Compressor Noise Check.....	55A-188	Backup Light	
Condenser and Condenser Fan Motor.....	55A-211	Circuit Diagram	
ECU Terminal Check <Automatic A/C>.....	55B-186	A/T.....	90-144
ECU Terminal Check <Manual A/C>.....	55A-181	M/T.....	90-142
Idle-up Operation Check.....	55A-191	Ball Joint Dust Cover	
Manual, Circuit Diagram		Inspection <Front suspension>.....	33-8
2.4L ENGINE.....	90-190	Inspection <Rear suspension>.....	34-8
3.8L ENGINE.....	90-200	Replacement <Rear suspension>.....	34-15
Outside Air Temperature Sensor.....	55A-204	Replacement <Front suspension>.....	33-17
Performance Test.....	55A-187	Ball Joint Dust Cover Inspection	
Power Relay Check.....	55A-189	Steering.....	37-25
Refrigerant Leak Repair.....	55A-188	Ball Joint Seals	
Refrigerant Line.....	55A-213	Check.....	00-66
Sensors (Full-auto A/C).....	55B-190	Barometric Pressure Sensor	
Sight Glass Refrigerant Level Test.....	55A-185	Check.....	17-102
Amplifier.....	54A-229	Basic Brake System	
Antenna.....	54A-230	Diagnosis.....	35A-4

Battery			
Charging	54A-6	Charging System	
Check	54A-5	Circuit Diagram	
Handling	00E-12	2.4L ENGINE	90-38
Remedy for a Discharged Battery	35B-140	3.8L ENGINE	90-40
Test	54A-6	Diagnosis	16-4
Belt, Timing		Check Valve	
Replace	00-51	Operating Check.....	35A-17
BJ Boot		Clearance Around Hood	
Replacement	26-30	Adjustment.....	42-5
Bleeding		Clock Spring	52B-408
Brakes (Basic)	35A-17	Clutch	21B-2
Power Steering	37-22	Clutch	
Blower	55A-200	Diagnosis	21A-3
Blower Assembly <Removal and installation>	55A-197	Inspection <F5M42>	21B-4
Blower Assembly	55A-194	Inspection <F6MBA>	21C-4
Body		Clutch Bleeding	21A-10
Adhesive	42-108	Clutch Control.....	21A-13
Diagnosis	42-4	Clutch Control	
Sealant	42-108	Inspection	21A-16
Boots		Clutch Housing <F5M42>	22B-42
Driveshaft, Check	00-66	Clutch Housing <F6MBA>	22C-47
Brake Booster.....	35A-27	Clutch Housing	
Brake Booster		Disassembly and Assembly <F6MBA>.....	22C-47
Operating Check.....	35A-16	Disassembly and Assembly <F5M42>	22B-42
Removal and Installation	35A-27	Clutch Master Cylinder	
Brake Disc		Inspection	21A-18
Pad Wear Check	00-65	Clutch Pedal	21A-12
Brake Fluid Level Sensor Check	35A-18	Clutch Pedal	
Brake Hoses		Check and Adjustment.....	21A-9
Check	00-65	Inspection	21A-13
Brake Pad		Clutch Pedal Position Switch	
Wear Check.....	00-65	Check.....	21A-10
Brake Pedal.....	35A-25	Clutch Release Cylinder	21B-6
Brake Pedal		Clutch Release Cylinder	
Check and Adjustment	35A-15	Inspection	21B-7
Brake Rotor		Column Switch.....	54A-149
Disc, Check	35A-21	Column Switch	
Bumper		Removal and Installation	54A-149
Rear.....	51-4	Combination Meters	54A-52
		Combination Meters <Removal and installation>	54A-131
		Combination Meters	
		Diagnosis	54A-52
		Compass	
		Calibration.....	54A-258
		Compression Pressure	
		Check <2.4 L>	11A-14
		Check <3.8 L>	11C-17
		Compressor (A/C)	
		Noise Check	55A-188
		Compressor Assembly	55A-205
		Connecting Rod	
		Overhaul <3.8 L>	11D-49
		Overhaul <2.4 L>	11B-51
		Connector Inspection.....	00E-2
		Control Housing.....	22B-39
		Control Housing	
		Disassembly and Assembly.....	22B-39
		Control Relay	
		Check.....	23A-390
		Control Unit Location	70-16
		Controller Area Network (CAN)	
		Circuit Diagram	
		2.4L ENGINE-M/T.....	90-382
		2.4L ENGINE-A/T	90-390
		3.8L ENGINE-A/T	90-408
		3.8L ENGINE-M/T.....	90-400
		Coolant	
		Engine, Change	00-63

C

Camshaft <3.8 L>	11C-32
Camshaft <2.4 L>	11A-27
Camshaft	
Overhaul <2.4 L>	11B-30
Overhaul <3.8 L>	11D-27
Camshaft Oil Seal	11C-30
Camshaft Position Sensor	16-43
Camshaft Position Sensor	
2.4L ENGINE.....	16-43
3.8L ENGINE.....	16-44
Check	16-41
Canister	
Evaporative Emission	17-110
Catalytic Converter.....	17-111
Caution Labels	55A-5
Centermember	32-9
Central Door Locking System.....	54B-124
Central Door Locking System	
Circuit Diagram.....	90-176
Diagnosis	42-26
Centralized Junction	
Circuit Diagram.....	90-15
Charging System.....	16-3

Coolant Hoses			
Heater Hose Inspect.....	00-65		
Radiator Hose Inspect.....	00-65		
Cooling System			
Circuit Diagram			
2.4L ENGINE.....	90-82		
3.8L ENGINE.....	90-84		
Crankcase Ventilation System			
Check.....	17-97		
Crankshaft			
Overhaul <3.8L>.....	11D-58		
Overhaul <2.4L>.....	11B-60		
Crankshaft Front Oil Seal.....	11C-51		
Crankshaft Oil Seal.....	11A-38		
Crankshaft Position Sensor			
2.4L ENGINE.....	16-44		
3.8L ENGINE.....	16-45		
Check <Automatic transaxle>.....	23A-389		
Check <Engine and emission control>.....	17-107		
Crankshaft Pulley.....	11A-25		
Crankshaft Rear Oil Seal.....	11C-53		
Crossmember <Rear suspension>.....	34-23		
Crossmember <Power plant mount>.....	32-11		
Crossmember			
Inspection.....	32-17		
Cylinder Block			
Overhaul <2.4L>.....	11B-60		
Overhaul <3.8L>.....	11D-58		
Cylinder Head			
Overhaul <3.8L>.....	11D-34		
Overhaul <2.4L>.....	11B-33		
Cylinder Head Gasket <3.8L>.....	11C-55		
Cylinder Head Gasket <2.4L>.....	11A-42		
D			
Defogger.....	54A-231		
Defogger			
Circuit Diagram.....	90-248		
Diagnosis			
A/T Faulty Operation Prevention Mechanism.....	23A-365		
Anti-Lock Braking System (ABS).....	35B-5		
Auto-cruise Control System.....	17-10		
Automatic Transaxle.....	23A-15		
Basic Brake System.....	35A-4		
Body.....	42-4		
Central Door Locking System.....	42-26		
Charging System.....	16-4		
Clutch.....	21A-3		
Combination Meters.....	54A-52		
Door.....	42-49		
Emission Control System.....	17-90		
Engine <2.4L>.....	11A-3		
Engine <3.8L>.....	11C-3		
Engine Control System.....	17-3		
Engine Cooling.....	14-4		
Equipment <Ignition switch>.....	54A-8		
Equipment <Horn>.....	54A-150		
Equipment <Defogger>.....	54A-231		
Exterior.....	51-10		
Front Axle.....	26-3		
Front Suspension.....	33-2		
Fuel Supply.....	13C-2		
Heated Door Mirror.....	51-27		
Immobilizer System.....	54A-14		
Inside Rear View Mirror.....	52A-3		
Intake and Exhaust.....	15-2		
Keyless Entry System.....	42-88		
Liftgate.....	42-80		
Manual Transaxle.....	22A-5		
Multiport Fuel Injection (MFI) <3.8L>.....	13B-6		
Multiport Fuel Injection (MFI) <2.4L>.....	13A-6		
Parking Brake.....	36-2		
Power Steering.....	37-5		
Power Window.....	42-27		
Rear Axle.....	27-2		
Rear Suspension.....	34-3		
Rear Washer.....	51-20		
Rear Wiper.....	51-20		
Seat Belt.....	52A-3		
SRS Air Bag.....	52B-29		
Starting System.....	16-24		
Sunroof.....	42-98		
SWS.....	54B-10		
Tire.....	31-2		
Traction Control System (TCL).....	35C-4		
Trouble Code, ABS.....	35B-6		
Wheel.....	31-2		
Window Glass.....	42-14		
Differential <F4A4B>.....	23B-63		
Differential <F5M42>.....	22B-48		
Differential <F6MBA>.....	22C-55		
Differential			
Disassembly and Assembly <F5A5A>.....	23C-72		
Disassembly and Assembly <F4A4B>.....	23B-63		
Direct Planetary Carrier.....	23C-68		
Disc Brake			
Pad Wear Check.....	00-65		
Disc Brake Pad			
Check and Adjustment.....	35A-19		
Disc Brake Rotor			
Check.....	35A-21		
Disk Brake.....	35A-30		
Dome Light.....	54A-145		
Dome Light			
Circuit Diagram.....	90-124		
Door <Removal and installation>.....	42-68		
Door.....	42-26		
Door			
Diagnosis.....	42-49		
Glass and Regulator.....	42-70		
Handle and Latch.....	42-72		
Mirror.....	51-27		
Mirror <Removal and installation>.....	51-43		
Opening Weather-strip.....	42-78		
Outside Handle Play Adjustment.....	42-66		
Switch Check.....	42-69		
Door Ajar Warning Tone Alarm			
Circuit Diagram			
A/T.....	90-376		
M/T.....	90-370		
Door Inside Handle			
Play Check.....	42-66		
Door Mirror Heater			
Circuit Diagram.....	90-248		
Door Trim.....	52A-34		
Door Trim			
Removal and Installation.....	52A-34		
Door Trims			
Disassembly and Assembly.....	52A-35		
Drive Belt			
Overhaul.....	11D-4		
Power Steering, Tension Check.....	37-21		
Tension Check and Adjustment <3.8 L>.....	11C-7		
Tension Check and Adjustment <2.4 L>.....	11A-8		
Drive Belts for Air Conditioning			
Check.....	00-52		
Drive Belts for Generator			
Check.....	00-52		
Drive Belts for Power Steering Pump			
Check.....	00-52		

Drive Plate			Manifold Vacuum <3.8 L>	11C-19
Overhaul <2.4 L>	11B-60		Oil Pan and Oil Screen	11C-43
Overhaul <3.8 L>	11D-58		Sealant <3.8 L>	11C-68
Drive Shaft Oil Seal	23B-70		Sealant <2.4 L>	11A-66
Drive Shaft Oil Seal			Tightening Specifications	11A-64
Disassembly and Assembly <F5A5A>	23C-80		Timing Belt <3.8 L>	11C-59
Disassembly and Assembly <F4A4B>	23B-70		Timing Belt <2.4 L>	11A-50
Driveshaft			Engine Control	17-3
BJ Boot Replacement	26-30		Engine Control Module <2.4 L>	13A-1214
Front Axle	26-14		Engine Control Module <3.8 L>	13B-1295
Driveshaft Boots			Engine Control System	
Check	00-66		Diagnosis	17-3
Drum			Engine Coolant	
Inspection	36-21		Change	00-63
Ducts	55A-215		Concentration Check	14-24
			Leak Check	14-21
			Replacement	14-22
			Engine Coolant Temperature Sensor	
			Check <2.4 L>	13A-1204
			Check <EGR system>	17-107
			Check <3.8 L>	13B-1285
			Check <Evaporative emission control system>	17-103
			Engine Cooling	
			Adhesive	14-43
			Diagnosis	14-4
			Sealant	14-43
			Engine Lubrication	
			Adhesive	12-7
			Sealant	12-7
			Tightening Specifications	12-7
			Engine Mounting	32-4
			Engine Oil	
			Change	00-57
			Check	12-3
			Replacement	12-3
			Engine Oil Control Valve	
			Check	13A-1208
			Engine Oil Filter	
			Change	00-58
			Replacement	12-4
			Engine Oil Pressure	
			Check	12-5
			Engine Overhaul	
			Adhesive <3.8 L>	11D-71
			Adhesive <2.4 L>	11B-72
			Sealant <2.4 L>	11B-72
			Sealant <3.8 L>	11D-71
			Tightening Specifications <2.4 L>	11B-67
			Tightening Specifications <3.8 L>	11D-65
			Engine Roll Stopper	32-9
			Equipment	
			Diagnosis <Defogger>	54A-231
			Diagnosis <Ignition switch>	54A-8
			Diagnosis <Horn>	54A-150
			ETACS	
			Enabling/Disabling the Answerback Function	42-91
			Evaporative Emission Canister	17-110
			Evaporative Emission Canister	
			Inspection	17-111
			Evaporative Emission Control System	17-98
			Evaporative Emission Control System	
			Check for Clogging	00-49
			Check for Leaks	00-49
			Purge Solenoid Check	17-102
			Evaporative Emission Purge Solenoid	
			Check <3.8 L>	13B-1289
			Check <2.4 L>	13A-1208

E

ECU Terminal				
Check <SWS>	54B-547			
Check <Multi-center display unit>	54A-256			
Check <ETACS-ECU>	54A-37			
EGR System	17-104			
EGR Valve				
Check <3.8 L>	13B-1289			
Check <2.4 L>	13A-1208			
Check	17-105			
Cleaning	17-107			
Electrical System				
Check	00E-13			
Electronic Brake-Force Distribution (EBD)				
Circuit Diagram				
VEHICLES WITH TRACTION CONTROL SYSTEM (TCL)	90-312			
VEHICLES WITHOUT TRACTION CONTROL SYSTEM (TCL)	90-306			
Element, Air Cleaner				
Replace	00-48			
Emission Control	17-90			
Emission Control System				
Diagnosis	17-90			
Emission Control System, Evaporative				
Check for Clogging	00-49			
Check for Leaks	00-49			
Engine				
Adhesive <3.8 L>	11C-68			
Adhesive <2.4 L>	11A-66			
Assembly <2.4 L>	11A-17			
Assembly <3.8 L>	11C-22			
Auto-tensioner	11A-8			
Camshaft Oil Seal	11C-30			
Compression Pressure <3.8 L>	11C-17			
Compression Pressure <2.4 L>	11A-14			
Crankshaft Front Oil Seal	11C-51			
Crankshaft Oil Seal <3.8 L>	11C-51			
Crankshaft Oil Seal <2.4 L>	11A-38			
Crankshaft Rear Oil Seal	11C-53			
Cylinder Head Gasket <2.4 L>	11A-42			
Cylinder Head Gasket <3.8 L>	11C-55			
Diagnosis <2.4 L>	11A-3			
Diagnosis <3.8 L>	11C-3			
Drive Belt <3.8 L>	11C-7			
Drive Belt <2.4 L>	11A-8			
Idle Mixture <3.8 L>	11C-16			
Idle Mixture <2.4 L>	11A-13			
Idle Speed <3.8 L>	11C-15			
Idle Speed <2.4 L>	11A-13			
Ignition Timing <2.4 L>	11A-12			
Ignition Timing <3.8 L>	11C-14			
Lash Adjuster	11C-19			
Manifold Vacuum <2.4 L>	11A-16			

Evaporative Emission Ventilation Solenoid			
Check <Engine and emission control system>.....	17-103		
Check <3.8 L>	13B-1289		
Check <2.4 L>	13A-1208		
Evaporator Unit	55A-194		
Evaporator Unit <Removal and installation>	55A-197		
Exhaust Manifold	15-17		
Overhaul <3.8 L>	11D-23		
Overhaul <2.4 L>	11B-9		
Exhaust Pipe	15-23		
Exhaust System			
Check	00-57		
Exterior			
Adhesive	51-47		
Diagnosis	51-10		
Sealant	51-47		
F			
Fan Control Module			
Check			
3.8L ENGINE	14-25		
Fan Control Relay			
Continuity Check	14-24		
Fastener Tightening Specifications	34-26		
Fender	42-10		
Filter			
Engine Oil, Change	00-58		
Flasher Timer	54B-348		
Floor Console	52A-28		
Fluid			
Automatic Transaxle, Fluid Level Check	00-60		
Flywheel			
Overhaul <2.4 L>	11B-60		
Overhaul <3.8 L>	11D-58		
Fog Light <SWS>	54B-378		
Fog Light <Chassis electrical>	54A-139		
Fog Light			
Aiming	54A-139		
Circuit Diagram	90-118		
Forgotten Key Prevention Function			
Circuit Diagram	90-358		
Front Axle			
Diagnosis	26-3		
Driveshaft	26-14		
Hub	26-9		
Front Axle Hub Assembly	26-9		
Front Axle Hub Assembly			
Inspection	26-12		
Front Combination Light	54A-137		
Front Door			
Fit Adjustment	42-56		
Front Fog Light	54A-141		
Front Impact Sensors	52B-402		
Front Seat	52A-39		
Front Seat Belt	52A-51		
Front Side Marker Light	54A-133		
Front Suspension			
Diagnosis	33-2		
Front Wheel Alignment			
Check and Adjustment	33-6		
Fuel Filler Lid	42-11		
Fuel Hose			
Check for Condition	00-48		
Fuel Level Sensor			
Check <Chassis electrical>	54A-129		
Check <Fuel supply>	13C-6		
Replacement	13C-6		
Fuel Pipe			
Check for Leaks	00-48		
Fuel Pressure Test <3.8 L>	13B-1280		
Fuel Pressure Test <2.4 L>	13A-1197		
Fuel Pump			
Connector Disconnection <3.8 L>	13B-1283		
Connector Disconnection <2.4 L>	13A-1200		
Operation Check <Fuel supply>	13C-6		
Operation Check <2.4 L>	13A-1200		
Operation Check <3.8 L>	13B-1283		
Fuel Pump Module			
Replacement	13C-6		
Fuel Pump Relay			
Continuity Check <3.8 L>	13B-1284		
Continuity Check <2.4 L>	13A-1203		
Fuel Pump System <3.8 L>	13B-1191		
Fuel Pump System <2.4 L>	13A-1110		
Fuel Supply			
Diagnosis	13C-2		
Fuel System			
Check for Leaks	00-48		
Fuel Tank	13C-9		
Fuel Tank			
Check for Leaks	00-48		
Fuel Tank Differential Pressure Sensor			
Check	17-103		
Fuel Tank Filler Tube			
Check for Leaks	00-48		
Fuel Tank Pressure Relief Valve	17-110		
Fuel Tank Pressure Relief Valve			
Inspection	17-111		
Fuse			
Check	00E-9		
Fuses Location	70-2		
Fusible Links Location	70-2		
G			
Garnishes	51-5		
Gauge			
Circuit Diagram			
A/T	90-154		
M/T	90-148		
Generator	11B-6		
Generator			
Assembly	16-14		
Output Current Test	16-8		
Output Line Voltage Drop Test	16-7		
Overhaul	11D-4		
Regulated Voltage Test	16-10		
Glove Box Light			
Circuit Diagram	90-132		
Ground Location	70-4		
Grounding Location	70-3		
H			
Hazard Warning Light			
Circuit Diagram	90-134		
Hazard Warning Switch	54A-147		
Hazard Warning Switch <Removal and installation>	54A-148		
Headlight <SWS>	54B-287		
Headlight <Removal and installation>	54A-137		
Headlight			
Aiming	54A-133		
Circuit Diagram	90-106		
Headlining	52A-37		
Heated Door Mirror			
Diagnosis	51-27		

Heated Seat			
Circuit Diagram.....		90-354	
Heater Core.....		55A-194	
Heater Core <Removal and installation>.....		55A-197	
Heater Unit <Removal and installation>.....		55A-197	
Heater Unit <Disassembly and assembly>.....		55A-198	
Heater Unit.....		55A-194	
High-Mounted Stoptlight.....		54A-147	
Hood <Removal and installation>.....		42-7	
Hood.....		42-4	
Hood			
Height Adjustment.....		42-6	
Hood Latch and Striker			
Alignment.....		42-6	
Horn.....		54A-150	
Horn			
Circuit Diagram.....		90-147	
Hose			
Vacuum, Routing.....		17-92	
Hoses			
Brake, Check.....		00-65	
Hub			
Front Axle.....		26-9	
Rear Axle.....		27-6	
Hub Bolt			
Replacement <Rear axle>.....		27-5	
Replacement <Front axle>.....		26-8	
Hub End Play			
Check.....		26-8	
Hydraulic Unit.....		35B-141	
Hydraulic Unit			
Check.....		35C-160	
Hydraulic Unit Check			
ABS.....		35B-138	
I			
Idle Mixture			
Check <3.8 L>.....		11C-16	
Check <2.4 L>.....		11A-13	
Idle Speed			
Check <2.4 L>.....		11A-13	
Check <3.8 L>.....		11C-15	
Ignition Circuit System <2.4 L>.....		13A-1136	
Ignition Circuit System <3.8 L>.....		13B-1217	
Ignition Coil.....		16-42	
Ignition Coil			
Check.....		16-40	
Ignition Key Hole Illumination Light			
Circuit Diagram.....		90-124	
Ignition Key Reminder Warning Buzzer			
Circuit Diagram.....		90-364	
Ignition Switch.....		54A-8	
Ignition System <2.4L>.....		11B-6	
Ignition System <Engine electrical>.....		16-38	
Ignition system			
A/T <2.4 L>.....		13A-1131	
A/T <3.8 L>.....		13B-1212	
M/T <2.4 L>.....		13A-1123	
M/T <3.8 L>.....		13B-1204	
Ignition System			
Circuit Diagram			
2.4L ENGINE-A/T.....		90-32	
2.4L ENGINE-M/T.....		90-30	
3.8L ENGINE-M/T.....		90-34	
3.8L ENGINE-A/T.....		90-36	
Overhaul.....		11D-9	
Ignition Timing			
Check <2.4 L>.....		11A-12	
Check <3.8 L>.....		11C-14	
Immobilizer System			
Circuit Diagram			
2.4L ENGINE-M/T.....		90-318	
2.4L ENGINE-A/T.....		90-324	
3.8L ENGINE-A/T.....		90-336	
3.8L ENGINE-M/T.....		90-330	
Diagnosis.....		54A-14	
Injector <3.8 L>.....		13B-1290	
Injector <2.4 L>.....		13A-1209	
Injector			
Check <2.4 L>.....		13A-1207	
Check <3.8 L>.....		13B-1288	
Input Shaft <F4A4B>.....		23B-50	
Input Shaft <F6MBA>.....		22C-25	
Input Shaft <F5M42>.....		22B-16	
Input Shaft			
Disassembly and Assembly <F4A4B>.....		23B-50	
Disassembly and Assembly <F5A5A>.....		23C-54	
Inspection.....		22B-22	
Inside Rear View Mirror.....		52A-38	
Inside Rear View Mirror			
Diagnosis.....		52A-3	
Inspection Terminal Location.....		70-6	
Instrument Panel.....		52A-21	
Instrument Panel Inspection.....		00E-7	
Intake Air Temperature Sensor			
Check <Engine and emission control>.....		17-103	
Check <3.8 L>.....		13B-1284	
Check <2.4 L>.....		13A-1203	
Intake and Exhaust			
Adhesive.....		15-27	
Diagnosis.....		15-2	
Sealant.....		15-27	
Intake Manifold <Intake and exhaust>.....		15-10	
Intake Manifold <2.4L>.....		11B-26	
Intake Manifold <3.8L>			
Overhaul.....		11D-19	
Intake Manifold Plenum <Intake and exhaust>.....		15-7	
Intake Manifold Plenum <3.8L>			
Overhaul.....		11D-6	
Interior Light.....		54B-397	
Interlock Switch			
Check and Adjustment.....		21A-11	
Operating Check.....		21A-10	
INVECS-II 4A/T			
Circuit Diagram			
2.4L ENGINE.....		90-86	
INVECS-II 5A/T			
Circuit Diagram			
3.8L ENGINE.....		90-96	
J			
Joint Connector.....		90-12	
Junction Block.....		90-10	
K			
Key Interlock Mechanism			
Check.....		23A-393	
Keyless Entry System <SWS>.....		54B-194	
Keyless Entry System <Body>			
Diagnosis.....		42-88	
Inspection.....		42-90	
Secret Code Registration.....		42-93	
Keyless Entry System Timer			
Lock Function Inspection.....		42-90	
Knock Sensor.....		16-47	
Knock Sensor			
Check.....		16-39	

Knuckle			
Inspection	27-8	Manifold Vacuum	
Rear Axle	27-7	Check <3.8L>	11C-19
		Check <2.4L>	11A-16
		Manual A/C	
		Diagnosis	55A-6
		Manual Transaxle	
		Diagnosis	22A-5
		Manual Transaxle	
		Oil Level Check	00-59
		Manual Transaxle Overhaul	
		Adhesive <F5M42>	22B-52
		Adhesive <F6MBA>	22C-58
		Sealant <F5M42>	22B-52
		Sealant <F6MBA>	22C-58
		Mark	51-25
		Mass Airflow Sensor	
		Check <EGR system>	17-107
		Check <Evaporative emission control system>	17-102
		Master Cylinder	35A-27
		Master Cylinder	
		Function Check	35A-24
		Master Cylinder Assembly	35A-27
		Meter	
		Circuit Diagram	
		A/T	90-154
		M/T	90-148
		MFI	
		Adhesive <2.4 L>	13A-1217
		Adhesive <3.8 L>	13B-1299
		Sealant <3.8 L>	13B-1299
		Sealant <2.4 L>	13A-1217
		Tightening Specifications <2.4 L>	13A-1215
		Tightening Specifications <3.8 L>	13B-1297
		Tightening Specifications <2.4 L>	13A-1215
		Tightening Specifications <3.8 L>	13B-1297
		MFI System	
		Circuit Diagram	
		2.4L ENGINE-A/T	90-52
		2.4L ENGINE-M/T	90-42
		3.8L ENGINE-A/T	90-72
		3.8L ENGINE-M/T	90-62
		Mirror	
		Door <Removal and installation>	51-43
		Door	51-27
		Remote Controlled, Circuit Diagram	90-250
		Moldings	51-5
		Motor	55A-201
		Mounting	
		Engine	32-4
		Transaxle	32-5
		Multi Center Display	
		Circuit Diagram	90-266
		Multi-Center Display <Removal and installation>	54A-261
		Multi-Center Display	54A-234
		Multiport Fuel Injection	
		Diagnosis <2.4 L>	13A-6
		Diagnosis <3.8 L>	13B-6
		Multiport Fuel Injection Relay	
		Continuity Check <3.8 L>	13B-1283
		Continuity Check <2.4 L>	13A-1202
		O	
		Oil	
		Engine, Change	00-57
		Engine, Check	12-3
		Engine, Replacement	12-3
		Oil Cooler	
		Flow Check	23A-386

Oil Filter			
Engine, Replacement	12-4		
Oil Pan.....	11A-35		
Oil Pan			
Inspection	11A-37		
Overhaul <2.4 L>.....	11B-40		
Overhaul <3.8 L>.....	11D-42		
Oil Pan and Oil Screen.....	11C-43		
Oil Pressure			
Engine, Check	12-5		
Oil Pump.....	23B-49		
Oil Pump			
Disassembly and Assembly <F4A4B>	23B-49		
Disassembly and Assembly <F5A5A>	23C-53		
Overhaul <2.4 L>.....	11B-40		
Overhaul <3.8 L>.....	11D-42		
Power Steering	37-56		
Power Steering, Pressure Test	37-23		
Oil seal			
Camshaft	11C-30		
Oil Seal			
Crankshaft <2.4 L>.....	11A-38		
Crankshaft <3.8 L>.....	11C-51		
Crankshaft Front.....	11C-51		
Crankshaft Rear	11C-53		
Other Parts.....	55B-192		
Output Shaft <F5M42>.....	22B-24		
Output Shaft <F6MBA>.....	22C-28		
Output Shaft <F4A4B>.....	23B-61		
Output Shaft			
Disassembly and Assembly.....	23B-61		
Inspection	22B-32		
Outside Air Temperature Sensor.....	55A-204		
Overdrive Clutch.....	23B-53		
Overdrive Clutch			
Disassembly and Assembly <F4A4B>	23B-53		
Disassembly and Assembly <F5A5A>	23C-57		
Oxygen Sensor			
Check <2.4 L>.....	13A-1204		
Check <3.8 L>.....	13B-1285		
P			
Parking Brake			
Cable	36-17		
Diagnosis.....	36-2		
Lever.....	36-16		
Lever Stroke Check and Adjustment	36-13		
Lining and Drum	36-18		
Lining Running-in.....	36-15		
Switch Check.....	36-14		
Parking Brake Lining			
Inspection	36-21		
PCV (Positive Crankcase Ventilation) System.....	17-96		
PCV (Positive Crankcase Ventilation) System			
Valve Check.....	17-98		
Piston			
Overhaul <2.4 L>.....	11B-51		
Overhaul <3.8 L>.....	11D-49		
Planetary Gear	23B-57		
Planetary Gear			
Disassembly and Assembly <F5A5A>	23C-64		
Disassembly and Assembly <F4A4B>	23B-57		
Position Light.....	54A-133		
Power Distribution System			
Circuit Diagram.....	90-22		
Power Seat			
Circuit Diagram.....	90-352		
Power Steering			
Bleeding.....	37-22		
Diagnosis.....	37-5		
Drive Belt Tension Check.....	37-21		
Fluid Level Check	37-21		
Fluid Replacement.....	37-22		
Hoses.....	37-59		
Oil Pump Assembly	37-56		
Oil Pump Pressure Test.....	37-23		
Pressure Switch Check.....	37-24		
Power Steering Diagnosis	37-5		
Power Steering Gear Box	37-34		
Power Steering Gear Box Assembly			
Inspection (Disassembly and Assembly).....	37-54		
Power Steering Linkage.....	37-34		
Power Steering Oil Pump Assembly			
Inspection	37-58		
Power Window			
Check.....	42-65		
Circuit Diagram	90-168		
Diagnosis.....	42-27		
Operating Current Check.....	42-64		
Relay Check	42-64		
Timer Function Check.....	42-64		
Power Windows.....	54B-158		
Powertrain Control Module <3.8 L>.....	13B-1295		
Powertrain Control Module <2.4 L>.....	13A-1214		
Printed-Heater Lines			
Check.....	54A-231		
Purge Control System			
Check.....	17-101		
R			
Radiator	14-26		
Radiator Cap			
Pressure Check	14-21		
Radiator Fan Relay			
Check			
2.4L ENGINE	14-24		
Rear Axle			
Diagnosis	27-2		
Hub	27-6		
Knuckle.....	27-7		
Wheel Bearing End Play Check.....	27-4		
Rear Combination Light.....	54A-143		
Rear Hub Rotary-Sliding Resistance			
Check.....	27-4		
Rear Seat	52A-49		
Rear Seat Belt	52A-53		
Rear Suspension			
Diagnosis	34-3		
Rear Suspension Crossmember	34-23		
Rear Washer.....	54B-265		
Rear Washer			
Diagnosis.....	51-20		
Rear Wheel Alignment			
Check and Adjustment.....	34-6		
Rear Window Defogger Switch.....	54A-233		
Rear Wiper	54B-265		
Rear Wiper			
Diagnosis.....	51-20		
Rear Wiper and Washer			
Inspection	51-23		
Reduction Brake Piston	23C-79		
Relay			
Check.....	00E-11		
Relay Location.....	70-21		
Remote Controlled Radio Switch			
VEHICLES WITH AUDIO AMPLIFIER	54A-224		

Replaceable Bulb			
Replacement <Headlight, front side marker light and position light>	54A-135		
Replacement <Fog light>	54A-140		
Reverse Clutch	23B-53		
Reverse Clutch			
Disassembly and Assembly <F5A5A>	23C-57		
Disassembly and Assembly <F4A4B>	23B-53		
Reverse Idler Gear	22B-35		
Revolution Pickup Sensor	55A-204		
RKE (Keyless Entry System)	42-88		
RKE (Keyless Entry System)			
Secret Code Registration	42-93		
Rocker Arm			
Overhaul <3.8 L>	11D-27		
Overhaul <2.4 L>	11B-30		
Roof Lid Glass			
Operation Check	42-100		
S			
Sealant			
Automatic Transaxle <F5A5A>	23C-86		
Automatic Transaxle <F4A4B>	23B-76		
Body	42-108		
Engine <3.8 L>	11C-68		
Engine <2.4 L>	11A-66		
Engine Cooling	14-43		
Engine Lubrication	12-7		
Engine Overhaul <2.4 L>	11B-72		
Engine Overhaul <3.8 L>	11D-71		
Exterior	51-47		
Intake and Exhaust	15-27		
Manual Transaxle Overhaul <F5M42>	22B-52		
Manual Transaxle Overhaul <F6MBA>	22C-58		
MFI <2.4 L>	13A-1217		
MFI <3.8 L>	13B-1299		
Steering	37-67		
Sealant Table	00-67		
Seat Belt			
Diagnosis	52A-3		
Seat Belt Pre-Tensioner			
Disposal Procedures	52B-432		
Seat Belt Tone Alarm			
Circuit Diagram	90-366		
Seat Belts With Pre-Tensioner	52B-424		
Seat Belts With Pre-Tensioner			
Check	52B-427		
Second Brake	23B-60		
Second Brake			
Disassembly and Assembly <F4A4B>	23B-60		
Disassembly and Assembly <F5A5A>	23C-67		
Select Lever <F5M42>	22B-37		
Select Lever <F6MBA>	22C-45		
Selector Lever			
Operation Check	23A-392		
Sensor			
Barometric Pressure, Check	17-102		
Camshaft Position	16-43		
Camshaft Position			
2.4L ENGINE	16-43		
3.8L ENGINE	16-44		
Camshaft Position, Check	16-41		
Crankangle, Check	16-42		
Crankshaft Position			
2.4L ENGINE	16-44		
3.8L ENGINE	16-45		
Crankshaft Position, Check <A/T>	23A-389		
Crankshaft Position, Check <Engine and emission control>	17-107		
Engine Coolant Temperature, Check <2.4 L>	13A-1204		
Engine Coolant Temperature, Check <Evaporative emission control system>	17-103		
Engine Coolant Temperature, Check <3.8 L>	13B-1285		
Engine Coolant Temperature, Check <EGR system>	17-107		
Fuel Tank Differential Pressure, Check	17-103		
Intake Air Temperature, Check <Evaporative emission control system>	17-103		
Intake Air Temperature, Check <2.4 L>	13A-1203		
Intake Air Temperature, Check <3.8 L>	13B-1284		
Knock	16-47		
Knock, Check	16-39		
Outside Air Temperature	55A-204		
Oxygen, Check <2.4 L>	13A-1204		
Oxygen, Check <3.8 L>	13B-1285		
Transmission Fluid Temperature, Check	23A-389		
Wheel Speed	35B-145		
Wheel Speed, Output Voltage Check	35B-136		
Sensor Location	70-8		
Shift Lock Mechanism			
Check	23A-393		
Shock Absorber	34-16		
Shock Absorber Assembly			
Disassembly and Assembly	34-17		
Side Air Dam	51-7		
Side Impact Sensor	52B-417		
Sight Glass (Refrigerant Level Test)	55A-185		
Snap Rings			
Adjustment <F6MBA>	22C-59		
Adjustment <F5M42>	22B-53		
Solenoid			
Evaporative Emission Purge, Check <2.4 L>	13A-1208		
Evaporative Emission Purge, Check <3.8 L>	13B-1289		
Evaporative Emission Ventilation, Check <3.8 L>	13B-1289		
Evaporative Emission Ventilation, Check <2.4 L>	13A-1208		
Solenoid Location	70-18		
Solenoid Valve			
Check	23A-390		
Solenoid Valve Location	70-18		
Spacers			
Adjustment <F6MBA>	22C-59		
Adjustment <F5M42>	22B-53		
Spark Plug			
Check and Adjustment	16-41		
Replace	00-49		
Test	16-41		
Speaker	54A-227		
Specifications	34-26		
Speedometer Check			
Check	54A-127		
Speedometer Gear	22B-36		
SRS			
Circuit Diagram	90-342		
SRS Air Bag			
Diagnosis	52B-29		
SRS Control Unit (SRS-ECU)	52B-405		
SRS Warning Light Check	52B-31		
Stabilizer Bar <Rear suspension>	34-21		
Stabilizer Bar <Front suspension>	33-20		
Starter Motor			
Assembly	16-27		
Starter Relay			
Check			
M/T	16-26		
Starting System	16-23		
Starting System			
Circuit Diagram			
A/T	90-29		
M/T	90-28		
Diagnosis	16-24		

