

A

A/C Switch.....	55-26-III	Auto Adjuster	
A/C Switch		Function Check.....	35A-29-II
Inspection.....	55-29-III	Auto-cruise Control.....	17-6-I
A/T Control Component.....	23A-332-II	Removal and Installation.....	17-81-I
A/T Key Interlock and Shift Lock Mechanism		Auto-cruise Control System	
Inspection.....	23A-352-II	Check at ECU Terminal.....	17-75-I
ABS		Circuit Diagram	
Actuator Test.....	35B-42-II	2.4L ENGINE-M/T.....	90-220-III
Circuit Diagram		2.4L ENGINE-A/T.....	90-224-III
Vehicles with TCL.....	90-240-III	3.0L ENGINE-A/T.....	90-232-III
Vehicles without TCL.....	90-236-III	3.0L ENGINE-M/T.....	90-228-III
ECU, Check at Terminal.....	35B-43-II	Component Check.....	17-78-I
ABS Bleeding.....	35B-45-II	Main Switch Check.....	17-77-I
Accelerator Cable		Trouble Code Diagnosis.....	17-7-I
Check and Adjustment.....	17-4-I	Auto-cruise Control System Diagnosis.....	17-7-I
Accelerator Cable and Pedal.....	17-5-I	Automatic Transaxle	
Accessory Socket.....	54A-90-III	Adhesive.....	23B-81-II
Accessory Socket		Adjusting Plate, Snap Ring and Spacers.....	23B-78-II
Circuit Diagram.....	90-219-III	Control Cable Adjustment.....	23A-340-II
Actuator Test Reference Table		Faulty Operation Prevention Mechanism.....	23A-351-II
MFI		Fluid Check.....	23A-335-II
2.4L ENGINE.....	13A-450-I	Fluid Level Check.....	00-49-I
3.0L ENGINE.....	13B-529-I	Fluid Replacement.....	23A-336-II
Adhesive		Key Interlock Mechanism Check.....	23A-344-II
Automatic Transaxle.....	23B-81-II	Sealant.....	23B-81-II
Body.....	42-159-II	Shift Lock Mechanism Check.....	23A-345-II
Engine		Transaxle Control.....	23A-346-II
2.4L ENGINE.....	11A-39-I	Valve Body Spring Identification.....	23B-77-II
3.0L ENGINE.....	11C-38-I	Automatic Transaxle Control Component	
Engine Lubrication.....	12-7-I	Check.....	23A-341-II
Engine Overhaul		Automatic Transaxle Diagnosis.....	23A-14-II
2.4L ENGINE.....	11B-67-I	Automatic Transaxle Fluid	
3.0L ENGINE.....	11D-63-I	Level Check.....	00-49-I
Exterior.....	51-28-II		
2.4L ENGINE.....	13A-493-I		
3.0L ENGINE.....	13A-493-I		
Steering.....	37A-47-II		
Adhesive Table.....	00-61-I		
Aero Parts.....	51-13-II		
Air Cleaner.....	15-5-I		
Air Cleaner Element			
Replace.....	00-38-I		
Air Conditioning			
Charging.....	55-21-III		
Compressor Drive Belt Adjustment.....	55-21-III		
Compressor Noise Check.....	55-24-III		
Condenser and Condenser Fan Motor.....	55-40-III		
ECU Terminal Check.....	55-18-III		
Idle-up Operation Check.....	55-26-III		
Magnetic Clutch Operation Inspection.....	55-36-III		
Magnetic Clutch On-vehicle Service.....	55-20-III		
Manual, Circuit Diagram			
2.4L ENGINE.....	90-174-III		
3.0L ENGINE.....	90-180-III		
Performance Test.....	55-22-III		
Power Relay Check.....	55-24-III		
Pressure Switch Check.....	55-21-III		
Receiver Drier Test.....	55-21-III		
Refrigerant Leak Repair.....	55-23-III		
Refrigerant Line.....	55-42-III		
Sight Glass Refrigerant Level Test.....	55-20-III		
Troubleshooting Hint.....	55-19-III		
Air Purifier Filter			
Replace.....	00-60-I		
Audio System			
Circuit Diagram			
Vehicles with Amplifier.....	90-208-III		
Vehicles without Amplifier.....	90-204-III		

B

Backup Light			
Circuit Diagram			
A/T.....	90-135-III		
M/T.....	90-134-III		
Back-Up Light.....	54A-81-III		
Balance Link.....	42-151-II		
Ball Joint Dust Cover Inspection			
Steering.....	37A-19-II		
Ball Joint Dust Cover Replacement			
Steering.....	37A-36-II		
Ball Joint Seals			
Check.....	00-54-I		
Basic Idle Speed			
Adjustment			
2.4L ENGINE.....	13A-474-I		
3.0L ENGINE.....	13B-552-I		
Battery.....	54A-8-III		
Battery			
Handling.....	00E-12-I		
Remedy for a Discharged Battery.....	35B-48-II		
Belt			
Water Pump and Generator Drive Belt Check.....	00-40-I		
Belt, Timing			
Replace.....	00-40-I		
BJ Boot			
Replacement.....	26-22-II		
Bleeding			
Brakes (Basic).....	35A-22-II		
Power Steering.....	37A-17-II		
Blower Assembly.....	55-30-III		
Body			
Adhesive.....	42-159-II		
Sealant.....	42-159-II		
Boots			

Driveshaft, Check	00-54-I	Operating Check.....	35A-21-II
Brake Bleeding	35C-39-II	Cigarette Lighter	54A-90-III
Brake Booster		Cigarette Lighter	
Basic Brakes.....	35A-32-II	Circuit Diagram	90-218-III
ABS	35B-49-II	Clutch	21B-2-II
Brake Booster		Clutch	
Operating Check.....	35A-20-II	Inspection	21B-6-II
Brake Disc		Clutch Bleeding.....	21A-8-II
Inside Diameter, Check	35A-29-II	Clutch Control	21A-11-II
Pad Wear Check	00-53-I	Clutch Control	
Runout Check and Correction		Inspection.....	21A-12-II
Front	35A-25-II	Clutch Diagnosis.....	21A-3-II
Rear	35A-26-II	Clutch Housing	22B-56-II
Thickness Check	35A-27-II	Clutch Master Cylinder Assembly	
Brake Drum		Inspection.....	21A-14-II
Inside Diameter, Check	35A-28-II	Clutch Pedal	21A-10-II
Brake Fluid Level Sensor Check.....	35A-22-II	Clutch Pedal	
Brake Hoses		Check and Adjustment.....	21A-7-II
Check	00-54-I	Inspection.....	21A-10-II
Brake Lining		Clutch Pedal Position Switch	
Thickness, Check	35A-28-II	Check	21A-8-II
Brake Lining and Brake Drum		Clutch Release Cylinder	21B-8-II
Contact, Check	35A-29-II	Clutch Release Cylinder	
Brake Pad		Inspection.....	21B-10-II
Check and Adjustment	35A-23-II	Compass	
Wear Check.....	00-53-I	Calibration.....	54A-210-III
Brake Pedal.....	35A-31-II	Compression Pressure	
Brake Pedal		2.4L ENGINE	11A-8-I
Check and Adjustment	35A-18-II	3.0L ENGINE	11C-8-I
Brake Rotor		Compressor (A/C)	
Disc, Check	35A-25-II	Noise Check	55-24-III
Brake Stoplight Switch Check	35A-19-II	Compressor Assembly	55-34-III
Bumper		Connecting Rod	
Front	51-2-II	Overhaul	
Rear.....	51-6-II	2.4L ENGINE	11B-48-I
		3.0L ENGINE	11D-45-I
		Connector Inspection.....	00E-2-I
		Control Housing.....	22B-53-II
		Control Relay	
		Check.....	23A-343-II
		Control Unit Location	70-16-III
		Convertible Top	42-112-II
		Convertible Top	
		Fit Adjustment.....	42-130-II
		Assembly	42-131-II
		Bypass Switch	42-152-II
		Bypass Switch	
		Check	42-152-II
		Control Module	42-157-II
		Diagnosis	42-112-II
		Switch	42-156-II
		Switch	
		Check	42-156-II
		Coolant	
		Engine, Change	00-52-I
		Cooling System	
		Circuit Diagram	
		2.4L ENGINE	90-76-III
		3.0L ENGINE	90-78-III
		Crankcase Ventilation System	
		Check.....	17-90-I
		Crankshaft	
		Overhaul	
		2.4L ENGINE	11B-55-I
		3.0L ENGINE	11D-53-I
		Crankshaft Front Oil Seal	
		2.4L ENGINE	11A-22-I
		3.0L ENGINE	11C-25-I
		Crankshaft Position Sensor	16-53-I
		Crankshaft Position Sensor	16-52-I
		Crankshaft Position Sensor	

C

Cable			
Accelerator	17-5-I		
Accelerator, Check and Adjustment	17-4-I		
Ignition, Replace.....	00-39-I		
Camshaft			
Overhaul			
2.4L ENGINE	11B-26-I		
3.0L ENGINE	11D-24-I		
Camshaft and Camshaft Oil Seal			
2.4L ENGINE	11A-17-I		
3.0L ENGINE	11C-17-I		
Camshaft Position Sensor.....	16-51-I		
Check, 2.4L	16-37-I		
Canister			
Evaporative Emission	17-102-I		
Catalytic Converter.....	17-105-I		
2.4L ENGINE.....	15-19-I		
3.0L ENGINE.....	15-21-I		
Center Message Display			
Circuit Diagram.....	90-214-III		
Centermember	32-9-II		
Central Door Locking System			
Circuit Diagram			
With Keyless Entry (With Theft-alarm).....	90-162-III		
With Keyless Entry (Without Theft-alarm).....	90-154-III		
Without Keyless Entry.....	90-150-III		
Charging System.....	16-3-I		
Charging System, Circuit Diagram			
A/T	90-34-III		
M/T.....	90-32-III		
Charging System Diagnosis	16-4-I		
Check Valve			

Check.....	23A-34-I	Opening Weatherstrip.....	42-83-II
Crankshaft Rear Oil Seal		Outside Handle Play Adjustment.....	42-69-II
2.4L ENGINE.....	11A-24-I	Switch Check.....	42-70-II
3.0L ENGINE.....	11C-27-I	Trim and Waterproof Film.....	42-71-II
Crossmember.....	32-11-II	Door Assembly.....	42-70-II
Crossmember Bushing		Door Mirror Control Switch	
Replacement.....	32-12-II	Continuity Check.....	51-27-II
Cylinder Block		Downshift Switch	
Overhaul		Check.....	23A-34-II
2.4L ENGINE.....	11B-55-I	Drive Belt	
3.0L ENGINE.....	11D-53-I	Overhaul.....	11D-4-I
Cylinder Head		Power Steering, Tension Check.....	37A-16-II
Overhaul.....	11B-31-I	Tension Check and Adjustment	
2.4L ENGINE.....	11D-31-I	2.4L ENGINE.....	11A-6-I
3.0L ENGINE.....	11D-31-I	3.0L ENGINE.....	11C-6-I
Cylinder Head Gasket.....	11C-29-I	Water Pump and Generator Drive Belt Check.....	00-40-I
2.4L ENGINE.....	11A-26-I	Drive Plate	
3.0L ENGINE.....	11C-29-I	Overhaul	

D

Diagnosis	
Auto-cruise Control System.....	17-7-I
Charging System.....	16-4-I
Emission Control System.....	17-83-I
Engine	
2.4L ENGINE.....	11A-3-I
3.0L ENGINE.....	11C-3-I
Engine Control System.....	17-3-I
Engine Cooling.....	14-2-I
Fuel Supply.....	13C-3-I
Intake and Exhaust.....	15-2-I
MFI	
2.4L ENGINE.....	13A-5-I
3.0L ENGINE.....	13B-4-I
Power Steering.....	37A-2-II
Rear Axle.....	27-2-II
Starting System.....	16-22-I
Trouble Code, ABS.....	35B-4-II
Trouble Code, MFI	
2.4L ENGINE.....	13A-5-I
3.0L ENGINE.....	13B-4-I
Differential	
A/T.....	23B-66-II
M/T.....	22B-67-II
Disc Brake	
Pad Wear Check.....	00-53-I
Disc Brake Assembly	
Front.....	35A-35-II
Rear.....	35A-42-II
Disc Brake Rotor	
Check.....	35A-25-II
Distributor Assembly.....	16-50-I
Distributor Cap	
Check	
3.0L.....	00-40-I
Distributor Rotor	
Check	
3.0L.....	00-40-I
Dome Light	
Circuit Diagram	
ECLIPSE.....	90-120-III
ECLIPSE SPYDER.....	90-124-III
Door.....	42-41-II
Door	
Fit Adjustment.....	42-64-II
Glass and Regulator.....	42-74-II
Handle and Latch.....	42-79-II
Inside Handle Play Adjustment.....	42-69-II
Mirror.....	51-26-II

2.4L ENGINE.....	11B-55-I
3.0L ENGINE.....	11D-53-I
Drive Shaft Oil Seal.....	23B-74-II
Drive Shaft Oil Seal	
Disassembly and Assembly.....	23B-74-II
Driveshaft	
BJ Boot Replacement.....	26-22-II
Front Axle.....	26-11-II
Driveshaft Boots	
Check.....	00-54-I
Dual Pressure Switch	
Check.....	23A-34-II

E

EGR	
Solenoid Check	
2.4L ENGINE.....	13A-485-I
3.0L ENGINE.....	13B-560-I
EGR solenoid	
Check	
2.4L ENGINE.....	13A-485-I
3.0L ENGINE.....	13B-560-I
EGR System.....	17-96-I
EGR System	
Check.....	17-98-I
Port Vacuum Check.....	17-100-I
Solenoid Check.....	17-100-I
Valve Check.....	17-99-I
Electric Remote Control Mirror Operation.....	51-27-II
Electrical System	
Check.....	00E-13-I
Element, Air Cleaner	
Replace.....	00-38-I
Emission Control.....	17-83-I
Emission Control System Diagnosis.....	17-83-I
Emission Control System, Evaporative	
Check for Clogging.....	00-38-I
Check for Leaks.....	00-38-I
Engine	
Adhesive	
2.4L ENGINE.....	11A-39-I
3.0L ENGINE.....	11C-38-I
Assembly	
2.4L ENGINE.....	11A-12-I
3.0L ENGINE.....	11C-12-I
Camshaft and Camshaft Oil Seal	
2.4L ENGINE.....	11A-17-I
3.0L ENGINE.....	11C-17-I
Compression Pressure	
2.4L ENGINE.....	11A-8-I
3.0L ENGINE.....	11C-8-I

Crankshaft Front Oil Seal				
2.4L ENGINE		11A-22-I		
3.0L ENGINE		11C-25-I		
Crankshaft Rear Oil Seal				
2.4L ENGINE		11A-24-I		
3.0L ENGINE		11C-27-I		
Cylinder Head Gasket				
2.4L ENGINE		11A-26-I		
3.0L ENGINE		11C-29-I		
Diagnosis				
2.4L ENGINE		11A-3-I		
3.0L ENGINE		11C-3-I		
Drive Belt				
2.4L ENGINE		11A-6-I		
3.0L ENGINE		11C-6-I		
Idle Mixture				
2.4L ENGINE		11A-7-I		
3.0L ENGINE		11C-6-I		
Idle Speed				
2.4L ENGINE		11A-8-I		
3.0L ENGINE		11C-7-I		
Ignition Timing				
2.4L ENGINE		11A-6-I		
3.0L ENGINE		11C-6-I		
Lash Adjuster				
2.4L ENGINE		11A-10-I		
3.0L ENGINE		11C-9-I		
Manifold Vacuum				
2.4L ENGINE		11A-9-I		
3.0L ENGINE		11C-9-I		
Sealant				
2.4L ENGINE		11A-39-I		
3.0L ENGINE		11C-38-I		
Tightening Specifications				
2.4L ENGINE		11A-38-I		
3.0L ENGINE		11C-37-I		
Timing Belt				
2.4L ENGINE		11A-31-I		
3.0L ENGINE		11C-32-I		
Engine Control.....		17-3-I		
Engine Control System Diagnosis.....		17-3-I		
Engine Coolant				
Change		00-52-I		
Concentration Check		14-18-I		
Leak Check.....		14-17-I		
Replacement		14-17-I		
Engine Coolant Temperature Gauge				
Resistance Check.....		54A-68-III		
Engine Coolant Temperature Sensor				
Check				
2.4L ENGINE		13A-479-I		
3.0L ENGINE		13B-556-I		
Engine Cooling Diagnosis		14-2-I		
Engine Diagnosis				
2.4L ENGINE.....		11A-3-I		
3.0L ENGINE.....		11C-3-I		
Engine Lubrication				
Tightening Specifications.....		12-7-I		
Engine Mounting		32-5-II		
Engine Mounting				
Inspection		32-6-II		
Engine Oil				
Change		00-47-I		
Check		12-3-I		
Replacement		12-3-I		
Engine Oil Filter				
Change		00-48-I		
Replacement		12-4-I		
Engine Oil Pressure				
Check		12-6-I		
Engine Overhaul				
Adhesive				
2.4L ENGINE				11B-67-I
3.0L ENGINE				11D-63-I
Sealant				
2.4L ENGINE				11B-67-I
3.0L ENGINE				11D-63-I
Tightening Specifications				
2.4L ENGINE				11B-62-I
3.0L ENGINE				11D-59-I
Engine Roll Stopper.....				32-9-II
ETACS				
Enabling/Disabling the Answerback Function.....				42-101-II
Evaporative Emission Canister.....				17-102-I
Evaporative Emission Control System				17-90-I
Evaporative Emission Control System				
Check for Clogging				00-38-I
Check for Leaks.....				00-38-I
Purge Solenoid Check.....				17-93-I
Evaporative Emission Purge Solenoid				
Check				
2.4L ENGINE				13A-485-I
3.0L ENGINE				13B-560-I
Evaporator Unit.....				55-30-III
Exhaust Manifold				
Overhaul				
2.4L ENGINE				11B-25-I
3.0L ENGINE				11D-23-I
Exhaust Manifold <2.4L>				15-15-I
Exhaust Manifold <3.0L>				15-17-I
Exhaust Pipe <2.4L>				15-19-I
Exhaust Pipe <3.0L>				15-21-I
Exhaust System				
Check.....				00-60-I
Exterior				
Adhesive.....				51-28-II
Sealant.....				51-28-II
F				
Fan Control Relay				
Continuity Check.....				14-18-I
Fan Controller				
Check.....				14-18-I
Fender				42-9-II
Filter				
Air Purifier, Replace				00-60-I
Engine Oil, Change.....				00-48-I
Fluid				
Automatic Transaxle, Fluid Level Check.....				00-49-I
Fluid Temperature Sensor				
Check.....				23A-342-II
Flywheel				
Overhaul				
2.4L ENGINE				11B-55-I
3.0L ENGINE				11D-53-I
Fog Light				
Circuit Diagram				90-116-III
Forgotten Key Prevention Function				
Circuit Diagram				90-258-III
Front Axle				
Driveshaft.....				26-11-II
Hub				26-7-II
Knuckle				26-10-II
Front Axle Hub Assembly				26-7-II
Front Axle Hub Assembly				
Inspection				26-9-II
Front Case.....				11B-37-I
Front Case				
Inspection				11B-46-I
Front Combination Light				54A-78-III

Front Roof Weatherstrip	42-154-II	Heater Control Assembly	
Front Seat Assembly		Inspection	55-29-III
Inspection (Disassembly and Assembly)	52A-22-III	Heater Core	55-30-III
Fuel Filler Lid	42-10-II	Heater Unit	55-30-III
Fuel Gauge		Hood	42-5-II
Resistance Check	54A-67-III	Removal and Installation	42-7-II
Fuel Gauge Unit		Horn	
Check	13C-10-I	Circuit Diagram	90-136-III
Fuel Hose		Hose	
Check for Condition	00-38-I	Vacuum, Routing	17-84-I
Fuel Pipe		Hoses	
Check for Leaks	00-38-I	Brake, Check	00-54-I
Fuel Pressure Test		Hub	
2.4L ENGINE	13A-475-I	Front Axle	26-7-II
3.0L ENGINE	13B-554-I	Rear Axle	27-5-II
Fuel Pump		Hub Bolt	
Connector Disconnection		Replacement	27-4-II
2.4L ENGINE	13A-478-I	Replacement	26-6-II
3.0L ENGINE	13B-556-I	Hub End Play	
Operation Check		Check	26-6-II
2.4L ENGINE	13A-478-I	Hydraulic Unit	35B-51-II
3.0L ENGINE	13B-556-I	Hydraulic Unit	
Fuel Pump Module	13C-10-I	Check	35C-39-II
Fuel Supply Diagnosis	13C-3-I	Hydraulic Unit Check	
Fuel System		ABS	35B-47-II
Check for Leaks	00-38-I		
Fuel Tank	13C-6-I	I	
Fuel Tank		Idle Mixture	
Check for Leaks	00-38-I	Check	
Fuel Tank Differential Pressure Sensor		2.4L ENGINE	11A-7-I
Check	13C-11-I	3.0L ENGINE	11C-6-I
Fuel Tank Filler Tube		Idle Speed	
Check for Leaks	00-38-I	Basic, Adjustment	
Fuel Tank Pressure Relief Valve	17-102-I	2.4L ENGINE	13A-474-I
Fuel Tank Pressure Relief Valve		3.0L ENGINE	13B-552-I
Inspection	17-103-I	Check	
Fuse		2.4L ENGINE	11A-8-I
Check	00E-11-I	3.0L ENGINE	11C-7-I
Fuses Location	70-2-III	Idle Speed Control Motor	
Fusible Links Location	70-2-III	2.4L ENGINE	13A-483-I
		3.0L ENGINE	13B-560-I
G		Ignition Cable	
Garnishes	51-8-II	Replace	00-39-I
Gauge		Ignition Coil	16-49-I
Circuit Diagram	90-138-III	Ignition Coil	
Generator	11B-6-I	Check	
Generator		2.4L	16-34-I
Assembly	16-14-I	3.0L	16-35-I
Output Current Test	16-8-I	Ignition Failure Sensor	
Output Line Voltage Drop Test	16-6-I	Check	
Overhaul	11D-4-I	2.4L	16-36-I
Regulated Voltage Test	16-10-I	Ignition Key Reminder Warning Buzzer	
Ground Location	70-4-III	Circuit Diagram	90-264-III
Grounding Location	70-8-III	Ignition System	16-32-I
		Ignition System	11B-6-I
H		Circuit Diagram	
Hazard Warning Light		2.4L ENGINE-M/T	90-28-III
Circuit Diagram	90-128-III	2.4L ENGINE-A/T	90-29-III
Headlight		3.0L ENGINE-A/T	90-31-III
Circuit Diagram	90-108-III	3.0L ENGINE-M/T	90-30-III
Headlight Relay		Overhaul	11D-8-I
Check	54A-74-III	Ignition Timing	
Headliner	42-150-II	Check	
Heater		2.4L ENGINE	11A-6-I
Blower	55-32-III	3.0L ENGINE	11C-6-I
Circuit Diagram	90-170-III	Immobilizer System	
Resistor	55-32-III	Circuit Diagram	
Heater Control Assembly	55-26-III	2.4L ENGINE-A/T	90-270-III
		2.4L ENGINE-M/T	90-268-III

Proportioning Valve Function Test	35A-21-II		
Purge Control System Check	17-92-I		
Q			
Quarter Window Glass	42-25-II		
Removal and Installation	42-40-II		
Quarter Window Glass Adjustment	42-38-II		
Water Leak	42-25-II		
Quarter Window Regulator Assembly	42-25-II		
Removal and Installation	42-40-II		
Quarter Window Regulator Motor	42-41-II		
R			
Radiator	14-19-I		
Radiator Cap Pressure Check	14-17-I		
Rear Axle Hub	27-5-II		
Knuckle	27-7-II		
Wheel Bearing End Play Check	27-4-II		
Rear Axle Diagnosis	27-2-II		
Rear Drum Brake	35A-49-II		
Rear Drum Brake Linings Wear and Leaks Check	00-53-I		
Rear Drum Brake Wheel Cylinder Assembly Disassembly and Assembly	35A-52-II		
Inspection	35A-53-II		
Rear Hub Rotary-Sliding Resistance Check	27-4-II		
Rear Suspension Assembly	34-6-II		
Rear Suspension Assembly Inspection	34-9-II		
Rear Wheel Cylinder Wear and Leaks Check	00-53-I		
Rear Wheel Cylinder Assembly	35A-51-II		
Rear Window Defogger Circuit Diagram ECLIPSE	90-200-III		
ECLIPSE SPYDER	90-202-III		
Rear Wiper and Washer Inspection	51-22-II		
Receiver Drier Test (A/C)	55-21-III		
Refrigerant Temperature Switch Check	55-36-III		
Relay Check	00E-10-I		
Relay Location	70-9-III		
Resistive Cord Inspection	16-36-I		
Reverse Clutch	23B-54-II		
Reverse Clutch Disassembly and Assembly	23B-54-II		
Reverse Idler Gear	22B-49-II		
Rheostat Circuit Diagram	90-279-III		
RKE (Keyless Entry System)	42-100-II		
RKE (Keyless Entry System) Secret Code Registration	42-103-II		
Transmitter Battery Replacement	42-100-II		
Rocker Arm Overhaul 2.4L ENGINE	11B-26-I		
3.0L ENGINE	11D-24-I		
		S	
Sealant Automatic Transaxle	23B-81-II		
Body	42-159-II		
Engine 2.4L ENGINE	11A-39-I		
3.0L ENGINE	11C-38-I		
Engine Lubrication	12-7-I		
Engine Overhaul 2.4L ENGINE	11B-67-I		
3.0L ENGINE	11D-63-I		
Exterior	51-28-II		
MFI 2.4L ENGINE	13A-493-I		
3.0L ENGINE	13A-493-I		
Steering	37A-47-II		
Sealant Table	00-61-I		
Seat Belt Tone Alarm Circuit Diagram	90-266-III		
Second Brake	23B-62-II		
Second Brake Disassembly and Assembly	23B-62-II		
Select Lever	22B-51-II		
Select Switch Check	23A-342-II		
Selector Lever	23A-349-II		
Selector Lever Operation Check	23A-344-II		
Sensor Camshaft Position	16-51-I		
Camshaft Position, Check 2.4L ENGINE	16-37-I		
Crankangle, Check 2.4L ENGINE	16-37-I		
3.0L ENGINE	16-37-I		
Crankshaft Position 2.4L ENGINE	16-52-I		
3.0L ENGINE	16-53-I		
Crankshaft Position, Check	23A-341-II		
Engine Coolant Temperature, Check 2.4L ENGINE	13A-479-I		
3.0L ENGINE	13B-556-I		
Fluid Temperature, Check	23A-342-II		
Fuel Tank Differential Pressure, Check	13C-11-I		
Ignition Failure, Check 2.4L ENGINE	16-36-I		
Intake Air Temperature, Check 2.4L ENGINE	13A-479-I		
3.0L ENGINE	13B-556-I		
Knock	16-54-I		
Oxygen, Check 2.4L ENGINE	13A-481-I		
3.0L ENGINE	13B-557-I		
Throttle Position, Adjustment 2.4L ENGINE	13A-473-I		
3.0L ENGINE	13B-552-I		
A/T	23A-339-II		
Throttle Position, Check 2.4L ENGINE	13A-480-I		
3.0L ENGINE	13B-557-I		
A/T	23A-341-II		
Vehicle Speed, Check	23A-342-II		
Wheel Speed	35B-53-II		
Wheel Speed, Output Voltage Check	35B-45-II		
Wheel Speed, Output Voltage Measurement	35C-39-II		
Sensor Location	70-10-III		
Shift Lever Assembly	22A-13-II		
Shift Lock Mechanism Check	23A-345-II		

Shock Absorber Assembly	34-17-II	Sunroof	42-104-II
Shock Absorber Assembly		Sunroof	
Disassembly and Assembly	34-19-II	Circuit Diagram	90-276-III
Inspection	34-18-II	Fit Adjustment	42-105-II
Sight Glass (Refrigerant Level Test)	55-20-III	Operation Check	42-105-II
Solenoid		Removal and Installation	42-108-II
EGR, Check		Water Test	42-105-II
2.4L ENGINE	13A-485-I	Switch	
3.0L ENGINE	13B-560-I	Check	00E-8-I
Emission Control	17-100-I	SWS	
Evaporative Emission Purge, Check		General Information	54B-2-III
2.4L ENGINE	13A-485-I	Trouble Code Diagnosis	54B-6-III
3.0L ENGINE	13B-560-I		
Solenoid Location	70-19-III	T	
Solenoid Valve		Taillight Switch	54A-79-III
Check	23A-343-II	Tension Pulley	55-34-III
Solenoid Valve Location	70-19-III	Theft-alarm System	
Spark Plug		Circuit Diagram	90-250-III
Replace	00-39-I	Thermostat	14-21-I
Test	16-36-I	Throttle Body	
Spark Plug Cable		Assembly	
Test	16-34-I	2.4L ENGINE	13A-488-I
Speedometer Gear		3.0L ENGINE	13B-563-I
2.4L ENGINE	22B-50-II	Cleaning	
3.0L ENGINE	23B-73-II	2.4L ENGINE	13A-472-I
Speedometer Gear		3.0L ENGINE	13B-551-I
Disassembly and Assembly	23B-73-II	Overhaul	11D-6-I
SRS		Throttle Body Assembly	
Circuit Diagram		Check	13B-566-I
Vehicles with Side Air Bag	90-246-III	Throttle Position Sensor	
Vehicles without Side Air Bag	90-244-III	Adjustment	
Maintenance	00-55-I	2.4L ENGINE	13A-473-I
Stabilizer Bar		3.0L ENGINE	13B-552-I
Front Suspension	33A-17-II	A/T	23A-339-II
Rear Suspension	34-22-II	Check	
Starter Motor		2.4L ENGINE	13A-480-I
Assembly	16-24-I	3.0L ENGINE	13B-557-I
Starter Relay		A/T	23A-341-II
Check	16-23-I	Tie Rod End	
Starting System	16-21-I	Steering, Ball Joint Breakaway Torque Check	37A-14-II
Starting System		Steering, Ball Joint Dust Cover Replacement	37A-36-II
Circuit Diagram		Tightening Specifications	
A/T	90-27-III	Automatic Transaxle Overhaul	23B-76-II
M/T	90-26-III	Basic Brakes	35A-55-II
Starting System Diagnosis	16-22-I	Charging System	16-56-I
Steering		Emission Control	17-108-I
Adhesive	37A-47-II	Engine	
Ball Joint Dust Cover Inspection	37A-19-II	2.4L ENGINE	11A-38-I
Sealant	37A-47-II	3.0L ENGINE	11C-37-I
Steering Gear Shaft Assembly		Engine Cooling	14-29-I
Inspection	37A-25-II	Engine Lubrication	12-7-I
Steering Linkage Seals		Engine Overhaul	
Check	00-54-I	2.4L ENGINE	11B-62-I
Steering Wheel		3.0L ENGINE	11D-59-I
Free Play Check	37A-13-II	Exterior	51-28-II
Stationary Steering Effort Check	37A-15-II	Front Axle	26-26-II
Steering Angle Check	37A-14-II	Fuel Supply	13C-11-I
Steering Wheel Return to Center Check	37A-16-II	MFI	
Steering Wheel and Shaft		2.4L ENGINE	13A-492-I
Assembly	37A-20-II	3.0L ENGINE	13B-567-I
Stop Light Switch		Parking Brake	36-12-II
Check	23A-342-II	Power Plant Mount	32-14-II
Stoplight		Rear Axle	27-8-II
Circuit Diagram	90-132-III	Steering	37A-45-II
Switch Check	35A-19-II	Wheel and Tire	31-7-II
Strut Assembly	33A-9-II	Tightening Torque	00-30-I
Inspection	33A-10-II	Timing Belt	
Strut Assembly		2.4	11A-31-I
Disassembly and Assembly	33A-10-II	3.0	11C-32-I
Inspection	33A-12-II		
Strut Tower Bar	42-11-II		

Timing Belt		
Overhaul		
2.4.....	11B-8-I	
3.0.....	11D-10-I	
Replace.....	00-40-I	
Timing Belt B.....	11A-35-I	
Tire.....	31-6-II	
Tire		
Diagnosis.....	31-2-II	
Inflation Pressure Check.....	31-6-II	
Rotation.....	00-60-I	
Wear Check.....	31-6-II	
Toe Control Arm.....	34-14-II	
Toe Control Arm		
Inspection.....	34-15-II	
Top Cover Assembly.....	42-147-II	
Top Stack		
Circuit Diagram.....	90-280-III	
Topstack Center Rail.....	42-139-II	
Topstack Center Rail		
Disassembly and Assembly.....	42-140-II	
Topstack Control Link Assembly.....	42-143-II	
Topstack Drive Motor.....	42-132-II	
Topstack Drive Motor		
Check.....	42-133-II	
Topstack Front Header Latch Receiver.....	42-153-II	
Topstack Front Rail.....	42-139-II	
Topstack Front Rail		
Disassembly and Assembly.....	42-140-II	
Topstack No.1 Bow.....	42-135-II	
Topstack No.2 Bow.....	42-136-II	
Topstack No.3 Bow.....	42-136-II	
Topstack No.4 Bow.....	42-137-II	
Topstack No.5 Bow.....	42-138-II	
Topstack Rear Rail.....	42-141-II	
Topstack Rear Rail		
Disassembly and Assembly.....	42-142-II	
Topstack Side Stay Pads.....	42-145-II	
Topstack Well.....	42-149-II	
Topstack Latch Assembly.....	42-134-II	
Topstack Rail Weatherstrip.....	42-155-II	
Torque Converter		
Stall Test.....	23A-29-II	
Trailing Arm.....	34-12-II	
Trailing Arm		
Inspection.....	34-13-II	
Transaxle.....	23B-11-II	
Transaxle		
Automatic, Fluid Level Check.....	00-49-I	
Control.....	23A-346-II	
Disassembly and Assembly.....	23B-11-II	
Transaxle (Transmission).....	22B-8-II	
Transaxle (Transmission)		
Inspection.....	22B-22-II	
Transaxle Assembly		
A/T.....	23A-353-II	
M/T.....	22A-14-II	
Transaxle Control		
A/T.....	23A-346-II	
M/T.....	22A-10-II	
Transaxle Control		
Inspection.....	23A-348-II	
Transaxle Mounting.....	32-7-II	
Transaxle Oil		
Level Check.....	22A-9-II	
Replacement.....	22A-9-II	
Transmission Case.....	22B-63-II	
Triple Pressure Switch (A/C Load)		
Check.....	23A-342-II	
Trunk Lid.....	42-93-II	
Trunk Lid		
Removal and Installation.....	42-95-II	
Trunk Lid Diagnosis.....	42-93-II	
Trunk Lid Latch		
Inspection.....	42-99-II	
Trunk Lid Lock Release Cable.....	42-98-II	
Trunk Lid Lock Release Handle.....	42-98-II	
Turn Signal Light		
Circuit Diagram.....	90-128-III	
U		
Underdrive Clutch.....	23B-52-II	
Underdrive Clutch		
Disassembly and Assembly.....	23B-52-II	
Universal Garage Door Opener		
Circuit Diagram.....	90-284-III	
Upshift Switch		
Check.....	23A-342-II	
V		
Vacuum Check		
EGR Port.....	17-100-I	
Vacuum Control Valve		
Check.....	17-99-I	
Vacuum Hose Routing.....	17-84-I	
Valve		
EGR System, Check.....	17-99-I	
Fuel Tank Pressure Relief.....	17-102-I	
Fuel Tank Pressure Relief, Inspection.....	17-103-I	
Proportioning.....	35A-54-II	
Proportioning, Function Test.....	35A-21-II	
Vacuum Control, Check.....	17-99-I	
Valve Body.....	23B-69-II	
Valve Body		
Disassembly and Assembly.....	23B-69-II	
Vehicle Identification.....	00-15-I	
Vehicle Identification Code Plate.....	00-17-I	
Vehicle Speed Sensor		
Check.....	23A-342-II	
Ventilators.....	55-44-III	
W		
Warning Light		
Circuit Diagram.....	90-140-III	
Washer Motor		
Front, Check.....	51-18-II	
Rear, Check.....	51-22-II	
Water Hose		
Overhaul.....	11D-20-I	
Removal and Installation.....	14-26-I	
Water Pipe.....	14-26-I	
Water Pump		
Overhaul.....	11D-20-I	
Removal and Installation.....	14-23-I	
Waterproof Film.....	42-91-II	
Wheel.....	31-6-II	
Wheel		
Balance Accuracy.....	31-3-II	
Diagnosis.....	31-2-II	
Runout Check.....	31-6-II	
Wheel Bearing End Play Check.....	27-4-II	
Wheel Cylinder Assembly		
Rear.....	35A-51-II	
Rear Drum Brake, Disassembly and Assembly.....	35A-52-II	
Rear Drum Brake, Inspection.....	35A-53-II	
Wheel Speed Sensor.....	35B-53-II	
Wheel Speed Sensor		
Output Voltage Check.....	35B-45-II	

Output Voltage Measurement.....	35C-39-II	Wiper and Washer	
Window Glass	42-12-II	Rear	51-19-II
Window Glass		Rear, Circuit Diagram	
Door, Adjustment.....	42-64-II	A/T	90-196-III
Quarter	42-19-II	M/T	90-192-III
Runchannel	42-83-II	Windshield	51-14-II
Windshield.....	42-13-II	Wiper and Washer Switch	
Windshield		Rear, Inspection.....	51-22-II
Wiper and Washer.....	51-14-II	Wiper Motor	
Windshield Wiper and Washer	51-15-II	Front, Check	51-18-II
Windshield Wiper and Washer		Rear, Check.....	51-22-II
Circuit Diagram.....	90-188-III		