

| A | | | |
|--|---------|--|---------|
| A/C Switch..... | 55-31 | 3.0L ENGINE-M/T..... | 90-290 |
| A/T Control Component..... | 23A-343 | 3.0L ENGINE-A/T..... | 90-294 |
| A/T Key Interlock and Shift Lock Mechanism | | Component Check..... | 17-83 |
| Inspection..... | 23A-365 | Main Switch Check..... | 17-81 |
| ABS | | Trouble Code Diagnosis..... | 17-8 |
| Actuator Test..... | 35B-43 | Auto-cruise Control System Diagnosis..... | 17-7 |
| Circuit Diagram | | Automatic Transaxle | |
| WITH TCL..... | 90-302 | Adhesive..... | 23B-85 |
| WITHOUT TCL..... | 90-298 | Adjusting Plate, Snap Ring and Spacers..... | 23B-82 |
| ECU, Check at Terminal..... | 35B-44 | Control Cable Adjustment..... | 23A-352 |
| ABS Bleeding..... | 35B-45 | Faulty Operation Prevention Mechanism..... | 23A-363 |
| Accelerator Cable | | Fluid Check..... | 23A-346 |
| Check and Adjustment..... | 17-5 | Fluid Level Check..... | 00-53 |
| Accelerator Cable and Pedal..... | 17-6 | Fluid Replacement..... | 23A-347 |
| Accessory Socket..... | 54A-126 | Key Interlock Mechanism Check..... | 23A-356 |
| Accessory Socket | | Sealant..... | 23B-85 |
| Circuit Diagram..... | 90-281 | Shift Lock Mechanism Check..... | 23A-357 |
| Adhesive | | Transaxle Control..... | 23A-358 |
| Automatic Transaxle..... | 23B-85 | Valve Body Spring Identification..... | 23B-81 |
| Body..... | 42-140 | Automatic Transaxle Control Component | |
| Engine..... | 11A-41 | Check..... | 23A-353 |
| Engine..... | 11C-43 | Automatic Transaxle Diagnosis..... | 23A-14 |
| Engine Lubrication..... | 12-6 | Automatic Transaxle Fluid | |
| Engine Overhaul..... | 11D-61 | Level Check..... | 00-53 |
| Engine Overhaul..... | 11B-68 | | |
| Exterior..... | 51-30 | B | |
| MFI..... | 13A-598 | Backup Light | |
| MFI..... | 13A-598 | Circuit Diagram | |
| Steering..... | 37A-48 | A/T..... | 90-167 |
| Adhesive Table..... | 00-65 | M/T..... | 90-166 |
| Aero Parts..... | 51-15 | Back-Up Light..... | 54A-118 |
| Air Cleaner..... | 15-6 | Back-Up Light..... | 54A-118 |
| Air Cleaner Element | | Balance Link..... | 42-132 |
| Replace..... | 00-42 | Ball Joint Dust Cover Inspection | |
| Air Conditioning | | Steering..... | 37A-20 |
| Charging..... | 55-26 | Ball Joint Dust Cover Replacement | |
| Compressor Drive Belt Adjustment..... | 55-26 | Steering..... | 37A-39 |
| Compressor Noise Check..... | 55-28 | Ball Joint Seals | |
| Condenser and Condenser Fan Motor..... | 55-50 | Check..... | 00-58 |
| ECU Terminal Check..... | 55-22 | Basic Idle Speed | |
| Idle-up Operation Check..... | 55-30 | Adjustment..... | 13A-577 |
| Magnetic Clutch Test..... | 55-24 | Adjustment..... | 13B-679 |
| Manual, Circuit Diagram | | Battery..... | 54A-8 |
| 2.4L ENGINE (ECLIPSE)..... | 90-212 | Battery..... | 54A-8 |
| 2.4L ENGINE (ECLIPSE SPYDER)..... | 90-220 | Handling..... | 00E-12 |
| 3.0L ENGINE (ECLIPSE SPYDER)..... | 90-234 | Remedy for a Discharged Battery..... | 35B-49 |
| 3.0L ENGINE (ECLIPSE)..... | 90-226 | Belt | |
| Performance Test..... | 55-26 | Water Pump and Generator Drive Belt Check..... | 00-44 |
| Pressure Switch Check..... | 55-25 | Belt, Timing | |
| Receiver Drier Test..... | 55-25 | Replace..... | 00-44 |
| Refrigerant Leak Repair..... | 55-28 | BJ Boot | |
| Refrigerant Line..... | 55-52 | Replacement..... | 26-22 |
| Sight Glass Refrigerant Level Test..... | 55-24 | Bleeding | |
| Troubleshooting Hint..... | 55-24 | Brakes (Basic)..... | 35A-21 |
| Audio System | | Power Steering..... | 37A-18 |
| Circuit Diagram | | Blower Assembly..... | 55-35 |
| WITH AMPLIFIER..... | 90-270 | Body | |
| WITHOUT AMPLIFIER..... | 90-266 | Adhesive..... | 42-140 |
| Auto Adjuster | | Sealant..... | 42-140 |
| Function Check | | Boots | |
| VEHICLES WITH REAR DRUM BRAKE..... | 35A-30 | Driveshaft, Check..... | 00-58 |
| Auto-cruise Control..... | 17-86 | Brake Bleeding..... | 35C-38 |
| Auto-cruise Control..... | 17-7 | Brake Booster..... | 35B-50 |
| Auto-cruise Control System | | Brake Booster..... | 35A-32 |
| Check at ECU Terminal..... | 17-78 | Brake Booster | |
| Circuit Diagram | | Operating Check..... | 35A-19 |
| 2.4L ENGINE-M/T..... | 90-282 | Brake Disc | |
| 2.4L ENGINE-A/T..... | 90-286 | Pad Wear Check..... | 00-57 |

| | | | |
|--------------------------------------|--------|--------------------------------------|---------|
| Runout Check and Correction | | Operating Check..... | 35A-20 |
| FRONT | 35A-25 | Cigarette Lighter | 54A-126 |
| REAR..... | 35A-26 | Cigarette Lighter | |
| Thickness Check | 35A-27 | Circuit Diagram | 90-280 |
| Brake Drum | | Clutch | 21B-2 |
| Inside Diameter, Check | | Clutch | |
| VEHICLES WITH REAR DISC BRAKE | 35A-30 | Inspection | 21B-6 |
| VEHICLES WITH REAR DRUM BRAKE | 35A-29 | Clutch Bleeding | 21A-8 |
| Brake Fluid Level Sensor Check | 35A-22 | Clutch Control | 21A-11 |
| Brake Hoses | | Clutch Control | |
| Check | 00-58 | Inspection | 21A-12 |
| Brake Lining | | Clutch Diagnosis..... | 21A-2 |
| Thickness, Check | | Clutch Housing | 22B-56 |
| VEHICLES WITH REAR DRUM BRAKE | 35A-28 | Clutch Housing | 22B-56 |
| Brake Lining and Brake Drum | | Clutch Master Assembly Cylinder | |
| Contact, Check | | Inspection | 21A-14 |
| VEHICLES WITH REAR DRUM BRAKE | 35A-29 | Clutch Pedal | 21A-10 |
| Brake Pad | | Clutch Pedal | |
| Check and Adjustment | 35A-22 | Check and Adjustment..... | 21A-7 |
| Wear Check..... | 00-57 | Inspection | 21A-10 |
| Brake Pedal..... | 35A-31 | Clutch Pedal Position Switch | |
| Brake Pedal | | Check..... | 21A-8 |
| Check and Adjustment | 35A-17 | Clutch Release Cylinder..... | 21B-8 |
| Brake Rotor | | Clutch Release Cylinder | |
| Disc, Check | 35A-24 | Inspection | 21B-10 |
| Brake Stoplight Switch Check | 35A-18 | Compression Pressure | |
| Bumper | | Check..... | 11A-8 |
| Front | 51-4 | Check..... | 11C-7 |
| Front | 51-3 | Compressor (A/C) | |
| Rear..... | 51-7 | Noise Check | 55-28 |
| Rear | 51-7 | Compressor Assembly | 55-44 |
| | | Connecting Rod | |
| | | Overhaul | 11D-44 |
| | | Overhaul | 11B-47 |
| | | Connector Inspection..... | 00E-2 |
| | | Control Housing | 22B-53 |
| | | Control Housing | 22B-53 |
| | | Control Relay | |
| | | Check..... | 23A-354 |
| | | Control Unit Location | 70-17 |
| | | Convertible Top..... | 42-94 |
| | | Convertible Top | |
| | | Fit Adjustment..... | 42-111 |
| | | Convertible Top Assembly | 42-112 |
| | | Convertible Top Bypass Switch | 42-133 |
| | | Convertible Top Control Module | 42-138 |
| | | Convertible Top Diagnosis..... | 42-94 |
| | | Convertible Top Switch | 42-137 |
| | | Coolant | |
| | | Engine, Change | 00-56 |
| | | Cooling System | |
| | | Circuit Diagram | |
| | | 2.4L ENGINE | 90-96 |
| | | 3.0L ENGINE | 90-98 |
| | | Crankcase Ventilation System | |
| | | Check..... | 17-97 |
| | | Crankshaft | |
| | | Overhaul | 11B-56 |
| | | Overhaul | 11D-51 |
| | | Crankshaft Front Oil Seal | 11A-24 |
| | | Crankshaft Front Oil Seal | 11C-30 |
| | | Crankshaft Front Oil Seal | 11A-24 |
| | | Crankshaft Front Oil Seal | 11C-30 |
| | | Crankshaft Position Sensor | 16-56 |
| | | Crankshaft Position Sensor | 16-55 |
| | | Crankshaft Position Sensor | |
| | | Check..... | 23A-353 |
| | | Crankshaft Rear Oil Seal | 11A-26 |
| | | Crankshaft Rear Oil Seal | 11C-32 |
| | | Crankshaft Rear Oil Seal | 11A-26 |
| | | Crankshaft Rear Oil Seal | 11C-32 |

C

| | | | |
|---|---------|--|--|
| Cable | | | |
| Accelerator | 17-6 | | |
| Accelerator, Check and Adjustment | 17-5 | | |
| Ignition, Replace..... | 00-43 | | |
| Compass | | | |
| Calibration | 54A-264 | | |
| Camshaft | | | |
| Overhaul | 11B-25 | | |
| Overhaul | 11D-24 | | |
| Overhaul | 11C-22 | | |
| Camshaft and Camshaft Oil Seal | 11A-19 | | |
| Camshaft and Camshaft Oil Seal | 16-54 | | |
| Camshaft Position Sensor | 16-54 | | |
| Camshaft Position Sensor | | | |
| Check | | | |
| 2.4L | 16-39 | | |
| Canister | | | |
| Evaporative Emission | 17-110 | | |
| Evaporative Emission | 17-110 | | |
| Catalytic Converter..... | 17-113 | | |
| Catalytic Converter..... | 17-113 | | |
| Catalytic Converter <2.4L>..... | 15-21 | | |
| Catalytic Converter <3.0L>..... | 15-22 | | |
| Centermember | 32-8 | | |
| Central Door Locking System | | | |
| Circuit Diagram | | | |
| WITH KEYLESS ENTRY SYSTEM | | | |
| (WITH THEFT-ALARM)..... | 90-200 | | |
| WITH KEYLESS ENTRY SYSTEM | | | |
| WITHOUT THEFT-ALARM)..... | 90-190 | | |
| WITHOUT KEYLESS ENTRY SYSTEM..... | 90-184 | | |
| Charging System..... | 16-3 | | |
| Charging System | | | |
| Circuit Diagram | | | |
| A/T | 90-34 | | |
| M/T..... | 90-32 | | |
| Charging System Diagnosis..... | 16-4 | | |
| Check Valve | | | |

Generator 11B-5
 Generator
 Assembly 16-14
 Output Current Test 16-8
 Output Line Voltage Drop Test 16-6
 Overhaul 11D-4
 Regulated Voltage Test 16-10
 Glove Box Light
 Circuit Diagram 90-156
 Ground Location 70-4
 Grounding Location 70-8

H

Hazard Warning Light
 Circuit Diagram 90-158
 Headlight
 Circuit Diagram 90-128
 Headliner 42-131
 Heater
 Blower 55-38
 Resistor 55-38
 Heater Control Assembly 55-31
 Heater Core 55-35
 Heater Unit 55-35
 Hood 42-5
 Hood 42-7
 Horn
 Circuit Diagram 90-168
 Hose
 Vacuum, Routing 17-89
 Hoses
 Brake, Check 00-58
 Hub
 Front Axle 26-7
 Rear Axle 27-6
 Hub Bolt
 Replacement 27-4
 Replacement 26-6
 Hub End Play
 Check 26-6
 Hydraulic Unit 35B-52
 Hydraulic Unit
 Check 35C-38
 Hydraulic Unit Check
 ABS 35B-47

I

Idle Mixture
 Check 11C-6
 Check 11A-7
 Idle Speed
 Basic, Adjustment 13B-679
 Basic, Adjustment 13A-577
 Check 11C-7
 Check 11A-7
 Idle Speed Control Motor
 Check 13A-588
 Check 13B-686
 Ignition Cable
 Replace 00-43
 Ignition Coil 16-52
 Ignition Coil
 Check
 2.4L 16-36
 3.0L 16-37
 Ignition Key Reminder Warning Buzzer
 Circuit Diagram 90-326
 Ignition System 16-34

Ignition System 11B-5
 Ignition System
 Circuit Diagram
 2.4L ENGINE-A/T 90-29
 2.4L ENGINE-M/T 90-28
 3.0L ENGINE-A/T 90-31
 3.0L ENGINE-M/T 90-30
 Overhaul 11D-9
 Ignition Timing
 Check 11A-6
 Check 11C-5
 Immobilizer System
 Circuit Diagram
 2.4L ENGINE-A/T 90-332
 2.4L ENGINE-M/T 90-330
 3.0L ENGINE-A/T 90-336
 3.0L ENGINE-M/T 90-334
 Injector 13B-687
 Injector 13A-590
 Injector
 Check 13A-587
 Check 13B-686
 Input Shaft 22B-23
 Input Shaft 23B-57
 Input Shaft
 Disassembly and Assembly 23B-57
 Inspection 22B-30
 Inspection Terminal Location 70-3
 Instrument Panel Inspection 00E-7
 Intake Air Temperature Sensor
 Check 13A-583
 Check 13B-682
 Intake and Exhaust Diagnosis 15-2
 Intake Manifold 11B-21
 Intake Manifold
 Overhaul 11D-19
 Intake Manifold <2.4l> 15-12
 Intake Manifold <3.0l> 15-15
 Intake Manifold Plenum 15-7
 Intake Manifold Plenum
 Overhaul 11D-6
 Interlock Switch
 Check and Adjustment 21A-9
 Operating Check 21A-8
 INVECS-II 4A/T
 Circuit Diagram
 WITH SPORT MODE TYPE (2.4L ENGINE) 90-108
 WITH SPORT MODE TYPR (3.0L ENGINE) 90-118
 WITHOUT SPORT MODE TYPE 90-100

J

Joint Connector 90-12
 Junction Block 90-10

K

Key Interlock Mechanism
 Check 23A-356
 Keyless Entry System 42-81
 Keyless Entry System
 Secret Code Registration 42-84
 Transmitter Battery Replacement 42-81
 Knock Sensor 16-57
 Knuckle
 Front Axle 26-10
 Inspection 27-9
 Inspection 26-10
 Knuckle 26-10
 Rear Axle 27-8

L

| | | | |
|--------------------------------|--------|--|--|
| Lash Adjuster | | | |
| Check | 11A-10 | | |
| Check | 11C-9 | | |
| Lift Gate Window Glass | 42-23 | | |
| Liftgate | 42-67 | | |
| Liftgate | 42-69 | | |
| Liftgate Diagnosis | 42-67 | | |
| Liftgate Handle | 42-70 | | |
| Liftgate Latch | 42-70 | | |
| Liftgate Trim | 42-72 | | |
| Lighting Monitor Buzzer | | | |
| Circuit Diagram | 90-324 | | |
| Lower Arm | 33A-13 | | |
| Lower Arm | 34-14 | | |
| Lower Arm | | | |
| Inspection | 33A-14 | | |
| Inspection | 34-16 | | |
| Lower Arm Bushing | | | |
| Replacement | 33A-15 | | |
| Low-Reverse Brake | 23B-66 | | |
| Low-Reverse Brake | | | |
| Disassembly and Assembly | 23B-66 | | |

M

| | |
|---|--------|
| Magnetic Clutch Test (A/C) | 55-24 |
| Main Muffler <2.4L> | 15-21 |
| Main Muffler <3.0L> | 15-22 |
| Maintenance | |
| Air Cleaner Element | 00-42 |
| Automatic Transaxle Fluid | 00-53 |
| Ball Joint and Steering Linkage Seals | 00-58 |
| Brake Hoses | 00-58 |
| Disc Brake Pads | 00-57 |
| Drive Belt | 00-44 |
| Driveshaft Boots | 00-58 |
| Electrical System | 00E-13 |
| Engine Coolant | 00-56 |
| Engine Oil | 00-50 |
| Engine Oil Filter | 00-51 |
| Evaporative Emission Control System | 00-42 |
| Exhaust System | 00-64 |
| Fuel Hose | 00-42 |
| Fuel System | 00-42 |
| Ignition Cable | 00-43 |
| Spark Plug | 00-43 |
| SRS | 00-59 |
| Timing Belt | 00-44 |
| Manifold Vacuum | |
| Check | 11A-9 |
| Check | 11C-9 |
| Manual Transaxle (Transmission) | |
| Oil Level Check | 00-52 |
| Manual Transaxle Diagnosis | 22A-5 |
| Mark | 51-25 |
| Mark | 51-25 |
| Master Cylinder | 35B-50 |
| Master Cylinder | |
| Function Check | 35A-31 |
| Master Cylinder Assembly | 35A-32 |
| Master Cylinder Assembly | |
| Disassembly and Assembly | 35B-50 |
| Disassembly and Assembly | 35A-34 |
| Inspection | 35A-35 |
| Inspection | 35B-51 |
| Meter | |
| Circuit Diagram | 90-170 |
| MFI | |

| | |
|--------------------------------------|---------|
| Adhesive | 13A-598 |
| Adhesive | 13A-598 |
| Sealant | 13A-598 |
| Sealant | 13A-598 |
| Tightening Specification(s) | 13B-692 |
| Tightening Specification(s) | 13A-596 |
| MFI Diagnosis | 13A-5 |
| MFI Diagnosis | 13B-6 |
| MFI System | |
| Circuit Diagram | |
| 2.4L ENGINE-A/T | 90-46 |
| 2.4L ENGINE-M/T | 90-36 |
| 3.0L ENGINE (WITHOUT VIC) -A/T | 90-66 |
| 3.0L ENGINE (WITHOUT VIC) -M/T | 90-56 |
| 3.0L ENGINE (WITH VIC) -M/T | 90-76 |
| 3.0L ENGINE (WITH VIC) -A/T | 90-86 |
| Mirror | |
| Door | 51-28 |
| Door | 51-27 |
| Remote Controlled, Circuit Diagram | |
| ECLIPSE | 90-264 |
| ECLIPSE SPYDER | 90-265 |
| Module | |
| Fuel Pump | 13C-14 |
| Moldings | 51-10 |
| Moldings | 51-11 |
| Mounting | |
| Engine | 32-4 |
| Transaxle | 32-6 |
| Multi-Center Display | 54A-238 |

O

| | |
|-------------------------------------|---------|
| Oil | |
| Engine, Change | 00-50 |
| Engine, Check | 12-3 |
| Engine, Replacement | 12-3 |
| Oil Cooler | |
| Flow Check | 23A-350 |
| Oil Filter | |
| Engine, Replacement | 12-4 |
| Oil Pan | 11C-27 |
| Oil Pan | 11A-22 |
| Oil Pan | |
| Inspection | 11A-24 |
| Inspection | 11C-30 |
| Overhaul | 11D-37 |
| Oil Pressure | |
| Engine, Check | 12-5 |
| Oil Pump | 11B-36 |
| Oil Pump | 23B-56 |
| Oil Pump | |
| Disassembly and Assembly | 23B-56 |
| Inspection | 11B-45 |
| Overhaul | 11D-37 |
| Power Steering | 37A-40 |
| Power Steering, Pressure Test | 37A-19 |
| Oil Seal | |
| Crankshaft Front | 11A-24 |
| Crankshaft Front | 11A-24 |
| Crankshaft Front | 11C-30 |
| Crankshaft Front | 11C-30 |
| Crankshaft Rear | 11C-32 |
| Crankshaft Rear | 11A-26 |
| Crankshaft Rear | 11A-26 |
| Crankshaft Rear | 11C-32 |
| Output Shaft | 22B-33 |
| Output Shaft | 23B-68 |
| Output Shaft | |
| Disassembly and Assembly | 23B-68 |

| | |
|--|---------|
| Inspection | 22B-47 |
| Overdrive Clutch | 23B-59 |
| Overdrive Clutch Disassembly and Assembly | 23B-59 |
| Oxygen Sensor Check | 13A-585 |
| Check | 13B-684 |

P

| | |
|---|---------|
| Park/neutral Position Switch Adjustment | 23A-352 |
| Park/Neutral Position Switch Check | 23A-351 |
| Check | 23A-353 |
| Parking Brake Cable | 36-8 |
| Cable | 36-7 |
| Lever | 36-6 |
| Lever Stroke Check and Adjustment | 36-4 |
| Lining and Drum | 36-11 |
| Lining Running-in VEHICLES WITH DRUM-IN-DISC BRAKE | 36-5 |
| Switch Check | 36-5 |
| PCV (Positive Crankcase Ventilation) System | 17-95 |
| PCV (Positive Crankcase Ventilation) System | 17-95 |
| PCV (Positive Crankcase Ventilation) System Valve Check | 17-97 |
| Pedal Accelerator | 17-6 |
| Piston Overhaul | 11D-44 |
| Overhaul | 11B-47 |
| Planetary Gear | 23B-64 |
| Planetary Gear Disassembly and Assembly | 23B-64 |
| Power Distribution System Circuit Diagram | 90-20 |
| Power Seat Circuit Diagram | 90-310 |
| Power Steering Bleeding | 37A-18 |
| Drive Belt Tension Check | 37A-17 |
| Fluid Level Check | 37A-17 |
| Fluid Replacement | 37A-17 |
| Gear Box Assembly | 37A-25 |
| Hoses | 37A-41 |
| Oil Pump Assembly | 37A-40 |
| Oil Pump Pressure Test | 37A-19 |
| Pressure Switch Check | 37A-20 |
| Power Steering Diagnosis | 37A-3 |
| Power Steering Gear Box Assembly Inspection (Disassembly and Assembly) | 37A-39 |
| Power Steering Oil Pump Assembly Inspection | 37A-40 |
| Power Transistor Check 3.0L | 16-37 |
| Power Window Circuit Breaker Inspection | 42-52 |
| Circuit Diagram ECLIPSE | 90-176 |
| ECLIPSE SPYDER | 90-180 |
| Proportioning Valve | 35A-54 |
| Proportioning Valve Function Test | 35A-20 |
| Purge Control System Check | 17-100 |

Q

| | |
|--|-------|
| Quarter Window Glass | 42-39 |
| Quarter Window Glass | 42-26 |
| Quarter Window Glass Adjustment | 42-37 |
| Water Leak | 42-26 |
| Quarter Window Regulator Assembly | 42-26 |
| Quarter Window Regulator Assembly | 42-39 |

R

| | |
|---|--------|
| Radiator | 14-21 |
| Radiator Cap Pressure Check | 14-17 |
| Rear Axle Hub | 27-6 |
| Knuckle | 27-8 |
| Wheel Bearing End Play Check | 27-4 |
| Rear Axle Diagnosis | 27-2 |
| Rear Drum Brake | 35A-49 |
| Rear Drum Brake Linings Wear and Leaks Check | 00-57 |
| Rear Drum Brake Wheel Cylinder Assembly Disassembly and Assembly | 35A-52 |
| Inspection | 35A-53 |
| Rear Hub Rotary-Sliding Resistance Check | 27-4 |
| Rear Suspension Assembly | 34-6 |
| Rear Suspension Assembly Inspection | 34-9 |
| Rear Wheel Cylinder Wear and Leaks Check | 00-57 |
| Rear Wheel Cylinder Assembly | 35A-51 |
| Rear Window Defogger Circuit Diagram ECLIPSE | 90-260 |
| ECLIPSE SPYDER | 90-262 |
| Receiver Drier Test (A/C) | 55-25 |
| Relay Check | 00E-10 |
| Relay Location | 70-9 |
| Resistive Cord Inspection | 16-38 |
| Reverse Clutch | 23B-59 |
| Reverse Clutch Disassembly and Assembly | 23B-59 |
| Reverse Idler Gear | 22B-49 |
| Rheostat Circuit Diagram | 90-346 |
| RKE (Keyless Entry System) | 42-81 |
| RKE (Keyless Entry System) Secret Code Registration | 42-84 |
| Transmitter Battery Replacement | 42-81 |
| Rocker Arm Overhaul | 11D-24 |
| Overhaul | 11B-25 |

S

| | |
|--------------------------------------|---------|
| Sealant Automatic Transaxle | 23B-85 |
| Body | 42-140 |
| Engine | 11A-41 |
| Engine | 11C-43 |
| Engine Lubrication | 12-6 |
| Engine Overhaul | 11B-68 |
| Engine Overhaul | 11D-61 |
| Exterior | 51-30 |
| MFI | 13A-598 |

| | | | |
|---|---------|---|---------|
| MFI | 13A-598 | WITHOUT SIDE AIR BAG | 90-306 |
| Steering | 37A-48 | Maintenance | 00-59 |
| Sealant Table | 00-65 | Stabilizer Bar | 33A-16 |
| Seat Belt Tone Alarm | | Stabilizer Bar | 34-22 |
| Circuit Diagram | 90-328 | Stabilizer Bar | 34-22 |
| Second Brake | 23B-67 | Starter Motor | |
| Second Brake | | Assembly | 16-25 |
| Disassembly and Assembly | 23B-67 | Starter Relay | |
| Select Lever | 22B-51 | Check | 16-24 |
| Select Switch | | Starting System | 16-22 |
| Check | 23A-354 | Starting System | |
| Selector Lever | 23A-361 | Circuit Diagram | |
| Selector Lever | | A/T | 90-27 |
| Operation Check | 23A-356 | M/T | 90-26 |
| Sensor | | Starting System Diagnosis | 16-23 |
| Camshaft Position | 16-54 | Steering | |
| Camshaft Position, Check | | Adhesive | 37A-48 |
| 2.4L | 16-39 | Ball Joint Dust Cover Inspection | 37A-20 |
| Crankangle, Check | | Sealant | 37A-48 |
| 2.4L | 16-39 | Steering Gear Shaft Assembly | |
| 3.0L | 16-39 | Inspection | 37A-27 |
| Crankshaft Position | 16-55 | Steering Linkage Seals | |
| Crankshaft Position | 16-56 | Check | 00-58 |
| Crankshaft Position, Check | 23A-353 | Steering Wheel | |
| Engine Coolant Temperature, Check | 13B-682 | Free Play Check | 37A-14 |
| Engine Coolant Temperature, Check | 13A-583 | Stationary Steering Effort Check | 37A-16 |
| Fluid Temperature, Check | 23A-353 | Steering Angle Check | 37A-15 |
| Intake Air Temperature, Check | 13A-583 | Steering Wheel Return to Center Check | 37A-17 |
| Intake Air Temperature, Check | 13B-682 | Steering Wheel and Shaft | |
| Knock | 16-57 | Assembly | 37A-21 |
| Oxygen, Check | 13B-684 | Stop Light Switch | |
| Oxygen, Check | 13A-585 | Check | 23A-353 |
| Throttle Position, Adjustment | 13A-576 | Stoplight | |
| Throttle Position, Adjustment | 13B-677 | Circuit Diagram | 90-164 |
| Throttle Position, Adjustment | 23A-351 | Switch Check | 35A-18 |
| Throttle Position, Check | 23A-353 | Strut Assembly | 33A-9 |
| Throttle Position, Check | 13B-683 | Strut Assembly | |
| Throttle Position, Check | 13A-584 | Disassembly and Assembly | 33A-10 |
| Wheel Speed | 35B-55 | Inspection | 33A-12 |
| Wheel Speed, Output Voltage Check | 35B-46 | Inspection | 33A-9 |
| Wheel Speed, Output Voltage Measurement | 35C-38 | Strut Tower Bar | 42-11 |
| Sensor Location | 70-10 | Sunroof | 42-85 |
| Shift Lever Assembly | 22A-15 | Sunroof | 42-90 |
| Shift Lock Mechanism | | Sunroof | |
| Check | 23A-357 | Circuit Diagram | 90-338 |
| Shock Absorber Assembly | 34-17 | Fit Adjustment | 42-86 |
| Shock Absorber Assembly | | Operation Check | 42-87 |
| Disassembly and Assembly | 34-19 | Water Test | 42-86 |
| Inspection | 34-18 | Switch | |
| Sight Glass (Refrigerant Level Test) | 55-24 | Check | 00E-9 |
| Solenoid | | SWS | |
| EGR, Check | 13B-686 | General Information | 54B-2 |
| EGR, Check | 17-109 | General Information | 54B-6 |
| EGR, Check | 13A-589 | | |
| Evaporative Emission Purge, Check | 13B-686 | | |
| Evaporative Emission Purge, Check | 13A-589 | | |
| Solenoid Location | 70-20 | | |
| Solenoid Valve | | | |
| Check | 23A-354 | | |
| Solenoid Valve Location | 70-20 | | |
| Spark Plug | | | |
| Replace | 00-43 | | |
| Test | | | |
| 3.0L | 16-38 | | |
| Spark Plug Cable | | | |
| Test | | | |
| 3.0L | 16-36 | | |
| Speedometer Gear | 22B-50 | | |
| SRS | | | |
| Circuit Diagram | | | |
| WITH SIDE AIR BAG | 90-308 | | |

T

| | |
|--------------------------|---------|
| Tension Pulley | 55-44 |
| Theft-alarm System | |
| Circuit Diagram | 90-312 |
| Thermostat | 14-23 |
| Throttle Body | |
| Assembly | 13A-592 |
| Assembly | 13B-689 |
| Cleaning | 13A-575 |
| Cleaning | 13B-677 |
| Overhaul | 11D-6 |
| Throttle Position Sensor | |
| Adjustment | 13B-677 |
| Adjustment | 13A-576 |
| Adjustment | 23A-351 |

| | | | |
|---|---------|---|---------|
| Check | 13B-683 | Trailing Arm | 34-12 |
| Check | 13A-584 | Trailing Arm | |
| Check | 23A-353 | Inspection | 34-13 |
| Tie Rod End | | Transaxle | 23B-10 |
| Steering, Ball Joint Breakaway Torque Check | 37A-15 | Transaxle | |
| Steering, Ball Joint Dust Cover Replacement | 37A-39 | Automatic, Fluid Level Check | 00-53 |
| Tightening Specification(s) | | Control | 23A-358 |
| Automatic Transaxle Overhaul | 23B-80 | Disassembly and Assembly | 23B-10 |
| Basic Brakes | 35A-55 | Transaxle (Transmission) | 22B-8 |
| Charging System | 16-59 | Transaxle (Transmission) | |
| Emission Control | 17-116 | Inspection | 22B-22 |
| Engine | 11A-40 | Transaxle Assembly | 22A-16 |
| Engine | 11C-42 | Transaxle Assembly | 23A-366 |
| Engine Cooling | 14-31 | Transaxle Control | 23A-358 |
| Engine Lubrication | 12-6 | Transaxle Control | 22A-12 |
| Engine Overhaul | 11B-63 | Transaxle Control | |
| Engine Overhaul | 11D-57 | Inspection | 23A-360 |
| Exterior | 51-30 | Transaxle Mounting | 32-6 |
| Front Axle | 26-25 | Transaxle Oil | |
| Fuel Supply | 13C-15 | Level Check | 22A-11 |
| MFI | 13A-596 | Replacement | 22A-11 |
| MFI | 13B-692 | Transmission Case | 22B-63 |
| Parking Brake | 36-12 | Triple Pressure Switch (A/C Load) | |
| Power Plant Mount | 32-12 | Check | 23A-354 |
| Rear Axle | 27-9 | Trunk Lid | 42-76 |
| Steering | 37A-46 | Trunk Lid | 42-74 |
| Wheel and Tire | 31-8 | Trunk Lid Diagnosis | 42-74 |
| Tightening Torque | 00-33 | Trunk Lid Lock Release Cable | 42-78 |
| Timing Belt | 11C-37 | Trunk Lid Lock Release Handle | 42-78 |
| Timing Belt | 11A-32 | Turn Signal Light | |
| Timing Belt | | Circuit Diagram | 90-158 |
| Overhaul | 11B-7 | | |
| Overhaul | 11D-11 | U | |
| Replace | 00-44 | Underdrive Clutch | 23B-57 |
| Timing Belt B | 11A-36 | Underdrive Clutch | |
| Tire | 31-7 | Disassembly and Assembly | 23B-57 |
| Tire | | Upshft Switch | |
| Diagnosis | 31-2 | Check | 23A-354 |
| Diagnosis | 31-2 | | |
| Inflation Pressure Check | 31-7 | V | |
| Rotation | 00-65 | Vacuum Check | |
| Wear Check | 31-7 | EGR Port | 17-108 |
| Toe Control Arm | 34-14 | Vacuum Control Valve | |
| Toe Control Arm | | Check | 17-107 |
| Inspection | 34-16 | Vacuum Hose Routing | 17-89 |
| Top Cover Assembly | 42-128 | Valve | |
| Top Stack | | EGR System, Check | 17-107 |
| Circuit Diagram | 90-340 | Fuel Tank Pressure Relief | 17-110 |
| Topstack Center Rail | 42-120 | Fuel Tank Pressure Relief | 17-110 |
| Topstack Center Rail | | Fuel Tank Pressure Relief, Inspection | 17-111 |
| Disassembly and Assembly | 42-121 | Proportioning | 35A-54 |
| Topstack Control Link Assembly | 42-124 | Proportioning, Function Test | 35A-20 |
| Topstack Drive Motor | 42-114 | Vacuum Control, Check | 17-107 |
| Topstack Front Header Latch Receiver | 42-134 | Valve Body | 23B-74 |
| Topstack Front Rail | 42-120 | Valve Body | |
| Topstack Front Rail | | Disassembly and Assembly | 23B-74 |
| Disassembly and Assembly | 42-121 | Vanity Mirror Light | |
| Topstack No.1 Bow | 42-116 | Circuit Diagram | 90-157 |
| Topstack No.2 Bow | 42-117 | Vehicle Identification | 00-16 |
| Topstack No.3 Bow | 42-117 | Vehicle Identification | 00-16 |
| Topstack No.4 Bow | 42-118 | Vehicle Identification Code Plate | 00-18 |
| Topstack No.5 Bow | 42-119 | Ventilators | 55-54 |
| Topstack Rear Rail | 42-122 | | |
| Topstack Rear Rail | | W | |
| Disassembly and Assembly | 42-123 | Warning Light | |
| Topstack Side Stay Pads | 42-126 | Circuit Diagram | 90-174 |
| Topstack Well | 42-130 | Water Hose | 11D-21 |
| Topstak Latch Assembly | 42-115 | | |
| Topstak Rail Weatherstrip | 42-136 | | |
| Torque Converter | | | |
| Stall Test | 23A-25 | | |

| | |
|--|--------|
| Water Hose..... | 14-28 |
| Water Pipe..... | 14-28 |
| Water Pump..... | 14-25 |
| Water Pump..... | 11D-21 |
| Waterproof Film..... | 42-72 |
| Wheel..... | 31-7 |
| Wheel | |
| Balance Accuracy..... | 31-3 |
| Diagnosis..... | 31-2 |
| Diagnosis..... | 31-2 |
| Runout Check..... | 31-7 |
| Wheel Bearing End Play Check..... | 27-4 |
| Wheel Cylinder Assembly | |
| Rear..... | 35A-51 |
| Rear Drum Brake, Disassembly and Assembly..... | 35A-52 |
| Rear Drum Brake, Inspection..... | 35A-53 |
| Wheel Speed Sensor..... | 35B-55 |
| Wheel Speed Sensor | |
| Output Voltage Check..... | 35B-46 |
| Output Voltage Measurement..... | 35C-38 |
| Window Glass..... | 42-13 |
| Window Glass..... | 42-12 |
| Window Glass | |
| Door, Adjustment..... | 42-47 |
| Quarter..... | 42-20 |
| Runchannel..... | 42-65 |
| Windshield..... | 42-14 |
| Windshield | |
| Wiper and Washer..... | 51-17 |
| Wiper and Washer..... | 51-17 |
| Wiper and Washer..... | 51-16 |
| Windshield Wiper and Washer..... | 51-17 |
| Windshield Wiper and Washer | |
| Circuit Diagram..... | 90-242 |
| Wiper and Washer | |
| Rear..... | 51-21 |
| Rear, Circuit Diagram | |
| A/T..... | 90-254 |
| M/T..... | 90-248 |
| Windshield..... | 51-16 |
| Windshield..... | 51-17 |