

A

A/C Switch.....	55-31
A/T Control Component.....	23A-343
A/T Key Interlock and Shift Lock Mechanism Inspection	23A-365
ABS	
Actuator Test.....	35B-43
Circuit Diagram	
WITH TCL.....	90-302
WITHOUT TCL	90-298
ECU, Check at Terminal	35B-44
ABS Bleeding	35B-45
Accelerator Cable	
Check and Adjustment	17-5
Accelerator Cable and Pedal.....	17-6
Accessory Socket.....	54A-126
Accessory Socket	
Circuit Diagram.....	90-281
Adhesive	
Automatic Transaxle.....	23B-85
Body	42-140
Engine	11A-41
Engine	11C-43
Engine Lubrication.....	12-6
Engine Overhaul.....	11D-61
Engine Overhaul.....	11B-68
Exterior	51-30
MFI	13A-598
MFI	37A-48
Steering	00-65
Adhesive Table.....	51-15
Aero Parts	15-6
Air Cleaner	
Air Cleaner Element	
Replace	00-42
Air Conditioning	
Charging.....	55-26
Compressor Drive Belt Adjustment	55-26
Compressor Noise Check.....	55-28
Condenser and Condenser Fan Motor	55-50
ECU Terminal Check	55-22
Idle-up Operation Check	55-30
Magnetic Clutch Test	55-24
Manual, Circuit Diagram	
2.4L ENGINE (ECLIPSE)	90-212
2.4L ENGINE (ECLIPSE SPYDER).....	90-220
3.0L ENGINE (ECLIPSE SPYDER).....	90-234
3.0L ENGINE (ECLIPSE)	90-226
Performance Test	55-26
Pressure Switch Check	55-25
Receiver Drier Test	55-25
Refrigerant Leak Repair	55-28
Refrigerant Line	55-52
Sight Glass Refrigerant Level Test	55-24
Troubleshooting Hint	55-24
Audio System	
Circuit Diagram	
WITH AMPLIFIER.....	90-270
WITHOUT AMPLIFIER	90-266
Auto Adjuster	
Function Check	
VEHICLES WITH REAR DRUM BRAKE.....	35A-30
Auto-cruise Control.....	17-86
Auto-cruise Control.....	17-7
Auto-cruise Control System	
Check at ECU Terminal	17-78
Circuit Diagram	
2.4L ENGINE-M/T.....	90-282
2.4L ENGINE-A/T	90-286

3.0L ENGINE-M/T	90-290
3.0L ENGINE-A/T	90-294
Component Check	17-83
Main Switch Check	17-81
Trouble Code Diagnosis	17-8
Auto-cruise Control System Diagnosis	17-7
Automatic Transaxle	
Adhesive	23B-85
Adjusting Plate, Snap Ring and Spacers	23B-82
Control Cable Adjustment.....	23A-352
Faulty Operation Prevention Mechanism	23A-363
Fluid Check	23A-346
Fluid Level Check	00-53
Fluid Replacement.....	23A-347
Key Interlock Mechanism Check	23A-356
Sealant.....	23B-85
Shift Lock Mechanism Check	23A-357
Transaxle Control.....	23A-358
Valve Body Spring Identification	23B-81
Automatic Transaxle Control Component	
Check.....	23A-353
Automatic Transaxle Diagnosis	23A-14
Automatic Transaxle Fluid	
Level Check	00-53
	B
Backup Light	
Circuit Diagram	
A/T	90-167
M/T	90-166
Back-Up Light	54A-118
Back-Up Light	54A-118
Balance Link	42-132
Ball Joint Dust Cover Inspection	
Steering.....	37A-20
Ball Joint Dust Cover Replacement	
Steering.....	37A-39
Ball Joint Seals	
Check.....	00-58
Basic Idle Speed	
Adjustment.....	13A-577
Adjustment.....	13B-679
Battery	54A-8
Battery	54A-8
Battery	
Handling.....	00E-12
Remedy for a Discharged Battery	35B-49
Belt	
Water Pump and Generator Drive Belt Check	00-44
Belt, Timing	
Replace.....	00-44
BJ Boot	
Replacement.....	26-22
Bleeding	
Brakes (Basic)	35A-21
Power Steering	37A-18
Blower Assembly	55-35
Body	
Adhesive	42-140
Sealant.....	42-140
Boots	
Driveshaft, Check	00-58
Brake Bleeding	35C-38
Brake Booster	35B-50
Brake Booster	35A-32
Brake Booster	
Operating Check	35A-19
Brake Disc	
Pad Wear Check	00-57

Runout Check and Correction		Operating Check.....	35A-20
FRONT	35A-25	Cigarette Lighter.....	54A-126
REAR.....	35A-26	Cigarette Lighter	
Thickness Check	35A-27	Circuit Diagram	90-280
Brake Drum		Clutch	21B-2
Inside Diameter, Check		Clutch	
VEHICLES WITH REAR DISC BRAKE	35A-30	Inspection	21B-6
VEHICLES WITH REAR DRUM BRAKE.....	35A-29	Clutch Bleeding	21A-8
Brake Fluid Level Sensor Check	35A-22	Clutch Control.....	21A-11
Brake Hoses		Clutch Control	
Check	00-58	Inspection	21A-12
Brake Lining		Clutch Diagnosis.....	21A-2
Thickness, Check		Clutch Housing	22B-56
VEHICLES WITH REAR DRUM BRAKE.....	35A-28	Clutch Housing	22B-56
Brake Lining and Brake Drum		Clutch Master Assembly Cylinder	
Contact, Check		Inspection	21A-14
VEHICLES WITH REAR DRUM BRAKE.....	35A-29	Clutch Pedal	21A-10
Brake Pad		Clutch Pedal	
Check and Adjustment	35A-22	Check and Adjustment.....	21A-7
Wear Check.....	00-57	Inspection	21A-10
Brake Pedal.....	35A-31	Clutch Pedal Position Switch	
Brake Pedal		Check.....	21A-8
Check and Adjustment	35A-17	Clutch Release Cylinder	21B-8
Brake Rotor		Clutch Release Cylinder	
Disc, Check	35A-24	Inspection	21B-10
Brake Stoplight Switch Check	35A-18	Compression Pressure	
Bumper		Check.....	11A-8
Front	51-4	Check.....	11C-7
Front	51-3	Compressor (A/C)	
Rear.....	51-7	Noise Check	55-28
Rear.....	51-7	Compressor Assembly	55-44
C			
Cable		Connecting Rod	
Accelerator	17-6	Overhaul	11D-44
Accelerator, Check and Adjustment	17-5	Overhaul	11B-47
Ignition, Replace.....	00-43	Connector Inspection.....	00E-2
Campass		Control Housing.....	22B-53
Calibration	54A-264	Control Housing.....	22B-53
Camshaft		Control Relay	
Overhaul	11B-25	Check.....	23A-354
Overhaul	11D-24	Control Unit Location	70-17
Camshaft and Camshaft Oil Seal	11C-22	Convertible Top	42-94
Camshaft and Camshaft Oil Seal	11A-19	Convertible Top	
Camshaft Position Sensor	16-54	Fit Adjustment.....	42-111
Camshaft Position Sensor		Convertible Top Assembly	42-112
Check	16-39	Convertible Top Bypass Switch	42-133
2.4L.....	17-110	Convertible Top Control Module	42-138
Canister		Convertible Top Diagnosis	42-94
Evaporative Emission.....	17-110	Convertible Top Switch	42-137
Evaporative Emission	17-110	Coolant	
Catalytic Converter	17-113	Engine, Change	00-56
Catalytic Converter	17-113	Cooling System	
Catalytic Converter <2.4L>.....	15-21	Circuit Diagram	
Catalytic Converter <3.0L>.....	15-22	2.4L ENGINE	90-96
Centermember	32-8	3.0L ENGINE	90-98
Central Door Locking System		Crankcase Ventilation System	
Circuit Diagram		Check.....	17-97
WITH KEYLESS ENTRY SYSTEM		Crankshaft	
(WITH THEFT-ALARM)	90-200	Overhaul	11B-56
WITH KEYLESS ENTRY SYSTEM		Overhaul	11D-51
WITHOUT THEFT-ALARM).....	90-190	Crankshaft Front Oil Seal	11A-24
WITHOUT KEYLESS ENTRY SYSTEM.....	90-184	Crankshaft Front Oil Seal	11C-30
Charging System.....		Crankshaft Front Oil Seal	11A-24
Charging System		Crankshaft Front Oil Seal	11C-30
Circuit Diagram		Crankshaft Position Sensor	16-56
A/T	90-34	Crankshaft Position Sensor	16-55
M/T.....	90-32	Crankshaft Position Sensor	
Charging System Diagnosis	16-4	Check.....	23A-353
Check Valve		Crankshaft Rear Oil Seal	11A-26
		Crankshaft Rear Oil Seal	11C-32
		Crankshaft Rear Oil Seal	11A-26
		Crankshaft Rear Oil Seal	11C-32

Crossmember.....	32-10	Power Steering, Tension Check.....	37A-17
Crossmember Bushing		Tension Check and Adjustment.....	11A-6
Replacement	32-11	Tension Check and Adjustment.....	11C-5
Cylinder Block		Water Pump and Generator Drive Belt Check	00-44
Overhaul.....	11B-56	Drive Plate	11B-56
Overhaul.....	11D-51	Overhaul	11D-51
Cylinder Head		Overhaul	11D-51
Overhaul.....	11D-30	Drive Shaft Oil Seal	23B-78
Overhaul.....	11B-30	Drive Shaft Oil Seal	23B-78
Cylinder Head Gasket	11C-34	Disassembly and Assembly.....	23B-78
Cylinder Head Gasket	11A-28	Driveshaft	
		BJ Boot Replacement.....	26-22
		Front Axle	26-11
Diagnosis		Driveshaft Boots	
Auto-cruise Control System.....	17-7	Check.....	00-58
Charging System	16-4	Dual Pressure Switch	
Emission Control System	17-88	Check.....	23A-354
Engine	11C-2		
Engine	11A-2	E	
Engine Control System.....	17-4	EGR	
Engine Cooling	14-3	Solenoid Check.....	13B-686
Fuel Supply.....	13C-3	Solenoid Check.....	13A-589
Intake and Exhaust.....	15-2	EGR solenoid	
MFI	13B-6	Check.....	13A-589
MFI	13A-5	Check.....	13B-686
Power Steering	37A-3	EGR System.....	17-103
Rear Axle	27-2	EGR System.....	17-103
Starting System	16-23	EGR System	
Trouble Code, ABS.....	35B-4	Check.....	17-106
Differential	23B-70	Port Vacuum Check	17-108
Differential	22B-67	Solenoid Check.....	17-109
Differential		Valve Check.....	17-107
Disassembly and Assembly.....	23B-70	Electrical System	
Disc Brake		Check.....	00E-13
Pad Wear Check	00-57	Element, Air Cleaner	
Disc Brake Assembly		Replace.....	00-42
Front	35A-35	Emission Control	17-88
Rear.....	35A-43	Emission Control System Diagnosis.....	17-88
Disc Brake Rotor		Emission Control System, Evaporative	
Check	35A-24	Check for Clogging	00-42
Distributor		Check for Leaks.....	00-42
Assembly.....	16-53	Engine	
Distributor Assembly	16-53	Adhesive	11A-41
Distributor Cap		Adhesive	11C-43
Check	00-44	Assembly	11C-12
3.0L.....	00-44	Assembly	11A-12
Distributor Rotor		Camshaft and Camshaft Oil Seal	11C-22
Check	00-44	Camshaft and Camshaft Oil Seal	11A-19
3.0L.....	00-44	Compression Pressure	11A-8
Dome Light		Compression Pressure	11C-7
Circuit Diagram	90-144	Crankshaft Front Oil Seal	11C-30
ECLIPSE.....	90-150	Crankshaft Front Oil Seal	11A-24
ECLIPSE SPYDER.....	42-53	Crankshaft Rear Oil Seal	11A-26
Door.....	42-40	Crankshaft Rear Oil Seal	11C-32
Door.....		Cylinder Head Gasket.....	11C-34
Door		Cylinder Head Gasket.....	11A-28
Fit Adjustment.....	42-46	Diagnosis	11A-2
Glass and Regulator.....	42-57	Diagnosis	11C-2
Handle and Latch	42-62	Drive Belt	11C-5
Inside Handle Play Adjustment.....	42-52	Drive Belt	11A-6
Mirror	51-28	Idle Mixture	11A-7
Mirror	51-27	Idle Mixture	11C-6
Opening Weatherstrip.....	42-65	Idle Speed	11A-7
Outside Handle Play Adjustment.....	42-52	Idle Speed	11C-7
Trim and Waterproof Film	42-54	Ignition Timing.....	11A-6
Downshift Switch		Ignition Timing.....	11C-5
Check	23A-354	Lash Adjuster.....	11A-10
Drive Belt		Lash Adjuster.....	11C-9
Overhaul	11D-4	Manifold Vacuum	11A-9

Manifold Vacuum	11C-9	F																																																																																																					
Sealant	11C-43																																																																																																						
Sealant	11A-41																																																																																																						
Tightening Specification(s)	11A-40																																																																																																						
Tightening Specification(s)	11C-42																																																																																																						
Timing Belt.....	11A-32																																																																																																						
Timing Belt.....	11C-37																																																																																																						
Engine Control.....	17-4																																																																																																						
Engine Control System Diagnosis.....	17-4																																																																																																						
Engine Coolant	00-56																																																																																																						
Change	14-19																																																																																																						
Concentration Check	14-17																																																																																																						
Leak Check.....	14-18																																																																																																						
Replacement	13B-682																																																																																																						
Engine Coolant Temperature Sensor	13A-583																																																																																																						
Check	14-3																																																																																																						
Check	11A-2																																																																																																						
Engine Cooling Diagnosis	11C-2																																																																																																						
Engine Diagnosis	12-6																																																																																																						
Engine Diagnosis	32-4																																																																																																						
Engine Lubrication	32-5																																																																																																						
Tightening Specification(s)	Front Axle																																																																																																						
Engine Mounting	12-6																																																																																																						
Engine Mounting	32-4																																																																																																						
Inspection	Driveshaft.....																																																																																																						
Engine Oil	32-5																																																																																																						
Change	Hub																																																																																																						
Check	Knuckle																																																																																																						
Replacement	Front Axle Hub Assembly																																																																																																						
Engine Oil Filter	00-50																																																																																																						
Change	Front Axle Hub Assembly																																																																																																						
Replacement	Inspection																																																																																																						
Engine Oil Pressure	12-3																																																																																																						
Check	Front Case																																																																																																						
Engine Overhaul	12-3																																																																																																						
Adhesive	Front Case																																																																																																						
Adhesive	Inspection																																																																																																						
Sealant	Front Combination Light																																																																																																						
Sealant	Front Roof Weatherstrip																																																																																																						
Tightening Specification(s)	12-5																																																																																																						
Tightening Specification(s)	Front Seat Assembly																																																																																																						
Engine Roll Stopper.....	12-5																																																																																																						
ETACS	11D-61																																																																																																						
Enabling/Disabling the Answerback Function	Fuel Filler Lid																																																																																																						
Evaporative Emission Canister	11B-68																																																																																																						
Evaporative Emission Canister	Fuel Hose																																																																																																						
Evaporative Emission Control System	11D-61																																																																																																						
Evaporative Emission Control System	Check for Condition																																																																																																						
Evaporative Emission Control System	11B-68																																																																																																						
Check for Leaks	Fuel Pipe																																																																																																						
Evaporative Emission Control System	11D-57	Check for Leaks																																																																																																					
Check for Clogging	Front Pressure Test																																																																																																						
Check for Leaks	Front Pressure Test																																																																																																						
Purge Solenoid Check.....	11B-63																																																																																																						
Evaporative Emission Purge Solenoid	32-8																																																																																																						
Check	Fuel Pump																																																																																																						
Check	Connector Disconnection																																																																																																						
Evaporator Assembly	42-82	Check	Connector Disconnection	Evaporator Unit	17-110	Exhaust Manifold	17-110	Overhaul	Operation Check	Overhaul	17-97	Exhaust Manifold <2.4L>	17-97	Exhaust Manifold <3.0L>	Fuel Pump Module	Exhaust Pipe <2.4L>	00-42	Exhaust Pipe <3.0L>	00-42	Exhaust System	00-42	Check	Fuel Supply Diagnosis	Exterior	00-42	Adhesive	Fuel System	Sealant	Check for Leaks	51-30	00-42	51-30	Fuel Tank	Exterior	17-101	Adhesive	Fuel Tank	Sealant	Check for Leaks	51-30	00-42	51-30	Fuel Tank Filler Tube	Exterior	13A-589	Adhesive	Check for Leaks	Sealant	55-40	51-30	55-40	Exterior	55-35	Adhesive	Fuel Tank Pressure Relief Valve	Sealant	55-35	51-30	Fuel Tank Pressure Relief Valve	Exterior	11D-23	Adhesive	Inspection	Sealant	11B-24	51-30	11B-24	Exterior	15-17	Adhesive	Check	Sealant	15-19	51-30	15-19	Exterior	15-21	Adhesive	Fuses Location	Sealant	15-22	51-30	15-22	Exterior	00-64	Adhesive	Fusible Links Location	Sealant	00-64	51-30	Garnishes	51-30	Garnishes	Exterior	51-30	Adhesive	Gauge	Sealant	Circuit Diagram	51-30	51-30	Exterior	90-170
Check	Connector Disconnection																																																																																																						
Evaporator Unit	17-110	Exhaust Manifold	17-110	Overhaul	Operation Check	Overhaul	17-97	Exhaust Manifold <2.4L>	17-97	Exhaust Manifold <3.0L>	Fuel Pump Module	Exhaust Pipe <2.4L>	00-42	Exhaust Pipe <3.0L>	00-42	Exhaust System	00-42	Check	Fuel Supply Diagnosis	Exterior	00-42	Adhesive	Fuel System	Sealant	Check for Leaks	51-30	00-42	51-30	Fuel Tank	Exterior	17-101	Adhesive	Fuel Tank	Sealant	Check for Leaks	51-30	00-42	51-30	Fuel Tank Filler Tube	Exterior	13A-589	Adhesive	Check for Leaks	Sealant	55-40	51-30	55-40	Exterior	55-35	Adhesive	Fuel Tank Pressure Relief Valve	Sealant	55-35	51-30	Fuel Tank Pressure Relief Valve	Exterior	11D-23	Adhesive	Inspection	Sealant	11B-24	51-30	11B-24	Exterior	15-17	Adhesive	Check	Sealant	15-19	51-30	15-19	Exterior	15-21	Adhesive	Fuses Location	Sealant	15-22	51-30	15-22	Exterior	00-64	Adhesive	Fusible Links Location	Sealant	00-64	51-30	Garnishes	51-30	Garnishes	Exterior	51-30	Adhesive	Gauge	Sealant	Circuit Diagram	51-30	51-30	Exterior	90-170				
Exhaust Manifold	17-110																																																																																																						
Overhaul	Operation Check																																																																																																						
Overhaul	17-97																																																																																																						
Exhaust Manifold <2.4L>	17-97																																																																																																						
Exhaust Manifold <3.0L>	Fuel Pump Module																																																																																																						
Exhaust Pipe <2.4L>	00-42																																																																																																						
Exhaust Pipe <3.0L>	00-42																																																																																																						
Exhaust System	00-42																																																																																																						
Check	Fuel Supply Diagnosis																																																																																																						
Exterior	00-42																																																																																																						
Adhesive	Fuel System																																																																																																						
Sealant	Check for Leaks																																																																																																						
51-30	00-42																																																																																																						
51-30	Fuel Tank																																																																																																						
Exterior	17-101																																																																																																						
Adhesive	Fuel Tank																																																																																																						
Sealant	Check for Leaks																																																																																																						
51-30	00-42																																																																																																						
51-30	Fuel Tank Filler Tube																																																																																																						
Exterior	13A-589																																																																																																						
Adhesive	Check for Leaks																																																																																																						
Sealant	55-40																																																																																																						
51-30	55-40																																																																																																						
Exterior	55-35																																																																																																						
Adhesive	Fuel Tank Pressure Relief Valve																																																																																																						
Sealant	55-35																																																																																																						
51-30	Fuel Tank Pressure Relief Valve																																																																																																						
Exterior	11D-23																																																																																																						
Adhesive	Inspection																																																																																																						
Sealant	11B-24																																																																																																						
51-30	11B-24																																																																																																						
Exterior	15-17																																																																																																						
Adhesive	Check																																																																																																						
Sealant	15-19																																																																																																						
51-30	15-19																																																																																																						
Exterior	15-21																																																																																																						
Adhesive	Fuses Location																																																																																																						
Sealant	15-22																																																																																																						
51-30	15-22																																																																																																						
Exterior	00-64																																																																																																						
Adhesive	Fusible Links Location																																																																																																						
Sealant	00-64																																																																																																						
51-30	Garnishes																																																																																																						
51-30	Garnishes																																																																																																						
Exterior	51-30																																																																																																						
Adhesive	Gauge																																																																																																						
Sealant	Circuit Diagram																																																																																																						
51-30	51-30																																																																																																						
Exterior	90-170																																																																																																						

G

Generator	11B-5	Ignition System	11B-5
Generator		Ignition System	
Assembly	16-14	Circuit Diagram	
Output Current Test	16-8	2.4L ENGINE-A/T	90-29
Output Line Voltage Drop Test	16-6	2.4L ENGINE-M/T	90-28
Overhaul	11D-4	3.0L ENGINE-A/T	90-31
Regulated Voltage Test	16-10	3.0L ENGINE-M/T	90-30
Glove Box Light		Overhaul	11D-9
Circuit Diagram	90-156	Ignition Timing	
Ground Location	70-4	Check	11A-6
Grounding Location	70-8	Check	11C-5
H			
Hazard Warning Light		Immobilizer System	
Circuit Diagram	90-158	Circuit Diagram	
Headlight		2.4L ENGINE-A/T	90-332
Circuit Diagram	90-128	2.4L ENGINE-M/T	90-330
Headliner	42-131	3.0L ENGINE-A/T	90-336
Heater		3.0L ENGINE-M/T	90-334
Blower	55-38	Injector	13B-687
Resistor	55-38	Injector	13A-590
Heater Control Assembly	55-31	Injector	
Heater Core	55-35	Check	13A-587
Heater Unit	55-35	Check	13B-686
Hood	42-5	Input Shaft	22B-23
Hood	42-7	Input Shaft	23B-57
Horn		Input Shaft	
Circuit Diagram	90-168	Disassembly and Assembly	23B-57
Hose		Inspection	22B-30
Vacuum, Routing	17-89	Inspection Terminal Location	70-3
Hoses		Instrument Panel Inspection	00E-7
Brake, Check	00-58	Intake Air Temperature Sensor	
Hub		Check	13A-583
Front Axle	26-7	Check	13B-682
Rear Axle	27-6	Intake and Exhaust Diagnosis	15-2
Hub Bolt		Intake Manifold	11B-21
Replacement	27-4	Intake Manifold	
Replacement	26-6	Overhaul	11D-19
Hub End Play		Intake Manifold <2.4l>	15-12
Check	26-6	Intake Manifold <3.0l>	15-15
Hydraulic Unit	35B-52	Intake Manifold Plenum	15-7
Hydraulic Unit		Intake Manifold Plenum	
Check	35C-38	Overhaul	11D-6
Hydraulic Unit Check		Interlock Switch	
ABS	35B-47	Check and Adjustment	21A-9
I			
Idle Mixture		Operating Check	21A-8
Check	11C-6	INVECS-II 4A/T	
Check	11A-7	Circuit Diagram	
Idle Speed		WITH SPORT MODE TYPE (2.4L ENGINE)	90-108
Basic, Adjustment	13B-679	WITH SPORT MODE TYPR (3.0L ENGINE)	90-118
Basic, Adjustment	13A-577	WITHOUT SPORT MODE TYPE	90-100
Check	11C-7	J	
Check	11A-7	Joint Connector	90-12
Idle Speed Control Motor		Junction Block	90-10
Check	13A-588	K	
Check	13B-686	Key Interlock Mechanism	
Ignition Cable		Check	23A-356
Replace	00-43	Keyless Entry System	42-81
Ignition Coil	16-52	Keyless Entry System	
Ignition Coil		Secret Code Registration	42-84
Check	16-36	Transmitter Battery Replacement	42-81
2.4L	16-37	Knock Sensor	16-57
3.0L		Knuckle	
Ignition Key Reminder Warning Buzzer		Front Axle	26-10
Circuit Diagram	90-326	Inspection	27-9
Ignition System	16-34	Inspection	26-10
		Knuckle	26-10
		Rear Axle	27-8

L

Lash Adjuster	
Check	11A-10
Check	11C-9
Lift Gate Window Glass	42-23
Liftgate.....	42-67
Liftgate.....	42-69
Liftgate Diagnosis.....	42-67
Liftgate Handle	42-70
Liftgate Latch.....	42-70
Liftgate Trim.....	42-72
Lighting Monitor Buzzer	90-324
Circuit Diagram.....	33A-13
Lower Arm	34-14
Lower Arm	33A-14
Lower Arm	34-16
Lower Arm Bushing	33A-15
Replacement	23B-66
Low-Reverse Brake.....	33A-15
Low-Reverse Brake	23B-66
Disassembly and Assembly.....	33A-15

M

Magnetic Clutch Test (A/C).....	00-42
Main Muffler <2.4L>	00-53
Main Muffler <3.0L>	00-58
Maintenance	00-58
Air Cleaner Element	00-57
Automatic Transaxle Fluid	00-44
Ball Joint and Steering Linkage Seals	00-58
Brake Hoses	00E-13
Disc Brake Pads	00-56
Drive Belt	00-50
Driveshaft Boots	00-51
Electrical System	00-42
Engine Coolant	00-64
Engine Oil	00-42
Engine Oil Filter	00-42
Evaporative Emission Control System	00-43
Exhaust System.....	00-43
Fuel Hose	00-43
Fuel System.....	00-59
Ignition Cable.....	00-44
Spark Plug	11A-9
SRS	11C-9
Timing Belt.....	00-52
Manifold Vacuum	22A-5
Check	51-25
Check	51-25
Manual Transaxle (Transmission)	51-25
Oil Level Check	35B-50
Manual Transaxle Diagnosis	35A-31
Mark	35A-32
Mark	35B-50
Master Cylinder	35A-34
Master Cylinder	35A-35
Function Check.....	35B-51
Master Cylinder Assembly	35B-50
Master Cylinder Assembly	35A-34
Disassembly and Assembly.....	35A-35
Disassembly and Assembly.....	35B-51
Inspection	35B-51
Inspection	90-170
Meter	90-170
Circuit Diagram.....	90-170
MFI	90-170

Adhesive	13A-598
Adhesive	13A-598
Sealant.....	13A-598
Sealant.....	13A-598
Tightening Specification(s).....	13B-692
Tightening Specification(s).....	13A-596
MFI Diagnosis.....	13A-5
MFI Diagnosis.....	13B-6
MFI System	13B-6
Circuit Diagram	90-46
2.4L ENGINE-A/T	90-46
2.4L ENGINE-M/T	90-36
3.0L ENGINE (WITHOUT VIC) -A/T	90-66
3.0L ENGINE (WITHOUT VIC) -M/T	90-56
3.0L ENGINE (WITH VIC) -M/T	90-76
3.0L ENGINE (WITH VIC) -A/T	90-86
Mirror	90-86
Door	51-28
Door	51-27
Remote Controlled, Circuit Diagram	90-264
ECLIPSE	90-264
ECLIPSE SPYDER	90-265
Module	90-265
Fuel Pump	13C-14
Moldings	51-10
Moldings	51-11
Mounting	51-11
Engine.....	32-4
Transaxle	32-6
Multi-Center Display	54A-238

O

Oil	00-50
Engine, Change	00-50
Engine, Check	12-3
Engine, Replacement	12-3
Oil Cooler	12-3
Flow Check	23A-350
Oil Filter	12-4
Engine, Replacement	12-4
Oil Pan.....	11C-27
Oil Pan.....	11A-22
Oil Pan	11A-22
Inspection	11A-24
Inspection	11C-30
Overhaul	11D-37
Oil Pressure	11D-37
Engine, Check	12-5
Oil Pump	11B-36
Oil Pump	23B-56
Oil Pump	23B-56
Disassembly and Assembly	23B-56
Inspection	11B-45
Overhaul	11D-37
Power Steering	37A-40
Power Steering, Pressure Test	37A-19
Oil Seal	11A-24
Crankshaft Front	11A-24
Crankshaft Front	11A-24
Crankshaft Front	11C-30
Crankshaft Front	11C-30
Crankshaft Rear	11C-32
Crankshaft Rear	11A-26
Crankshaft Rear	11A-26
Crankshaft Rear	11C-32
Output Shaft	22B-33
Output Shaft	23B-68
Output Shaft	23B-68
Disassembly and Assembly	23B-68

Inspection	22B-47	Q	
Overdrive Clutch.....	23B-59	Quarter Window Glass	42-39
Overdrive Clutch		Quarter Window Glass	42-26
Disassembly and Assembly.....	23B-59	Quarter Window Glass	
Oxygen Sensor		Adjustment.....	42-37
Check	13A-585	Water Leak	42-26
Check	13B-684	Quarter Window Regulator Assembly	42-26
		Quarter Window Regulator Assembly	42-39
P			
Park/neutral Position Switch			
Adjustment.....	23A-352	R	
Park/Neutral Position Switch		Radiator	14-21
Check	23A-351	Radiator Cap	
Check	23A-353	Pressure Check	14-17
Parking Brake		Rear Axle	
Cable	36-8	Hub	27-6
Cable	36-7	Knuckle	27-8
Lever.....	36-6	Wheel Bearing End Play Check.....	27-4
Lever Stroke Check and Adjustment	36-4	Rear Axle Diagnosis	27-2
Lining and Drum	36-11	Rear Drum Brake.....	
Lining Running-in		Rear Drum Brake Lingings	
VEHICLES WITH DRUM-IN-DISC BRAKE	36-5	Wear and Leaks Check	00-57
Switch Check.....	36-5	Rear Drum Brake Wheel Cylinder Assembly	
PCV (Positive Crankcase Ventilation) System	17-95	Disassembly and Assembly	35A-52
PCV (Positive Crankcase Ventilation) System	17-95	Inspection	35A-53
PCV (Positive Crankcase Ventilation) System		Rear Hub Rotary-Sliding Resistance	
Valve Check.....	17-97	Check.....	27-4
Pedal		Rear Suspension Assembly	
Accelerator	17-6	Rear Suspension Assembly	34-6
Piston		Inspection	34-9
Overhaul.....	11D-44	Rear Wheel Cylinder	
Overhaul.....	11B-47	Wear and Leaks Check	00-57
Planetary Gear	23B-64	Rear Wheel Cylinder Assembly	35A-51
Planetary Gear		Rear Window Defogger	
Disassembly and Assembly.....	23B-64	Circuit Diagram	
Power Distribution System		ECLIPSE.....	90-260
Circuit Diagram.....	90-20	ECLIPSE SPYDER	90-262
Power Seat		Receiver Drier Test (A/C)	55-25
Circuit Diagram.....	90-310	Relay	
Power Steering		Check.....	00E-10
Bleeding.....	37A-18	Relay Location	70-9
Drive Belt Tension Check	37A-17	Resistive Cord	
Fluid Level Check	37A-17	Inspection	16-38
Fluid Replacement.....	37A-17	Reverse Clutch	
Gear Box Assembly	37A-25	Reverse Clutch	23B-59
Hoses	37A-41	Disassembly and Assembly	23B-59
Oil Pump Assembly	37A-40	Reverse Idler Gear	22B-49
Oil Pump Pressure Test.....	37A-19	Rheostat	
Pressure Switch Check	37A-20	Circuit Diagram	90-346
Power Steering Diagnosis	37A-3	RKE (Keyless Entry System)	42-81
Power Steering Gear Box Assembly		RKE (Keyless Entry System)	
Inspection (Disassembly and Assembly).....	37A-39	Secret Code Registration	42-84
Power Steering Oil Pump Assembly		Transmitter Battery Replacement	42-81
Inspection	37A-40	Rocker Arm	
Power Transistor		Overhaul	11D-24
Check	16-37	Overhaul	11B-25
3.0L.....			
Power Window		S	
Circuit Breaker Inspection	42-52	Sealant	
Circuit Diagram		Automatic Transaxle	23B-85
ECLIPSE.....	90-176	Body.....	42-140
ECLIPSE SPYDER.....	90-180	Engine.....	11A-41
Proportioning Valve	35A-54	Engine.....	11C-43
Proportioning Valve		Engine Lubrication	12-6
Function Test	35A-20	Engine Overhaul	11B-68
Purge Control System		Exterior	11D-61
Check	17-100	MFI.....	51-30
			13A-598

MFI	13A-598	WITHOUT SIDE AIR BAG	90-306
Steering	37A-48	Maintenance	00-59
Sealant Table.....	00-65	Stabilizer Bar	33A-16
Seat Belt Tone Alarm		Stabilizer Bar	34-22
Circuit Diagram.....	90-328	Stabilizer Bar	34-22
Second Brake.....	23B-67	Starter Motor	
Second Brake		Assembly	16-25
Disassembly and Assembly.....	23B-67	Starter Relay	
Select Lever	22B-51	Check	16-24
Select Switch		Starting System	16-22
Check	23A-354	Starting System	
Selector Lever	23A-361	Circuit Diagram	
Operation Check.....		A/T	90-27
Sensor		M/T	90-26
Camshaft Position	23A-356	Starting System Diagnosis	16-23
Camshaft Position, Check		Steering	
2.4L.....	16-54	Adhesive	37A-48
Crankangle, Check		Ball Joint Dust Cover Inspection	37A-20
2.4L.....	16-39	Sealant	37A-48
3.0L.....	16-39	Steering Gear Shaft Assembly	
Crankshaft Position	16-55	Inspection	37A-27
Crankshaft Position	16-56	Steering Linkage Seals	
Crankshaft Position, Check	23A-353	Check	00-58
Engine Coolant Temperature, Check.....	13B-682	Steering Wheel	
Engine Coolant Temperature, Check.....	13A-583	Free Play Check	37A-14
Fluid Temperature, Check	23A-353	Stationary Steering Effort Check	37A-16
Intake Air Temperature, Check	13A-583	Steering Angle Check	37A-15
Intake Air Temperature, Check	13B-682	Steering Wheel Return to Center Check	37A-17
Knock.....	16-57	Steering Wheel and Shaft	
Oxygen, Check	13B-684	Assembly	37A-21
Oxygen, Check	13A-585	Stop Light Switch	
Throttle Position, Adjustment.....	13A-576	Check	23A-353
Throttle Position, Adjustment.....	13B-677	Stoplight	
Throttle Position, Adjustment.....	23A-351	Circuit Diagram	90-164
Throttle Position, Check	23A-353	Switch Check	35A-18
Throttle Position, Check	13B-683	Strut Assembly	33A-9
Throttle Position, Check	13A-584	Strut Assembly	
Wheel Speed	35B-55	Disassembly and Assembly	33A-10
Wheel Speed, Output Voltage Check	35B-46	Inspection	33A-12
Wheel Speed, Output Voltage Measurement	35C-38	Inspection	33A-9
Sensor Location	70-10	Strut Tower Bar	42-11
Shift Lever Assembly	22A-15	Sunroof	42-85
Shift Lock Mechanism		Sunroof	42-90
Check	23A-357	Sunroof	
Shock Absorber Assembly	34-17	Circuit Diagram	90-338
Shock Absorber Assembly		Fit Adjustment	42-86
Disassembly and Assembly	34-19	Operation Check	42-87
Inspection	34-18	Water Test	42-86
Sight Glass (Refrigerant Level Test)	55-24	Switch	
Solenoid		Check	00E-9
EGR, Check	13B-686	SWS	
EGR, Check	17-109	General Information	54B-2
EGR, Check	13A-589	General Information	54B-6
Evaporative Emission Purge, Check	13B-686	T	
Evaporative Emission Purge, Check	13A-589		
Solenoid Location	70-20	Tension Pulley	55-44
Solenoid Valve		Theft-alarm System	
Check	23A-354	Circuit Diagram	90-312
Solenoid Valve Location	70-20	Thermostat	14-23
Spark Plug		Throttle Body	
Replace	00-43	Assembly	13A-592
Test	16-38	Assembly	13B-689
3.0L.....	16-38	Cleaning	13A-575
Spark Plug Cable		Cleaning	13B-677
Test	16-36	Overhaul	11D-6
3.0L.....	22B-50	Throttle Position Sensor	
Speedometer Gear		Adjustment	13B-677
SRS		Adjustment	13A-576
Circuit Diagram	90-308	Adjustment	23A-351
WITH SIDE AIR BAG			

ALPHABETICAL INDEX

Check	13B-683	Trailing Arm	34-12
Check	13A-584	Trailing Arm	
Check	23A-353	Inspection	34-13
Tie Rod End		Transaxle	23B-10
Steering, Ball Joint Breakaway Torque Check.....	37A-15	Transaxle	
Steering, Ball Joint Dust Cover Replacement.....	37A-39	Automatic, Fluid Level Check	00-53
Tightening Specification(s)		Control	23A-358
Automatic Transaxle Overhaul	23B-80	Disassembly and Assembly.....	23B-10
Basic Brakes.....	35A-55	Transaxle (Transmission)	22B-8
Charging System	16-59	Transaxle (Transmission)	
Emission Control	17-116	Inspection	22B-22
Engine	11A-40	Transaxle Assembly	22A-16
Engine	11C-42	Transaxle Assembly	23A-366
Engine Cooling	14-31	Transaxle Control	23A-358
Engine Lubrication.....	12-6	Transaxle Control	22A-12
Engine Overhaul.....	11B-63	Transaxle Control	
Engine Overhaul.....	11D-57	Inspection	23A-360
Exterior	51-30	Transaxle Mounting	32-6
Front Axle	26-25	Transaxle Oil	
Fuel Supply.....	13C-15	Level Check	22A-11
MFI	13A-596	Replacement	22A-11
MFI	13B-692	Transmission Case	22B-63
Parking Brake	36-12	Triple Pressure Switch (A/C Load)	
Power Plant Mount	32-12	Check	23A-354
Rear Axle.....	27-9	Trunk Lid	42-76
Steering	37A-46	Trunk Lid	42-74
Wheel and Tire	31-8	Trunk Lid Diagnosis	42-74
Tightening Torque.....	00-33	Trunk Lid Lock Release Cable	42-78
Timing Belt.....	11C-37	Trunk Lid Lock Release Handle	42-78
Timing Belt.....	11A-32	Turn Signal Light	
Timing Belt		Circuit Diagram	90-158
Overhaul	11B-7		
Overhaul	11D-11	U	
Replace	00-44		
Timing Belt B	11A-36	Underdrive Clutch	23B-57
Tire	31-7	Underdrive Clutch	
Tire		Disassembly and Assembly	23B-57
Diagnosis	31-2	Upshift Switch	
Diagnosis	31-2	Check	23A-354
Inflation Pressure Check	31-7		
Rotation	00-65	V	
Wear Check	31-7	Vacuum Check	
Toe Control Arm	34-14	EGR Port	17-108
Toe Control Arm		Vacuum Control Valve	
Inspection	34-16	Check	17-107
Top Cover Assembly	42-128	Vacuum Hose Routing	17-89
Top Stack		Valve	
Circuit Diagram	90-340	EGR System, Check	17-107
Topstack Center Rail	42-120	Fuel Tank Pressure Relief	17-110
Topstack Center Rail		Fuel Tank Pressure Relief	17-110
Disassembly and Assembly	42-121	Fuel Tank Pressure Relief, Inspection	17-111
Topstack Control Link Assembly	42-124	Proportioning	35A-54
Topstack Drive Motor	42-114	Proportioning, Function Test	35A-20
Topstack Front Header Latch Receiver	42-134	Vacuum Control, Check	17-107
Topstack Front Rail	42-120	Valve Body	23B-74
Topstack Front Rail		Valve Body	
Disassembly and Assembly	42-121	Disassembly and Assembly	23B-74
Topstack No.1 Bow	42-116	Vanity Mirror Light	
Topstack No.2 Bow	42-117	Circuit Diagram	90-157
Topstack No.3 Bow	42-117	Vehicle Identification	00-16
Topstack No.4 Bow	42-118	Vehicle Identification	00-16
Topstack No.5 Bow	42-119	Vehicle Identification Code Plate	00-18
Topstack Rear Rail	42-122	Ventilators	55-54
Topstack Rear Rail			
Disassembly and Assembly	42-123	W	
Topstack Side Stay Pads	42-126	Warning Light	
Topstack Well	42-130	Circuit Diagram	90-174
Topstak Latch Assembly	42-115	Water Hose	11D-21
Topstak Rail Weatherstrip	42-136		
Torque Converter			
Stall Test	23A-25		

Water Hose.....	14-28
Water Pipe.....	14-28
Water Pump.....	14-25
Water Pump.....	11D-21
Waterproof Film.....	42-72
Wheel	31-7
Wheel	
Balance Accuracy.....	31-3
Diagnosis.....	31-2
Diagnosis.....	31-2
Runout Check.....	31-7
Wheel Bearing End Play Check	27-4
Wheel Cylinder Assembly	
Rear.....	35A-51
Rear Drum Brake, Disassembly and Assembly.....	35A-52
Rear Drum Brake, Inspection	35A-53
Wheel Speed Sensor.....	35B-55
Wheel Speed Sensor	
Output Voltage Check.....	35B-46
Output Voltage Measurement.....	35C-38
Window Glass	42-13
Window Glass	42-12
Window Glass	
Door, Adjustment.....	42-47
Quarter	42-20
Runchannel	42-65
Windshield.....	42-14
Windshield	
Wiper and Washer	51-17
Wiper and Washer	51-17
Wiper and Washer	51-16
Windshield Wiper and Washer	51-17
Windshield Wiper and Washer	
Circuit Diagram.....	90-242
Wiper and Washer	
Rear	51-21
Rear, Circuit Diagram	
A/T	90-254
M/T.....	90-248
Windshield	51-16
Windshield	51-17