

GROUP 11C

ENGINE MECHANICAL

<3.0L>

CONTENTS

GENERAL DESCRIPTION.....	11C-2	OIL PAN REMOVAL AND INSTALLATION	11C-27
ENGINE DIAGNOSIS.....	11C-2	OIL PAN INSPECTION	11C-30
SPECIAL TOOLS.....	11C-3	CRANKSHAFT FRONT OIL SEAL... 11C-30	
ON VEHICLE SERVICE.....	11C-5	CRANKSHAFT FRONT OIL SEAL REMOVAL AND INSTALLATION	11C-30
DRIVE BELT TENSION CHECK AND ADJUSTMENT	11C-5	CRANKSHAFT REAR OIL SEAL.... 11C-32	
IGNITION TIMING CHECK.....	11C-5	CRANKSHAFT REAR OIL SEAL REMOVAL AND INSTALLATION	11C-32
IDLE MIXTURE CHECK.....	11C-6	CYLINDER HEAD GASKET..... 11C-34	
IDLE SPEED CHECK.....	11C-7	CYLINDER HEAD GASKET REMOVAL AND INSTALLATION	11C-34
COMPRESSION PRESSURE CHECK....	11C-7	TIMING BELT 11C-37	
MANIFOLD VACUUM CHECK.....	11C-9	TIMING BELT REMOVAL AND INSTALLATION	11C-37
LASH ADJUSTER CHECK.....	11C-9	TIMING BELT INSPECTION.....	11C-42
ENGINE ASSEMBLY.....	11C-12	SPECIFICATIONS 11C-42	
ENGINE ASSEMBLY REMOVAL AND INSTALLATION	11C-12	FASTENER TIGHTENING SPECIFICATIONS.....	11C-42
CAMSHAFT AND CAMSHAFT OIL SEAL.....	11C-22	SERVICE SPECIFICATIONS	11C-43
CAMSHAFT AND CAMSHAFT OIL SEAL REMOVAL AND INSTALLATION	11C-22	SEALANTS	11C-43
OIL PAN.....	11C-27		

GENERAL DESCRIPTION

M1111000100248

The 6G72 (3.0L) engine is a six-cylinder engine. The cylinder numbers are assigned as 1 – 3 – 5 for the right bank and 2 – 4 – 6 for the left bank from the front of the engine (timing belt side). This engine is fired in the order of the 1, 2, 3, 4, 5 and 6 cylinders.

ITEMS			SPECIFICATIONS
Type			V-type, overhead camshaft
Number of cylinders			6
Bore mm (in)			91.1 (3.59)
Stroke mm (in)			76.0 (2.99)
Piston displacement cm ³ (cu. in)			2,972 (181.4)
Compression ratio <without VIC>			9.0
Compression ratio <with VIC>			10.0
Firing order			1 – 2 – 3 – 4 – 5 – 6
Valve timing <without VIC>	Intake valve	Opens (BTDC)	15°
		Closes (ABDC)	53°
	Exhaust valve	Opens (BBDC)	53°
		Closes (ATDC)	15°
Valve timing <with VIC>	Intake valve	Opens (BTDC)	7°
		Closes (ABDC)	61°
	Exhaust valve	Opens (BBDC)	57°
		Closes (ATDC)	15°

ENGINE DIAGNOSIS






M1111000700080






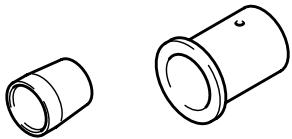
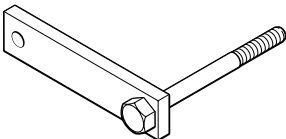
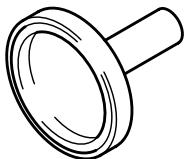
SYMPTOMS	PROBABLE CAUSE	REMEDY
Compression is too low	Blown cylinder head gasket	Replace the gasket.
	Worn or damaged piston rings	Replace the rings.
	Worn piston or cylinder	Repair or replace the piston and/or the cylinder block.
	Worn or damaged valve seat	Repair or replace the valve and/or the seat ring
Drop in oil pressure	Engine oil level is too low	Check the engine oil level.
	Malfunction of oil pressure switch	Replace the oil pressure switch.
	Clogged oil filter	Install a new filter.
	Worn oil pump gears or cover	Replace the gears and/or the cover.
	Thin or diluted engine oil	Change the engine oil to the correct viscosity.
	Stuck (opened) oil relief valve	Repair the relief valve.
	Excessive bearing clearance	Replace the bearings.
Oil pressure too high	Stuck (closed) oil relief valve	Repair the relief valve.




SYMPTOMS	PROBABLE CAUSE	REMEDY
Noisy valves	Malfunction of lash adjuster (including entry of air into high pressure chamber)	Check the lash adjuster.
	Thin or diluted engine oil (low oil pressure)	Change the engine oil.
	Worn or damaged valve stem or valve guide	Replace the valve and/or the guide.
Connecting rod noise/ main bearing noise	Insufficient oil supply	Check the engine oil level.
	Thin or diluted engine oil	Change the engine oil.
	Excessive bearing clearance	Replace the bearings.

SPECIAL TOOLS

M1111000600328

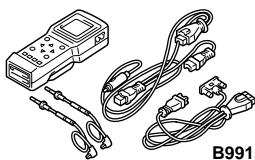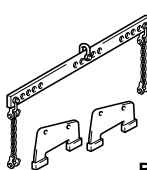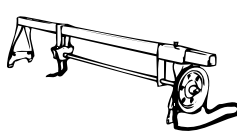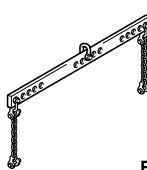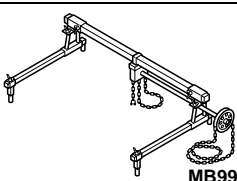TOOL	TOOL NUMBER AND NAME	SUPERSESSION	APPLICATION
 B991502	MB991502 Scan tool (MUT-II)	MB991496-OD	<ul style="list-style-type: none"> • Ignition timing check • Idle speed check
 B991453	MB991453 Engine hanger attachment set	MZ203827-01	When an engine lifer is used: Supporting the engine assembly during remove and installation of the transaxle
 MZ203827	GENERAL SERVICE TOOL MZ203827 Engine lifter	MZ203827-01	
 B991454	MB991454 Engine hanger balancer	MZ203827-01	When the engine hanger is used: Supporting the engine assembly during remove and installation of the transaxle <i>NOTE: Special tool MB991454 is a part of engine hanger attachment set MB991453.</i>
 MB991895	MB991895 Engine hanger	—	

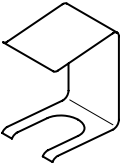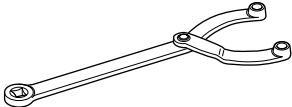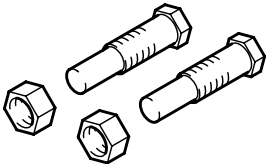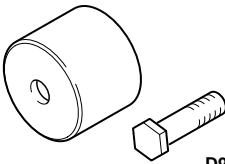TOOL	TOOL NUMBER AND NAME	SUPERSESSION	APPLICATION
 D998443	MD998443 Lash adjuster holder (8)	MD998443-01	Supporting of the lash adjuster to prevent it from falling when rocker shaft assembly is removed or installed
 B990767	MB990767 End yoke holder	MB990767-01	Holding the camshaft sprocket and crankshaft pulley when loosening and tightening bolt
 D998715	MD998715 Crankshaft pulley holder pin	MIT308239	
 D998713	MD998713 Camshaft oil seal installer	MD998713-01	Camshaft oil seal installation
 B991559	MB991559 Camshaft oil seal installer adapter	—	Camshaft oil seal installation (left bank side) (Use with MD998713)
 D998717	MD998717 Crankshaft front oil seal installer	MD998717-01	Crankshaft front oil seal installation
 D998781	MD998781 Flywheel stopper	General service tool	Flywheel <M/T> or drive plate <A/T> supporting
 D998718	MD998718 Crankshaft rear oil seal installer	MD998718-01	Crankshaft rear oil seal installation

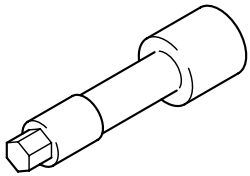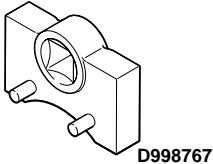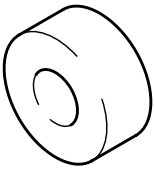TOOL	TOOL NUMBER AND NAME	SUPERSESSON	APPLICATION
	MD998051 Cylinder head bolt wrench	MD998051-01 or General service tool	Cylinder head bolt loosening and tightening
	MD998767 Tensioner pulley socket wrench	MD998752-01	Timing belt tension adjustment
	MD998769 Crankshaft sprocket spacer	General service tool	Used if the crankshaft needs to be rotated to attach the timing belt, etc.

ON VEHICLE SERVICE

DRIVE BELT TENSION CHECK AND ADJUSTMENT

M1111003100139

Refer to GROUP 00, Maintenance Service – Drive Belts
(Check Condition) [P.00-44](#).

IGNITION TIMING CHECK

M1111001700113

Required Special Tool:

- MB991502: Scan Tool (MUT-II)
1. Before inspection, set vehicles in the following condition:
 - Engine coolant temperature: 80 – 95°C (176 – 203°F)
 - Lights and all accessories: OFF
 - Transaxle: Neutral (P range on vehicles with A/T)

CAUTION


To prevent damage to scan tool MB991502, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991502.

2. Connect scan tool MB991502 to the data link connector.
3. Set up a timing light.
4. Start the engine and run it at idle.
5. Check that the idle speed is approximately 700 r/min.
6. Select scan tool MB991502 actuator test "item number 17".
7. Check that basic ignition timing is within the standard value.

Standard value: 5° BTDC ± 3°

8. If the basic ignition timing is not within the standard value, check the following items:

- Diagnosis output

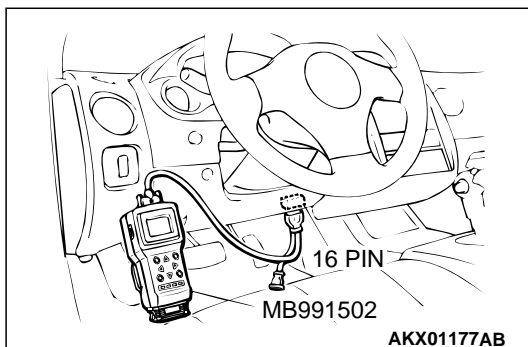

- Timing belt cover and crankshaft position sensor installation conditions
- Crankshaft sensing blade condition

⚠ CAUTION

If the actuator test is not canceled, the forced drive will continue for 27 minutes. Driving in this state could lead to engine failure.

9. Press the clear key on scan tool MB991502 (select forced drive stop mode), and cancel the actuator test.
10. Check that the actual ignition timing is at the standard value.

Standard value: Approximately 15° BTDC

NOTE: Ignition timing fluctuates about $\pm 7^\circ$ Before Top Dead Center, even under normal operating condition.

NOTE: It is automatically further advanced by about 5° to 15° Before Top Dead Center at higher altitudes.

IDLE MIXTURE CHECK

M1111002100073

Required Special Tool:

MB991502: Scan Tool (MUT-II)

1. Before inspection, set vehicles in the following condition:
 - Engine coolant temperature: 80 – 95°C (176 – 203°F)
 - Lights and all accessories: OFF
 - Transaxle: Neutral (P range on vehicles with A/T)

⚠ CAUTION

To prevent damage to scan tool MB991502, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991502.

2. Connect scan tool MB991502 to the data link connector.
3. Check that the basic ignition timing is within the standard value.

Standard value: 5° BTDC $\pm 3^\circ$

4. Start the engine and increase the engine speed to 2,500 r/min for 2 minutes.
5. Set the CO, HC tester.
6. Check the CO contents and the HC contents at idle.

Standard value:


CO contents: 0.5 % or less

HC contents: 100 ppm or less

7. If the CO and HC contents do not remain inside the standard value, check the following items:

NOTE: Replace the catalytic converter when the CO and HC contents do not remain inside the standard value, even though the result of the inspection is normal for all items.

- Diagnosis output
- Closed-loop control (When the closed-loop control is carried out normally, the output signal of the heated oxygen sensor changes between 0 – 400 mV and 600 – 1,000 mV at idle.)
- Fuel pressures
- Injector

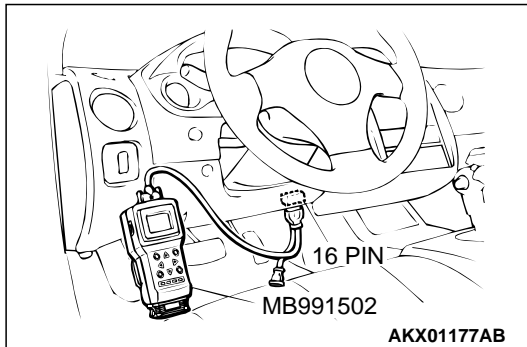

- Ignition coil, spark plug cable, spark plug
- EGR system and EGR valve leak
- Evaporative emission control system
- Compression pressure

CURB IDLE SPEED CHECK

M1111003500256

Required Special Tool:

MB991502: Scan Tool (MUT-II)

1. Before inspection and adjustment set vehicles in the following condition.
 - Engine coolant temperature: 80 – 95°C (176 – 203°F)
 - Lights and all accessories: OFF
 - Transaxle: Neutral (P range on vehicles with A/T)

CAUTION

To prevent damage to scan tool MB991502, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991502.

2. Connect scan tool MB991502 to the data link connector.
3. Check the basic ignition timing.

Standard value: 5° BTDC ± 3°

4. Start the engine.
5. Run the engine at idle for 2 minutes.
6. Check the idle speed. Select item number 22 and take a reading of the idle speed.

Curb idle speed: 700 ± 100 r/min


NOTE: The idle speed is controlled automatically by the idle air control system.




7. If the idle speed is outside the standard value, refer to GROUP 13B, Diagnosis – Symptom Chart [P.13B-26](#).

COMPRESSION PRESSURE CHECK

M1111002600227

1. Before inspection, check that the engine oil, starter and battery are normal. Also, set the vehicle in the following condition:
 - Engine coolant temperature: 80 – 95°C (176 – 203°F)
 - Lights, and all accessories: OFF
 - Transaxle: Neutral (P range on vehicles with A/T)
2. Disconnect the spark plug cables.
3. Remove all of the spark plugs.

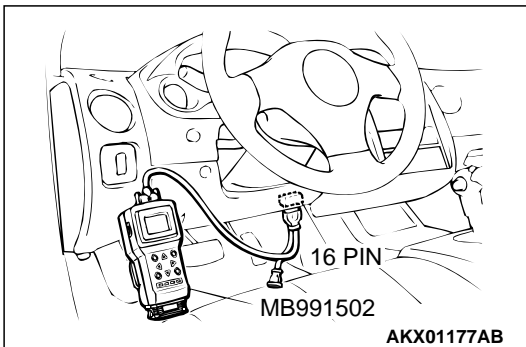

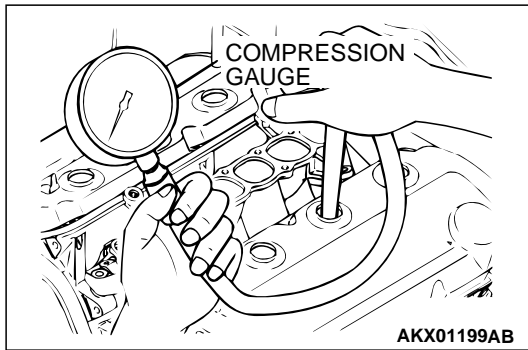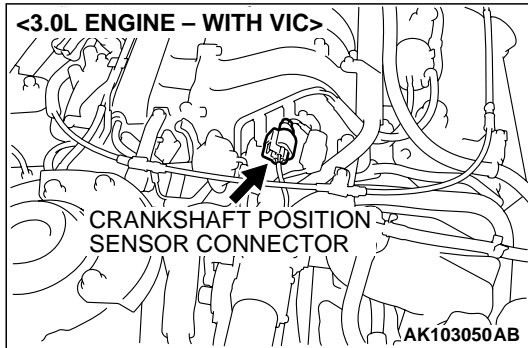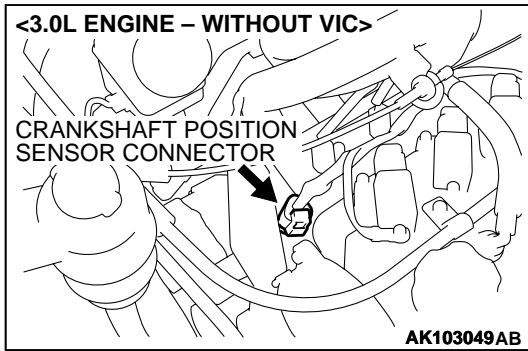

4. Disconnect the crankshaft position sensor connector.

NOTE: Doing this will prevent the engine control module from carrying out ignition and fuel injection.

⚠ WARNING

Keep your distance from the spark plug hole when cranking. Oil, fuel, etc., may spray out from the spark plug hole and may cause serious injury.

5. Cover the spark plug hole with a shop towel etc., during cranking. After the engine has been cranked, check for foreign material adhering to the shop towel.

6. Set compression gauge to one of the spark plug holes.

7. Crank the engine with the throttle valve fully open and measure the compression pressure.

<without VIC>

Standard value (at engine speed of 250 – 400 r/min):

824 kPa (119 psi)

Minimum limit (at engine speed of 250 – 400 r/min):

575 kPa (83 psi)

<with VIC>

Standard value (at engine speed of 250 r/min): 1,470 kPa (212 psi)

Minimum limit (at engine speed of 250 r/min): 1,029 kPa (149 psi)

8. Measure the compression pressure for all the cylinders, and check that the pressure differences of the cylinders are below the limit.

Limit: 98 kPa (14 psi)

9. If there is a cylinder with compression or a compression difference that is outside the limit, pour a small amount of engine oil through the spark plug hole, and repeat the operations in steps 6 to 8.

(1) If the compression increases after oil is added, the cause of the malfunction is a worn or damaged piston ring and/or cylinder inner surface.


(2) If the compression does not rise after oil is added, the cause is a burnt or defective valve seat, or pressure is leaking from the gasket.

10. Connect the crankshaft position sensor connector.

11. Install the spark plugs and spark plug cables.

12. Use the scan tool to erase the diagnostic trouble codes.

NOTE: This will erase the diagnostic trouble code resulting from the distributor connector being disconnected.

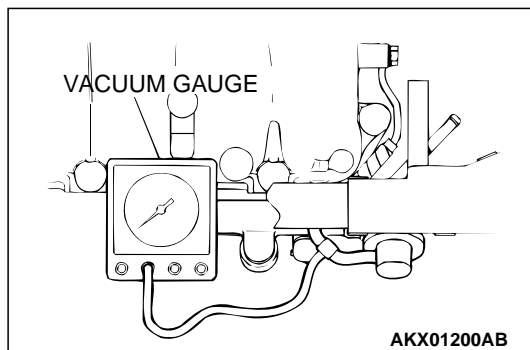

MANIFOLD VACUUM CHECK

M1111002700116

1. Before inspection, set the vehicle in the following condition
 - Engine coolant temperature: 80 – 95°C (176 – 203°F)
 - Lights, and all accessories: OFF
 - Transaxle: Neutral (P range on vehicles with A/T)
2. Connect a tachometer.
3. Attach a tee-fitting union to the vacuum hose between the fuel pressure regulator and the intake manifold plenum, and connect a vacuum gauge.
4. Start the engine and check that idle speed is within specification. Then check the vacuum gauge reading.

Idle speed: 700 ± 100 r/min

Minimum limit: 60 kPa (18 in Hg)

LASH ADJUSTER CHECK

M1111002900132

If an abnormal noise (chattering noise) suspected to be caused by malfunction of the lash adjuster is produced immediately after starting the engine and does not disappear, perform the following check.

NOTE: An abnormal noise due to malfunction of the lash adjuster is produced immediately after starting the engine and changes with the engine speed, irrespective of the engine load. If, the abnormal noise is not produced immediately after starting the engine or does not change with the engine speed, or it changes with the engine load, the lash adjuster is not the cause for the abnormal noise.

NOTE: When the lash adjuster is malfunctioning, the abnormal noise is rarely eliminated by continuing the warming-up of the engine at idle speed.

However, the abnormal noise may disappear only when seizure is caused by oil sludge in the engine whose oil is not maintained properly.

1. Start the engine.
2. Check if the abnormal noise produced immediately after starting the engine, changes with the change in the engine speed.

If the abnormal noise is not produced immediately after starting the engine or it does not change with the engine speed, the lash adjuster is not the cause for the noise. Therefore, investigate other causes. The abnormal noise is probably caused by some other parts than the engine proper if it does not change with the engine speed. (In this case, the lash adjuster is in good condition.)
3. With the engine idling, change the engine load (shift from N to D range, for example) to make sure that there is no change in the level of abnormal noise.

If there is a change in the level of abnormal noise, suspect a tapping noise due to worn crankshaft bearing or connecting rod bearing. (In this case, the lash adjuster is in good condition.)

4. After completion of warm-up, run the engine at idle to check for abnormal noise.

If the noise is reduced or disappears, clean the lash adjuster (Refer to GROUP 11D-Engine overhaul – Rocker Arms and Camshaft – Inspection [P.11D-27](#).) As it is suspected that the noise is due to seizure of the lash adjuster. If there is no change in the level of the abnormal noise, proceed to step 5.

5. Run the engine to bleed the lash adjuster system. (Refer to.)
6. If the abnormal noise does not disappear after air bleeding operation, clean the lash adjuster (Refer to GROUP 11D-Engine overhaul – Rocker Arms and Camshaft – Inspection [P.11D-27](#).)

Bleeding lash adjuster system

NOTE: Parking the vehicle on a grade for a long time may decrease oil in the lash adjuster, causing air to enter the high pressure chamber when starting the engine.

NOTE: After parking for many hours, oil may run out from the oil passage and take time before oil is supplied to the lash adjuster, causing air to enter the high pressure chamber.



NOTE: In the above cases, abnormal noise can be eliminated by bleeding the lash adjuster system.

1. Check engine oil and add or change oil if required.

NOTE: If the engine oil level is low, air is sucked from the oil screen, causing air to enter the oil passage.

NOTE: If the engine oil level is higher than specification, oil may be stirred by the crankshaft, causing oil to be mixed with a large quantity of air.


NOTE: If oil is deteriorated, air is not easily separated from oil, increasing the quantity of air contained in oil.

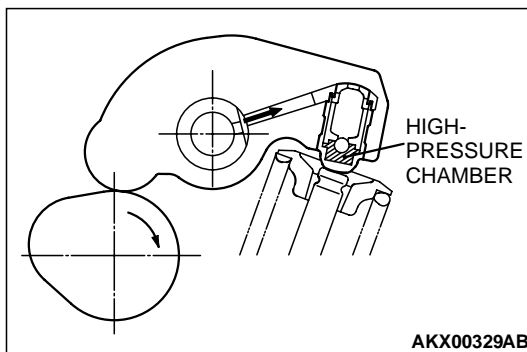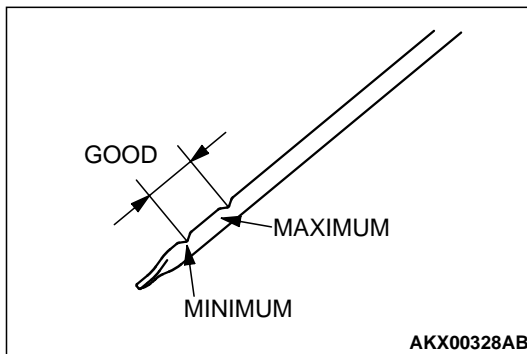

NOTE: If air mixed with oil enters the high pressure chamber inside the lash adjuster from the above causes, air in the high pressure chamber is compressed excessively while the valve is opened, resulting in an abnormal noise when the valve closes.

This is the same phenomenon as that observed when the valve clearance has become excessive. The lash adjuster can resume normal function when air entered the lash adjuster is removed.

2. Idle the engine for one to three minutes to warm it up.

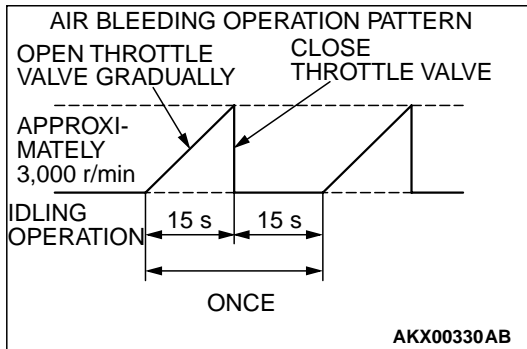

3. Repeat the operation pattern, shown in left figure, at no load to check for abnormal noise. (Usually the abnormal noise is eliminated after repetition of the operation 10 to 30 times. If, however, no change is observed in the level of abnormal noise after repeating the operation more than 30 times, suspect that the abnormal noise is due to some other factors.)
4. After elimination of abnormal noise, repeat the operation shown in left figure five more times.
5. Run the engine at idle for one to three minutes to make sure that the abnormal noise has been eliminated.

ENGINE ASSEMBLY

REMOVAL AND INSTALLATION

M1112001000418

<VEHICLE WITH OUT VARIABLE INDUCTION CONTOL (VIC) SYSTEM>

CAUTION


*: Indicates parts which should be temporarily tightened, and then fully tightened after placing the vehicle horizontally and loading the full weight of the engine on the vehicle body.

Pre-removal Operation

- Hood Removal (Refer to GROUP 42, Hood [P.42-7.](#))
- Fuel Line Pressure Reduction [Refer to GROUP 13B, On-vehicle Service – Fuel Pump Relay Disconnection (How to Reduce Pressurized Fuel Lines) [P.13B-682.](#)]
- Engine Coolant Draining [Refer to GROUP 00, Maintenance Service – Engine Coolant (Change) [P.00-56.](#)]
- Strut Tower Bar Removal (Refer to GROUP 42, Strut Tower Bar [P.42-11.](#))
- Air Cleaner Removal (Refer to GROUP 15, Air Cleaner [P.15-6.](#))
- Reserve Tank and Radiator Removal (Refer to GROUP 14, Radiator [P.14-21.](#))
- Front Exhaust Pipe Removal (Refer to GROUP 15, Exhaust Pipe and Main Muffler [P.15-22.](#))

Post-installation Operation

- Front Exhaust Pipe Installation (Refer to GROUP 15, Exhaust Pipe and Main Muffler [P.15-22.](#))
- Reserve Tank and Radiator Installation (Refer to GROUP 14, Radiator [P.14-21.](#))
- Air Cleaner Installation (Refer to GROUP 15, Air Cleaner [P.15-6.](#))
- Strut Tower Bar Installation (Refer to GROUP 42, Strut Tower Bar [P.42-11.](#))
- Drive Belt Tension Adjustment [Refer to GROUP 00 Maintenance Service – Drive Belts (Check Condition) [P.00-44.](#)]
- Engine Coolant Refilling [Refer to GROUP 00, Maintenance Service – Engine Coolant (Change) [P.00-56.](#)]
- Accelerator Cable Adjustment (Refer to GROUP 17, On-vehicle Service – Accelerator Cable Check and Adjustment [P.17-5.](#))
- Hood Installation (Refer to GROUP 42, Hood [P.42-7.](#))

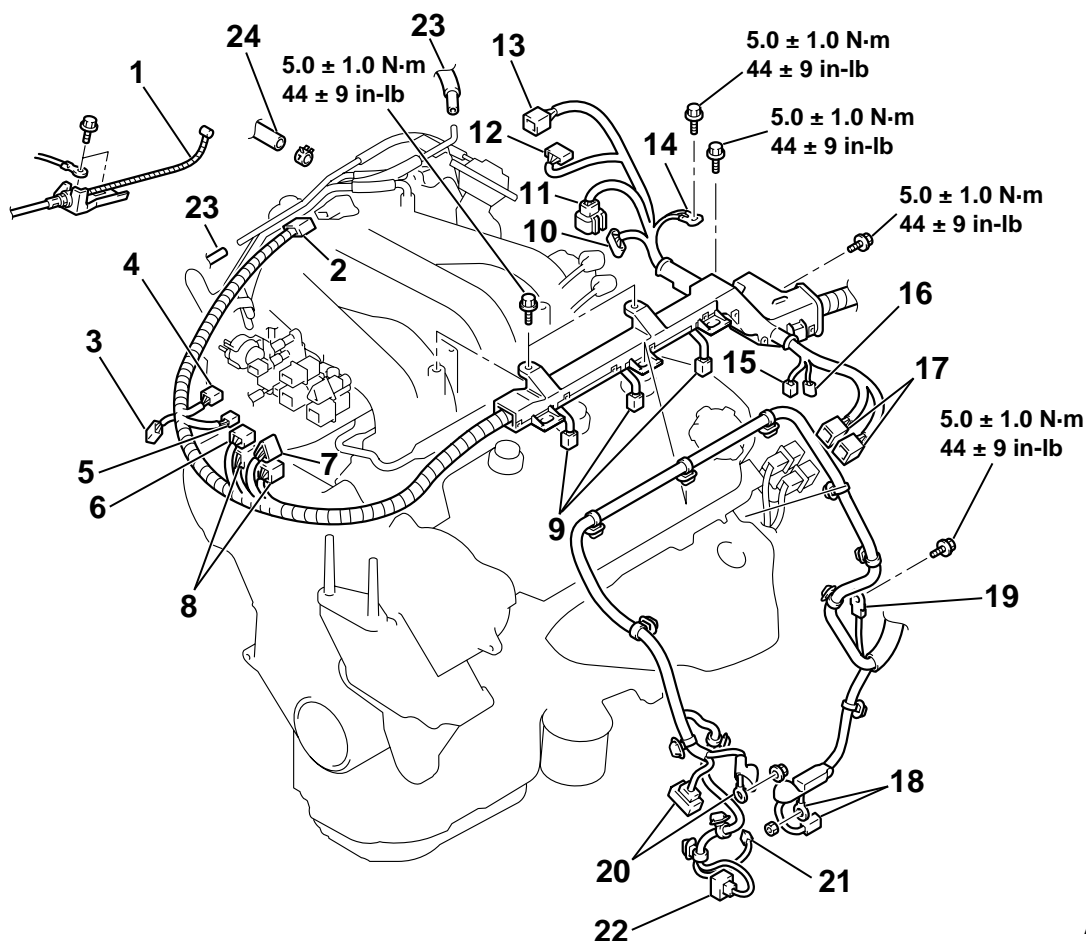



AC004714AD

REMOVAL STEPS

1. ACCELERATOR CABLE
CONNECTION
2. MANIFOLD DIFFERENTIAL
PRESSURE SENSOR
CONNECTOR
3. CONTROL WIRING HARNESS
AND POWER STEERING
WIRING HARNESS
COMBINATION CONNECTOR
4. EGR SOLENOID VALVE
CONNECTOR
5. EVAPORATIVE EMISSION
PURGE SOLENOID VALVE
CONNECTOR
6. KNOCK SENSOR CONNECTOR
7. CRANKSHAFT POSITION
SENSOR CONNECTOR
8. RIGHT BANK HEATED OXYGEN
SENSOR CONNECTOR
9. INJECTOR CONNECTOR
10. DISTRIBUTOR CONNECTOR
11. CONTROL WIRING HARNESS
AND INJECTOR WIRING
HARNESS COMBINATION
CONNECTOR

REMOVAL STEPS (Continued)

12. THROTTLE POSITION SENSOR
CONNECTOR
13. IDLE AIR CONTROL MOTOR
CONNECTOR
14. GROUND WIRE CONNECTION
15. ENGINE COOLANT
TEMPERATURE GAUGE UNIT
CONNECTOR
16. ENGINE COOLANT
TEMPERATURE SENSOR
CONNECTOR
17. LEFT BANK HEATED OXYGEN
SENSOR CONNECTOR
18. STARTER CONNECTOR
19. GROUND WIRE CONNECTION
20. GENERATOR CONNECTOR
21. OIL PRESSURE SWITCH
CONNECTOR
22. A/C COMPRESSOR
CONNECTOR
23. VACUUM HOSE CONNECTION
24. BRAKE BOOSTER VACUUM
HOSE CONNECTION

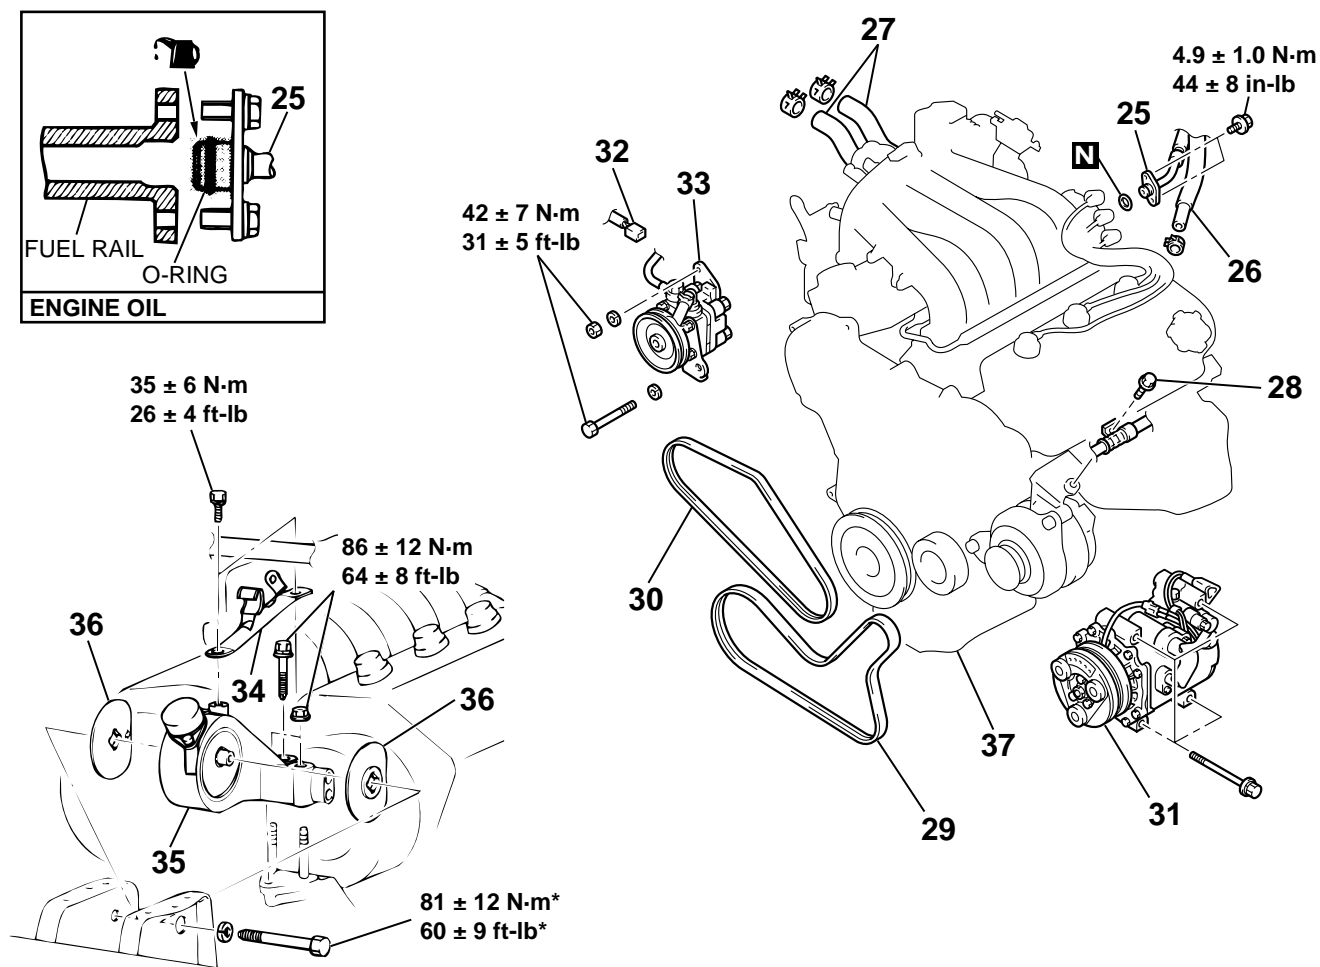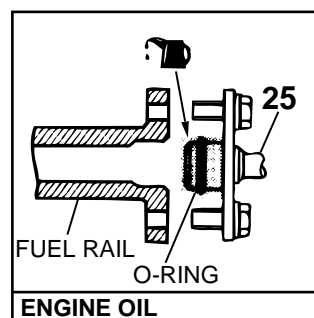

AC005055AC

- >>D<< 25. HIGH-PRESSURE FUEL HOSE CONNECTION
26. FUEL RETURN HOSE CONNECTION
27. HEATER HOSE CONNECTION
28. SUCTION HOSE CONNECTION
29. DRIVE BELT (GENERATOR AND A/C COMPRESSOR)
30. DRIVE BELT (POWER STEERING OIL PUMP)

<<A>>

31. A/C COMPRESSOR
32. POWER STEERING PRESSURE SWITCH CONNECTOR

<>

33. POWER STEERING OIL PUMP
34. ENGINE MOUNT STAY

<<C>>

- TRANSAXLE ASSEMBLY

<<D>>

>>C<<

35. ENGINE MOUNT BRACKET

>>B<<

36. ENGINE MOUNT STOPPER

<<E>>

>>A<<

37. ENGINE ASSEMBLY

Required Special Tools:

- MB991453: Engine Hanger Assembly
- MZ203827: Engine Lifter
- MB991454: Engine hanger balancer (MB991453, part of the engine hanger attachment set)
- MB991895: Engine Hanger

<VEHICLE WITH VARIABLE INDUCTION CONTROL (VIC) SYSTEM>

⚠ CAUTION


*: Indicates parts which should be temporarily tightened, and then fully tightened after placing the vehicle horizontally and loading the full weight of the engine on the vehicle body.

Pre-removal Operation

- Hood Removal (Refer to GROUP 42, Hood [P.42-7.](#))
- Fuel Line Pressure Reduction [Refer to GROUP 13B, On-vehicle Service – Fuel Pump Relay Disconnection (How to Reduce Pressurized Fuel Lines) [P.13B-682.](#)]
- Engine Coolant Draining [Refer to GROUP 00, Maintenance Service – Engine Coolant (Change) [P.00-56.](#)]
- Strut Tower Bar Removal (Refer to GROUP 42, Strut Tower Bar [P.42-11.](#))
- Air Cleaner Removal (Refer to GROUP 15, Air Cleaner [P.15-6.](#))
- Reserve Tank and Radiator Removal (Refer to GROUP 14, Radiator [P.14-21.](#))
- Front Exhaust Pipe Removal (Refer to GROUP 15, Exhaust Pipe and Main Muffler [P.15-22.](#))

Post-installation Operation

- Front Exhaust Pipe Installation (Refer to GROUP 15, Exhaust Pipe and Main Muffler [P.15-22.](#))
- Reserve Tank and Radiator Installation (Refer to GROUP 14, Radiator [P.14-21.](#))
- Air Cleaner Installation (Refer to GROUP 15, Air Cleaner [P.15-6.](#))
- Strut Tower Bar Installation (Refer to GROUP 42, Strut Tower Bar [P.42-11.](#))
- Drive Belt Tension Adjustment [Refer to GROUP 00 Maintenance Service – Drive Belts (Check Condition) [P.00-44.](#)]
- Engine Coolant Refilling [Refer to GROUP 00, Maintenance Service – Engine Coolant (Change) [P.00-56.](#)]
- Accelerator Cable Adjustment (Refer to GROUP 17, On-vehicle Service – Accelerator Cable Check and Adjustment [P.17-5.](#))
- Hood Installation (Refer to GROUP 42, Hood [P.42-7.](#))

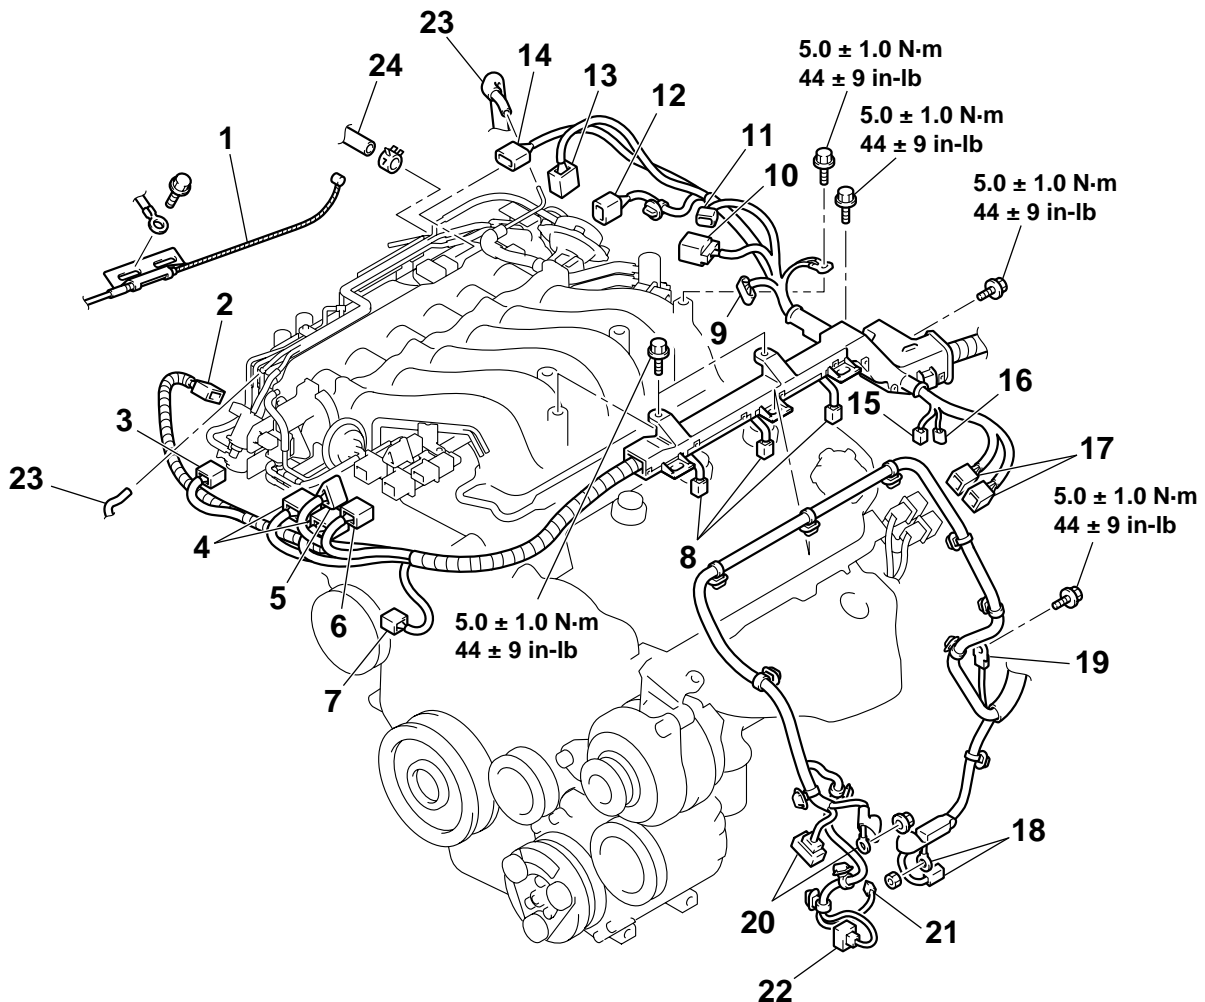


AC106161AB

REMOVAL STEPS

1. ACCELERATOR CABLE CONNECTION
2. EGR SOLENOID VALVE CONNECTOR
3. VARIABLE INDUCTION SOLENOID VALVE CONNECTOR
4. RIGHT BANK HEATED OXYGEN SENSOR CONNECTOR
5. CRANKSHAFT POSITION SENSOR CONNECTOR
6. KNOCK SENSOR CONNECTOR
7. CONTROL WIRING HARNESS AND POWER STEERING WIRING HARNESS COMBINATION CONNECTOR
8. INJECTOR CONNECTOR
9. DISTRIBUTOR CONNECTOR
10. CONTROL WIRING HARNESS AND INJECTOR WIRING HARNESS COMBINATION CONNECTOR
11. PURGE SOLENOID VALVE CONNECTOR
12. IDLE AIR CONTROL MOTOR CONNECTOR
13. THROTTLE POSITION SENSOR CONNECTOR

REMOVAL STEPS (Continued)

14. MANIFOLD DIFFERENTIAL PRESSURE SENSOR CONNECTOR
15. ENGINE COOLANT TEMPERATURE GAUGE UNIT CONNECTOR
16. ENGINE COOLANT TEMPERATURE SENSOR CONNECTOR
17. LEFT BANK HEATED OXYGEN SENSOR CONNECTOR
18. STARTER CONNECTOR
19. GROUND WIRE CONNECTION
20. GENERATOR CONNECTION
21. OIL PRESSURE SWITCH CONNECTOR
22. A/C COMPRESSOR CONNECTOR
23. VACUUM HOSE CONNECTION
24. BRAKE BOOSTER VACUUM HOSE CONNECTION

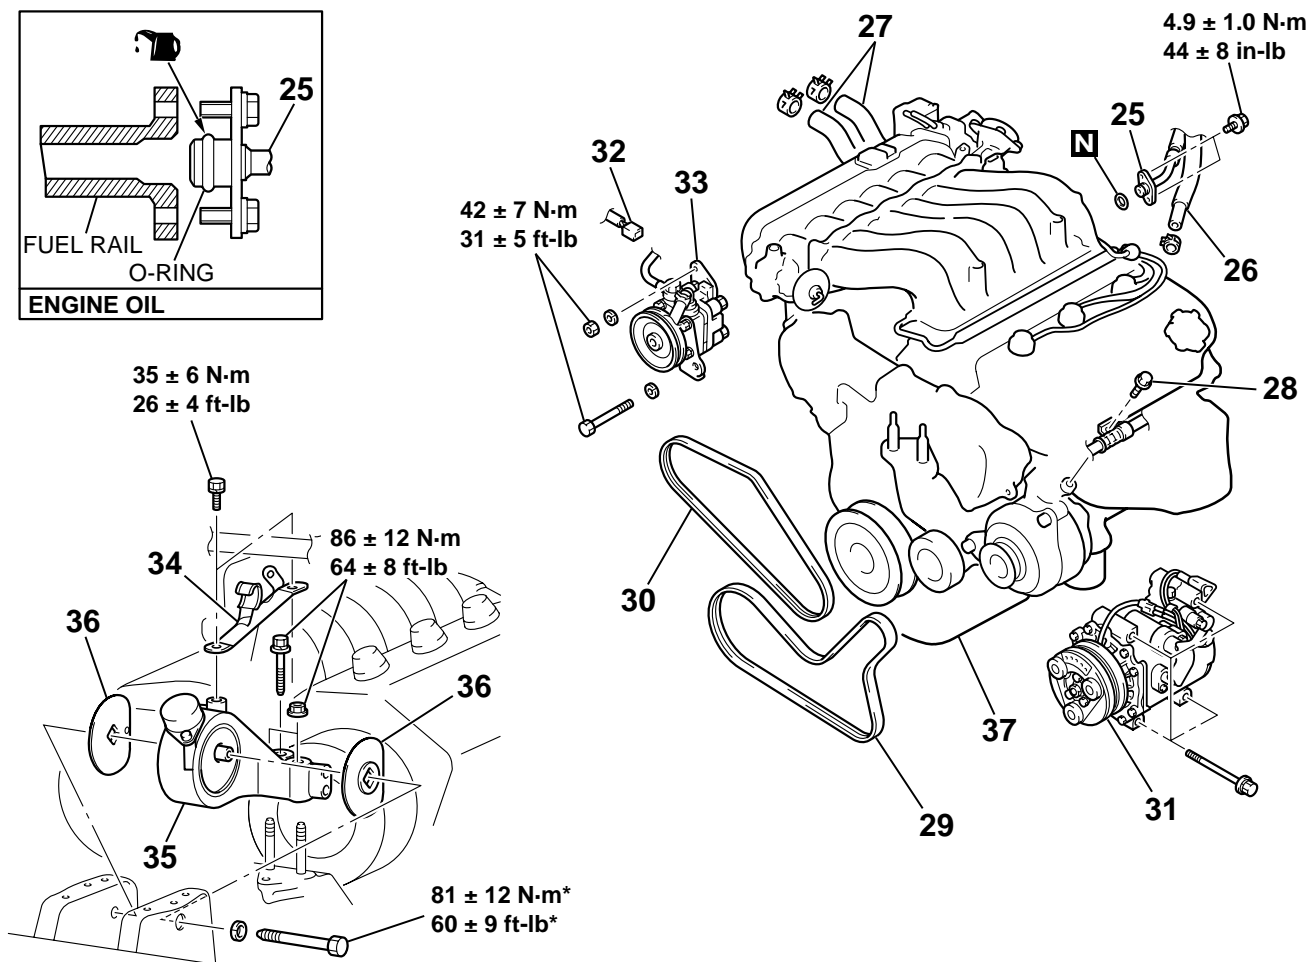

AC106162AB

- >>D<< 25. HIGH-PRESSURE FUEL HOSE CONNECTION
26. FUEL RETURN HOSE CONNECTION
27. HEATER HOSE CONNECTION
28. SUCTION HOSE CONNECTION
29. DRIVE BELT (GENERATOR AND A/C COMPRESSOR)
30. DRIVE BELT (POWER STEERING OIL PUMP)

<<A>>

31. A/C COMPRESSOR
32. POWER STEERING PRESSURE SWITCH CONNECTOR

<>

33. POWER STEERING OIL PUMP
34. ENGINE MOUNT STAY

<<C>>

- TRANSAXLE ASSEMBLY

<<D>>

>>C<<

35. ENGINE MOUNT BRACKET

>>B<<

36. ENGINE MOUNT STOPPER

<<E>>

>>A<<

37. ENGINE ASSEMBLY

Required Special Tools:

- MB991453: Engine Hanger Assembly
- MZ203827: Engine Lifter
- MB991454: Engine hanger balancer (MB991453, part of the engine hanger attachment set)
- MB991895: Engine Hanger

REMOVAL SERVICE POINTS

<<A>> A/C COMPRESSOR REMOVAL

Remove the A/C compressor from the compressor bracket with the hose attached.

NOTE: Place the removed A/C compressor where it will not be a hindrance when removing and installing the engine assembly, and secure it with a cord or wire.

<> POWER STEERING OIL PUMP REMOVAL

Remove the power steering oil pump from the engine with the hose attached.

NOTE: Place the removed power steering oil pump in a place where it will not be a hindrance when removing and installing the engine assembly, and secure it with a cord or wire.

⚠ CAUTION

Do not remove the flywheel mounting bolt shown by the arrow. If this bolt is removed, the flywheel will become out of balance and damaged.

1. <Engine lifter MZ2073827 is used>

Remove the transaxle assembly.

<M/T>: Refer to GROUP 22A, Transaxle Assembly [P.22A-16](#).

<A/T>: Refer to GROUP 23A, Transaxle Assembly [P.23A-366](#).




2. <Engine hanger MB991895 is used>

(1) Loosely fit the two radiator support upper insulator mounting bolts to the vehicle body.

(2) Remove the transaxle assembly.


<M/T>: Refer to GROUP 22A, Transaxle Assembly [P.22A-16](#).

<A/T>: Refer to GROUP 23A, Transaxle Assembly [P.23A-366](#).

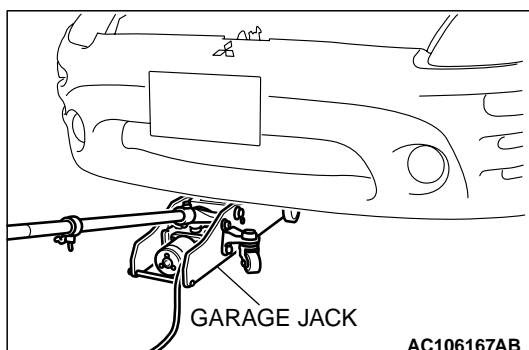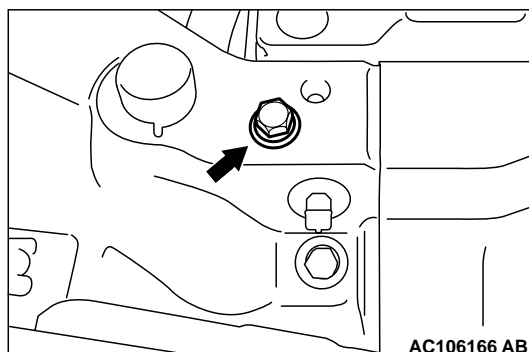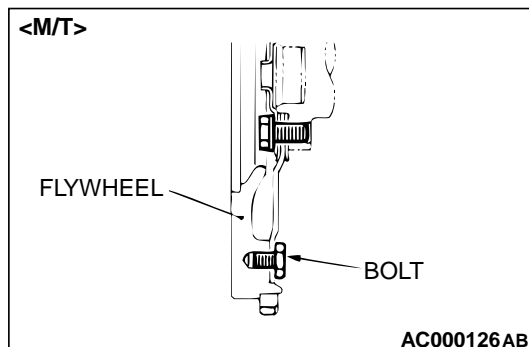


<<D>> ENGINE MOUNT BRACKET REMOVAL


1. Support the engine with a garage jack.

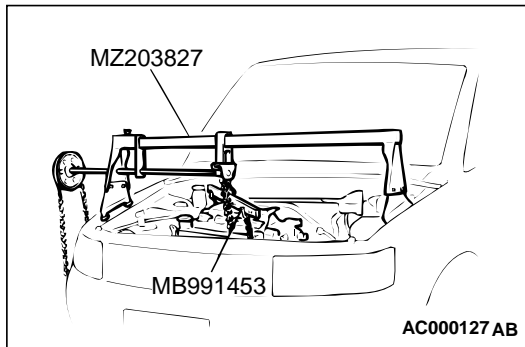


2. <Engine lifter MZ2073827 is used>
Remove special tools MB991453 and MZ203827 which were attached when the transaxle assembly was removed.

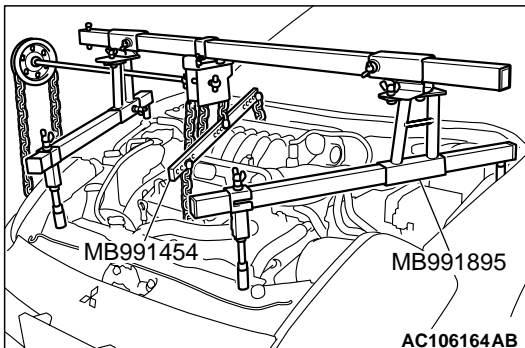

3. <Engine hanger MB991895 is used>
Remove special tools MB991895 which were attached when the transaxle assembly was removed.

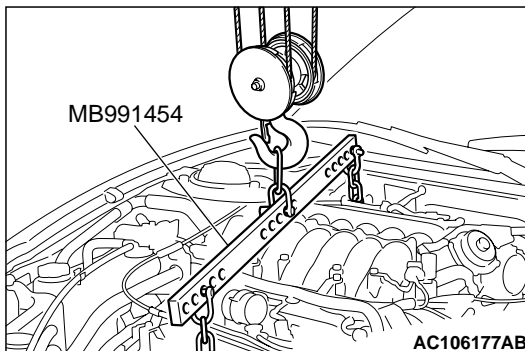

4. Hold the engine assembly with a chain block or similar tool.
5. Place a garage jack against the engine oil pan with a piece of wood in between, jack up the engine so that the weight of the engine is no longer being applied to the engine mount bracket, and then remove the engine mount bracket.

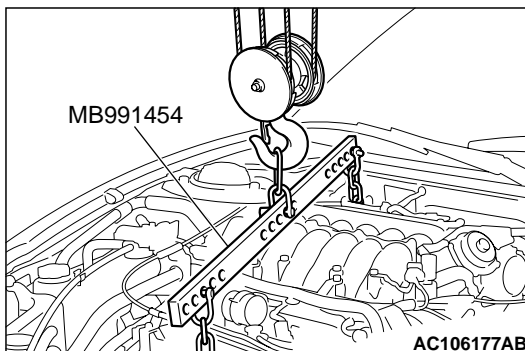


<<E>> ENGINE ASSEMBLY REMOVAL

After checking that all cables, hoses and harness connectors, etc., are disconnected from the engine, lift the chain block slowly to remove the engine assembly upward from the engine compartment.


INSTALLATION SERVICE POINTS

>>A<< ENGINE ASSEMBLY INSTALLATION


Install the engine assembly, checking that the cables, hoses, and harness connectors are not clamped.

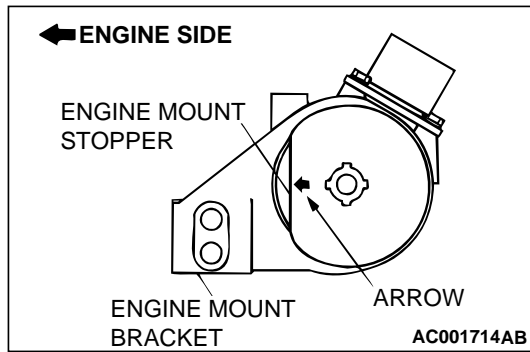**>>B<< ENGINE MOUNT STOPPER INSTALLATION**

Clamp the engine mount stopper so that the arrow points in the direction as shown in the diagram.

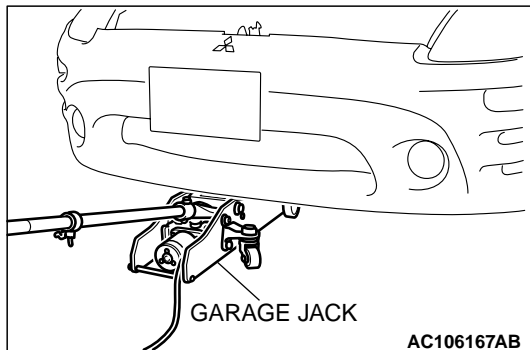
**>>C<< ENGINE MOUNT BRACKET INSTALLATION**


1. Place a garage jack against the engine oil pan with a piece of wood in between, and install the engine mount bracket while adjusting the position of the engine.
2. Support the engine with the garage jack.

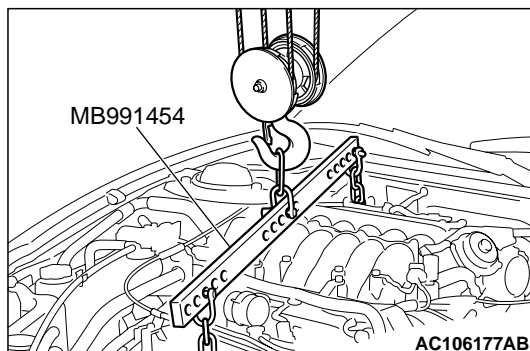


3. <Engine lifter MZ2073827 is used>

Remove the chain block and support the engine assembly with special tools MB991453 and MZ203827.

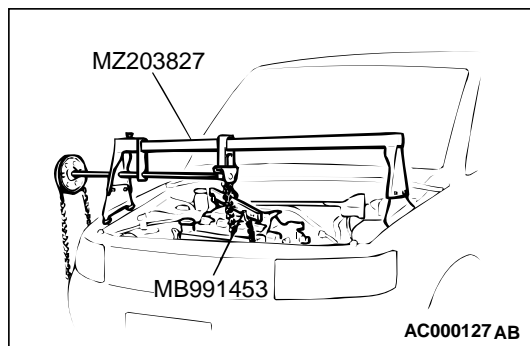

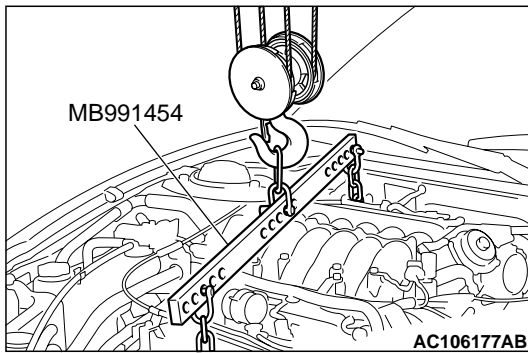

4. <Engine hanger MB991895 is used>
Remove the chain block and support the engine assembly with special tools MB991895.

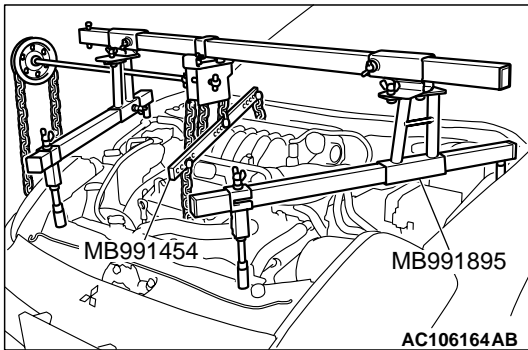


>>D<< HIGH-PRESSURE FUEL HOSE INSTALLATION

⚠ CAUTION

Do not allow engine oil to enter the fuel rail.

1. Apply a small amount of new engine oil to the O-ring.
2. Turning the high-pressure fuel hose to the right and left, install it to the fuel rail, while being careful not to damage the O-ring. After installing, check that the hose turns smoothly.
3. If the hose does not turn smoothly, the O-ring may be clamped. Disconnect the high-pressure fuel hose and check the O-ring for damage.
4. Re-insert the fuel rail and check that the hose turns smoothly.

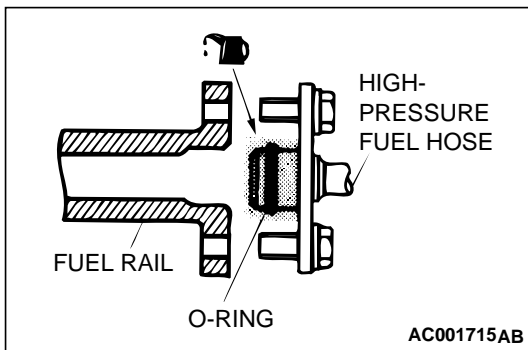

CAMSHAFT AND CAMSHAFT OIL SEAL

REMOVAL AND INSTALLATION

M1112001900325


<LEFT BANK>

Pre-removal and Post-installation Operation

- Timing Belt Removal and Installation (Refer to P.11C-37.)



APPLY ENGINE OIL TO
ALL THE MOVING PARTS
WHEN INSTALLING

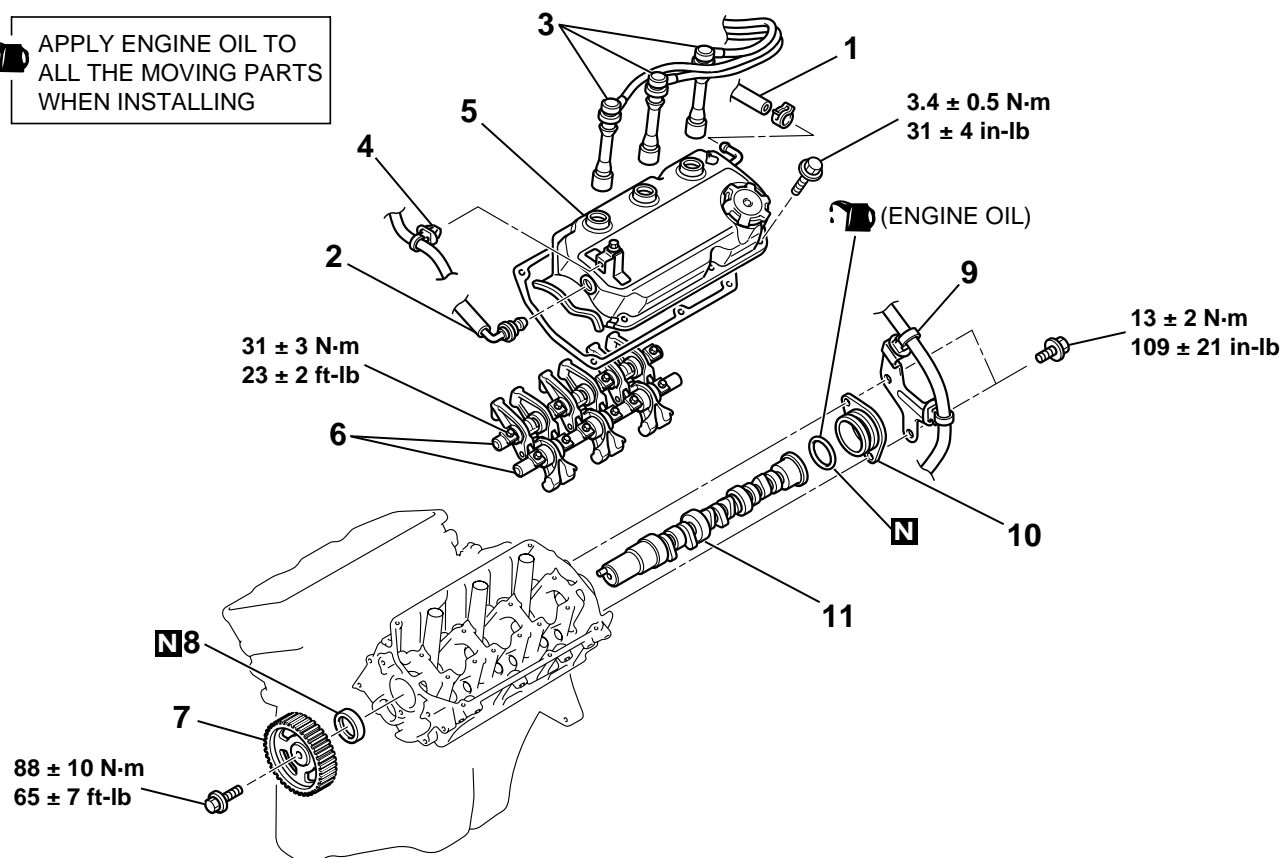

AC004834AC

CAMSHAFT REMOVAL STEPS

- THERMOSTAT HOUSING ASSEMBLY (REFER TO GROUP 14, WATER HOSE AND PIPE P.14-28.)
- 1. BLOW-BY HOSE CONNECTION
- 2. PCV HOSE CONNECTION
- 3. SPARK PLUG CABLE
- 4. BATTERY CABLE CONNECTION
- 5. ROCKER COVER

<<A>> >>D<<

<> >>B<<

CAMSHAFT REMOVAL STEPS

- 6. ROCKER ARM AND SHAFT ASSEMBLY
- 7. CAMSHAFT SPROCKET
- 9. BATTERY CABLE AND HARNESS BRACKET
- 10. THRUST CASE
- 11. CAMSHAFT

CAMSHAFT OIL SEAL
REMOVAL STEPS

<> >>B<<

>>A<<

- 7. CAMSHAFT SPROCKET
- 8. CAMSHAFT OIL SEAL


Required Special Tools:

- MB990767: End Yoke Holder
- MB991559: Camshaft Oil Seal Adapter
- MD998443: Auto-lash Adjuster Holder
- MD998713: Camshaft Oil Seal Installer
- MD998715: Crankshaft Pulley Holder Pin

<RIGHT BANK>

Pre-removal and Post-installation Operation

- Timing Belt Removal and Installation (Refer to P.11C-37.)

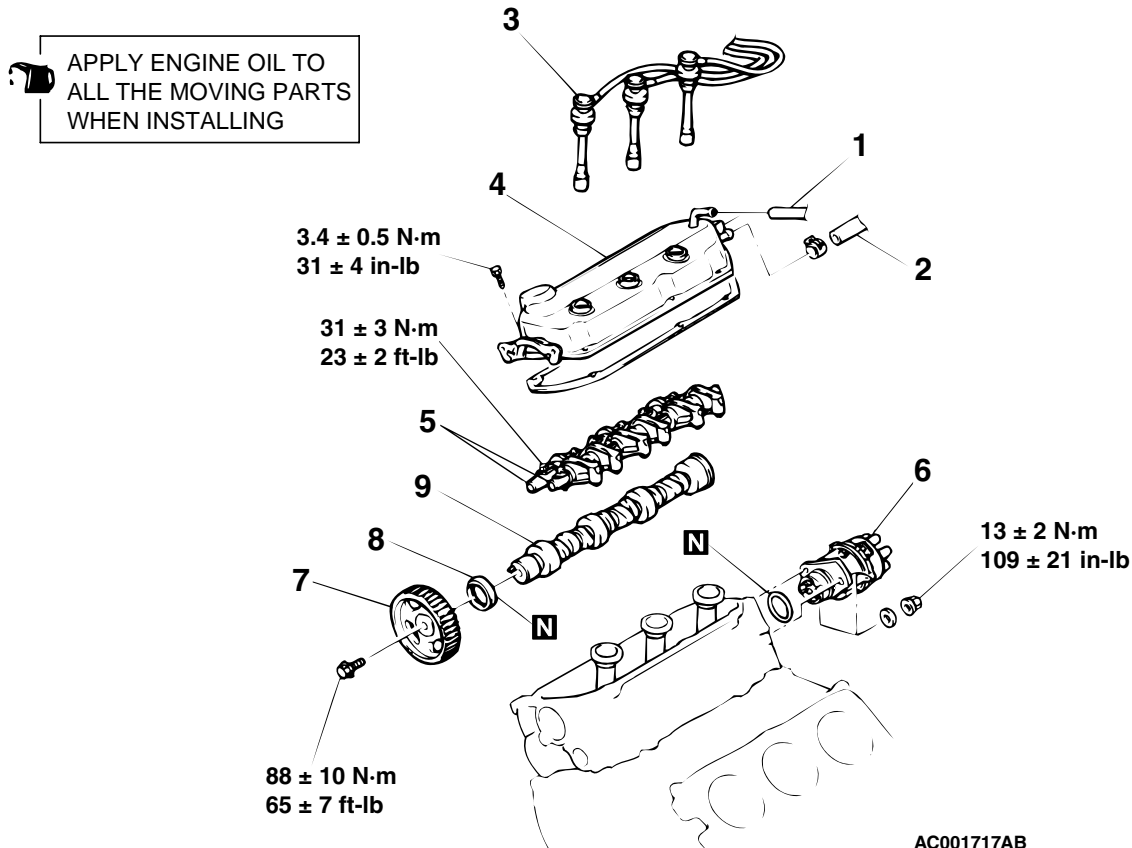

AC001717AB

CAMSHAFT REMOVAL STEPS

- INTAKE MANIFOLD PLENUM (REFER TO GROUP 15, INTAKE MANIFOLD PLENUM P.15-7.)
- 1. BREATHER HOSE CONNECTION
- 2. BLOW-BY HOSE CONNECTION
- 3. SPARK PLUG CABLE
- 4. ROCKER COVER

<<A>> >>D<<

<> >>C<<

<> >>B<<

<> >>B<<

>>A<<

CAMSHAFT REMOVAL STEPS

- 5. ROCKER ARM AND SHAFT ASSEMBLY
- 6. DISTRIBUTOR
- 7. CAMSHAFT SPROCKET
- 9. CAMSHAFT

CAMSHAFT OIL SEAL REMOVAL STEPS

- 7. CAMSHAFT SPROCKET
- 8. CAMSHAFT OIL SEAL

Required Special Tools:

- MB990767: End Yoke Holder
- MD998443: Auto-lash Adjuster Holder
- MD998713: Camshaft Oil Seal Installer
- MD998715: Crankshaft Pulley Holder Pin

REMOVAL SERVICE POINTS


<<A>> ROCKER ARM AND SHAFT ASSEMBLY REMOVAL

1. Install special tool MD998443 as shown in the illustration so that the lash adjusters will not fall out.

⚠ CAUTION


Never disassemble the rocker arm and shaft assembly.

2. Loosen the rocker arm and shaft assembly mounting bolts, then remove the rocker arm and shaft assembly with the bolts still attached.

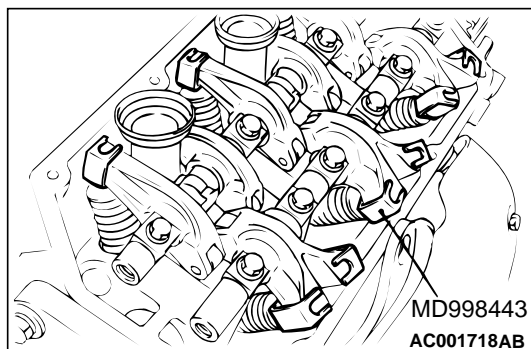

<> CAMSHAFT SPROCKET REMOVAL


1. Use special tools MB990767 and MD998715 to loosen the camshaft sprocket mounting bolt.
2. Remove the camshaft sprocket.

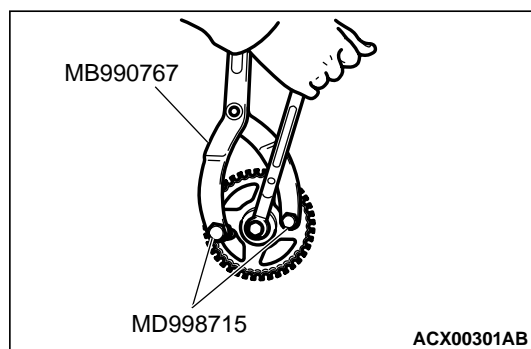

INSTALLATION SERVICE POINTS


>>A<< CAMSHAFT OIL SEAL INSTALLATION

1. Apply engine oil to the camshaft oil seal lip.
2. Use special tools MB991559 and MD998713 to press-fit the camshaft oil seal.

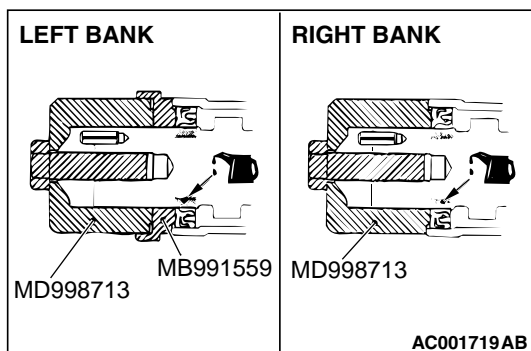

>>B<< CAMSHAFT SPROCKET INSTALLATION

1. Install the camshaft sprocket.

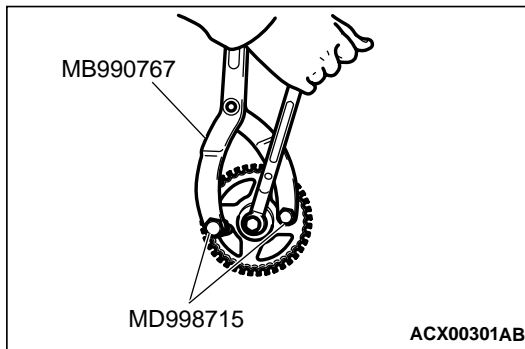


2. Use special tools MB990767 and MD998715 to tighten the camshaft sprocket mounting bolt to the specified torque.


Tightening torque: 88 ± 10 N·m (65 ± 7 ft-lb)

>>C<< DISTRIBUTOR INSTALLATION

1. Align the timing mark of the camshaft sprocket (right bank) with that of the cylinder head.

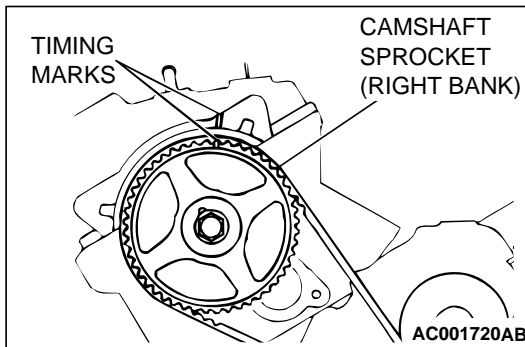

2. Align the mating marks on the distributor housing and coupling, then install the distributor to the engine.

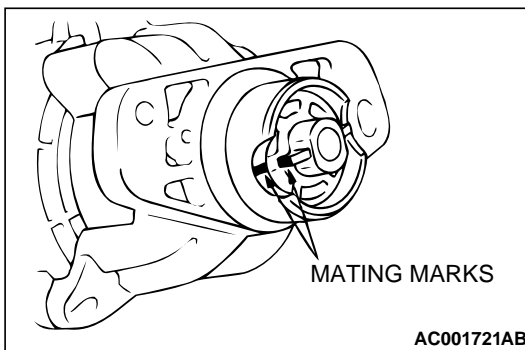



>>D<< ROCKER ARM AND SHAFT ASSEMBLY INSTALLATION

1. Rotate the camshaft until the dowel pin on its front end is located as shown in the illustration.

NOTE: Placing the camshaft in the illustrated position minimizes the amount of cam lift, making it easier to install the rocker arm and shaft assembly.

2. Temporarily tighten the rocker shaft with the bolts so that all rocker arms on the inlet valve side do not push the valves.

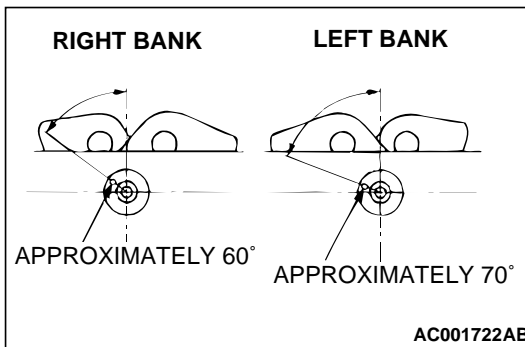

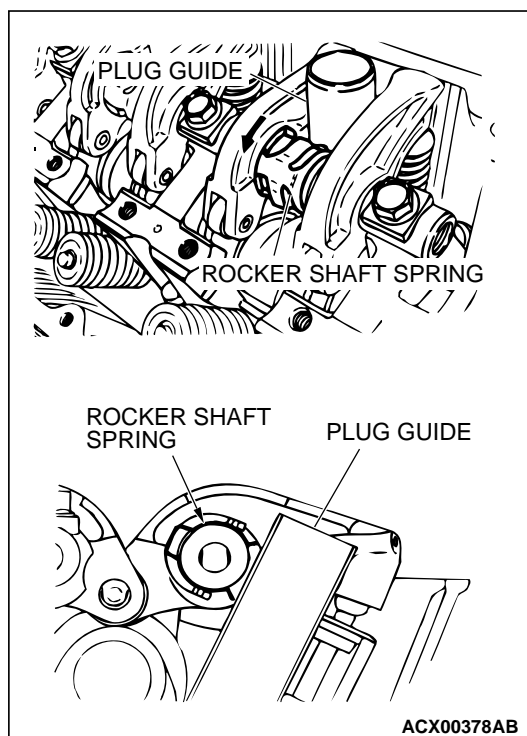

3. Position the rocker shaft spring so that it takes a right angle against the plug guide.

NOTE: Set the rocker shaft spring before installing the rocker arm and shaft assembly on the exhaust side.

4. Tighten the rocker arm and shaft assembly mounting bolts to the specified torque.

Tightening torque: 31 ± 3 N·m (23 ± 2 ft-lb)

5. Remove special tool MD998443.



OIL PAN

REMOVAL AND INSTALLATION

M1112002800291

Pre-removal and Post-installation operation

- Engine Oil Draining and Refilling (Refer to GROUP 12, On-vehicle Service – Engine Oil Replacement P.12-3.)
- Front Exhaust Pipe Removal and Installation (Refer to GROUP 15, Exhaust Pipe and Main Muffler P.15-19.)

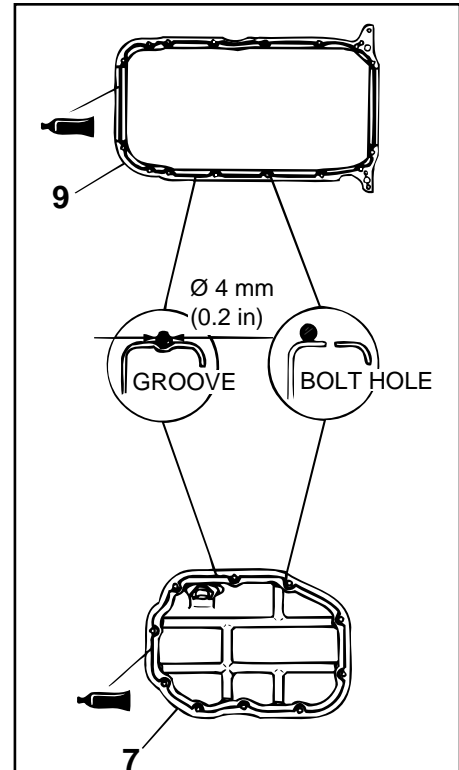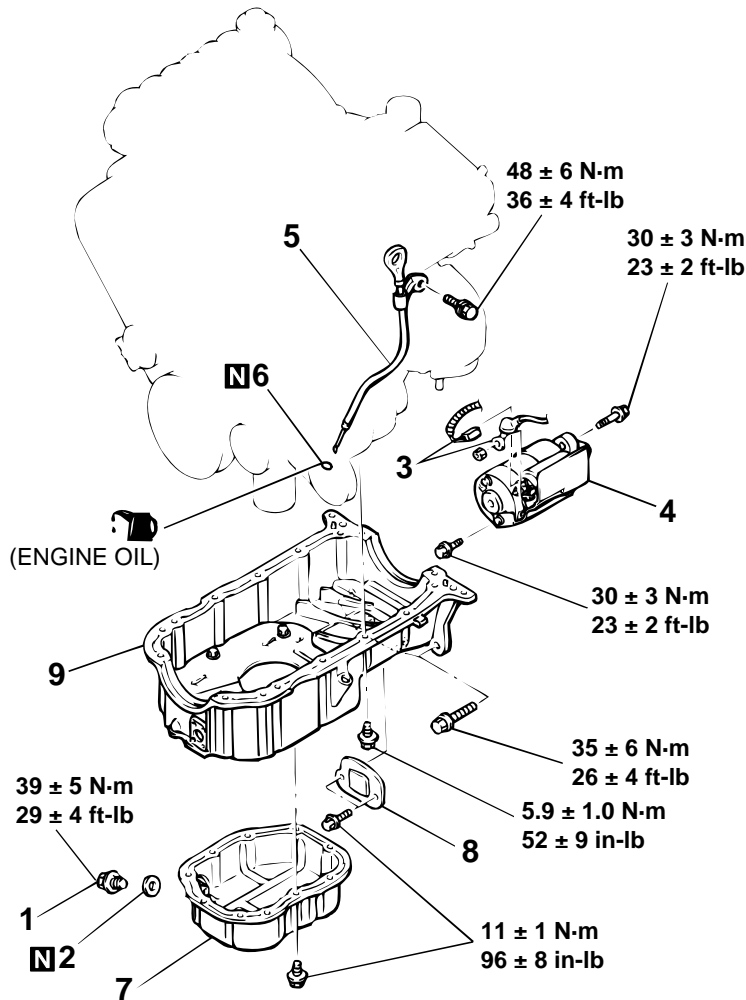

SEALANT:
MITSUBISHI GENUINE PART
NO. MD970389 OR
EQUIVALENT

AC001723AB

LOWER OIL PAN REMOVAL STEPS

- <<A>> >>C<< >>B<<
1. DRAIN PLUG
 2. DRAIN PLUG GASKET
 7. LOWER OIL PAN

UPPER OIL PAN REMOVAL STEPS

- >>C<<
1. DRAIN PLUG
 2. DRAIN PLUG GASKET
 3. STARTER CONNECTOR

UPPER OIL PAN REMOVAL STEPS (Continued)

- <<A>> >>B<< <> >>A<<
4. STARTER
 5. OIL DIPSTICK AND DIPSTICK GUIDE
 6. O-RING
 7. LOWER OIL PAN
 8. OIL PAN BOLT HOLE COVER
 9. UPPER OIL PAN

REMOVAL SERVICE POINTS


<<A>> LOWER OIL PAN REMOVAL

1. Remove the oil pan, lower mounting bolts.

⚠ CAUTION


Do not use the oil pan remover (MD998727). It will damage the upper oil pan.

2. Place a wooden block against the lower oil pan as shown in the illustration and remove by tapping with a hammer.

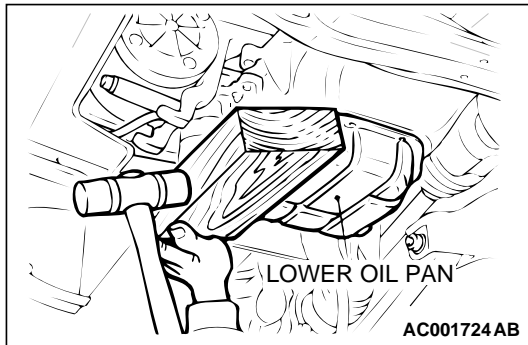

<> UPPER OIL PAN REMOVAL

1. Remove the upper oil pan mounting bolts.
2. Screw the bolts (M10) securing the upper oil pan to the transaxle assembly in the illustrated bolt holes, then remove the upper oil pan.

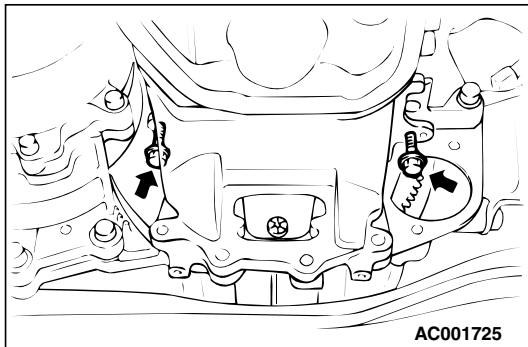


INSTALLATION SERVICE POINTS

>>A<< UPPER OIL PAN INSTALLATION

CAUTION


The bolt holes for bolts 13 and 14 in the illustration are cut away on the transaxle side. Be careful not to insert these bolts at an angle.

Tighten the oil pan, upper mounting bolts in the order shown.

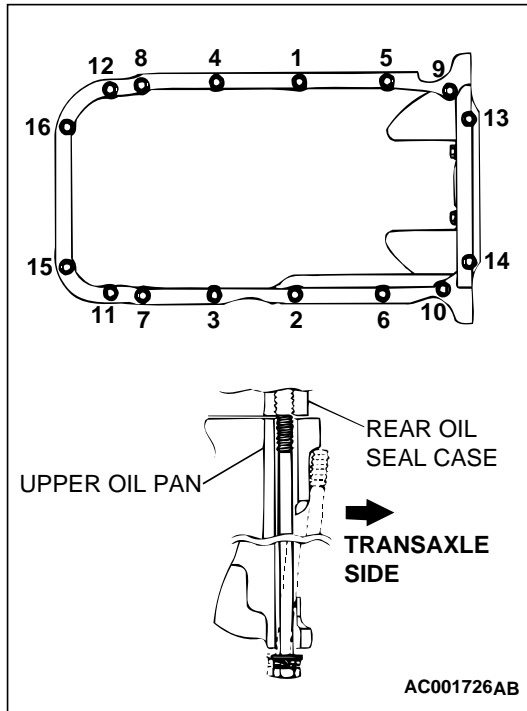


>>B<< LOWER OIL PAN INSTALLATION

Tighten the lower oil pan mounting bolts in the order shown.

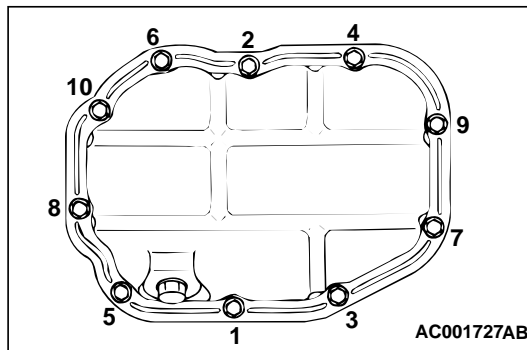

>>C<< DRAIN PLUG GASKET INSTALLATION

Replace the gasket with a new gasket. Install the new gasket in the direction shown in the illustration.

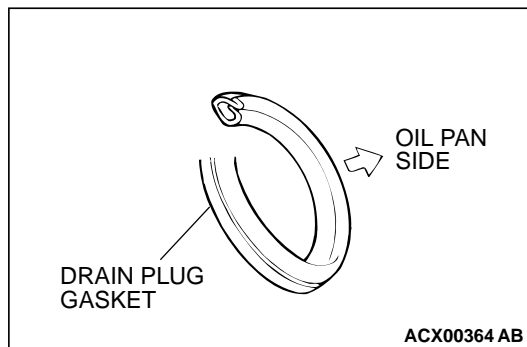

OIL PAN INSPECTION

M1112002900135

- Check the oil pan for cracks.
- Check the oil pan sealant-coated surface for damage and deformation.



CRANKSHAFT FRONT OIL SEAL

REMOVAL AND INSTALLATION

M1112003400285

Pre-removal and Post-installation Operation

- Timing Belt Removal and Installation (Refer to [P.11C-37.](#))

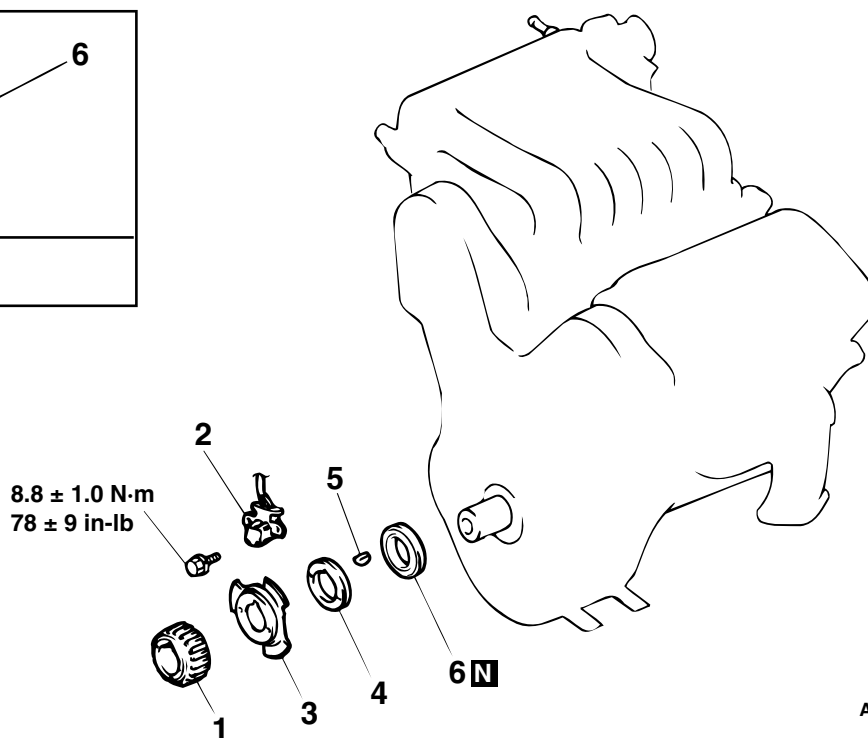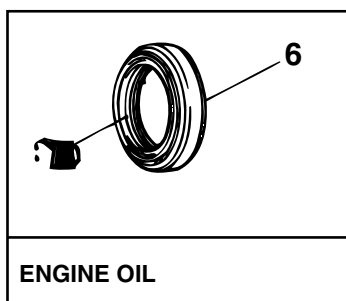

AC001728AB

REMOVAL STEPS

- >>B<< 1. CRANKSHAFT SPROCKET
2. CRANKSHAFT POSITION SENSOR
- >>B<< 3. CRANKSHAFT SENSING BLADE

REMOVAL STEPS (Continued)

- >>B<< 4. CRANKSHAFT SPACER
5. KEY
- >>A<< 6. CRANKSHAFT FRONT OIL SEAL


Required Special Tool:

- MD998717: Crankshaft Front Oil Seal Installer


INSTALLATION SERVICE POINTS

>>A<< CRANKSHAFT FRONT OIL SEAL INSTALLATION

1. Apply a small amount of engine oil to the oil seal lip and then insert.

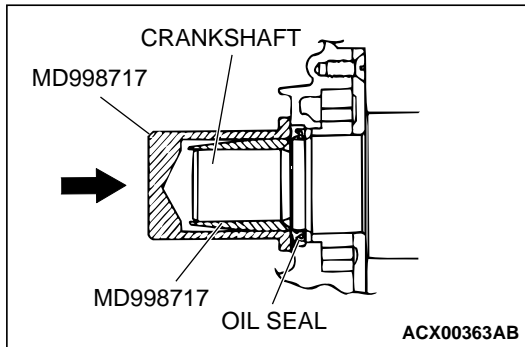

2. Using special tool MD998717, tap the oil seal into the front case.

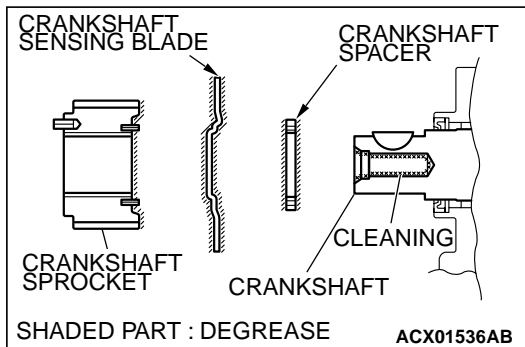



>>B<< CRANKSHAFT SPACER/CRANKSHAFT SENSING BLADE/CRANKSHAFT SPROCKET INSTALLATION

To prevent the crankshaft pulley mounting bolt from loosening, degrease or clean the crankshaft, the crankshaft spacer, the crankshaft sensing blade and the crankshaft at the shown positions.

CRANKSHAFT REAR OIL SEAL

REMOVAL AND INSTALLATION

M1112003700286

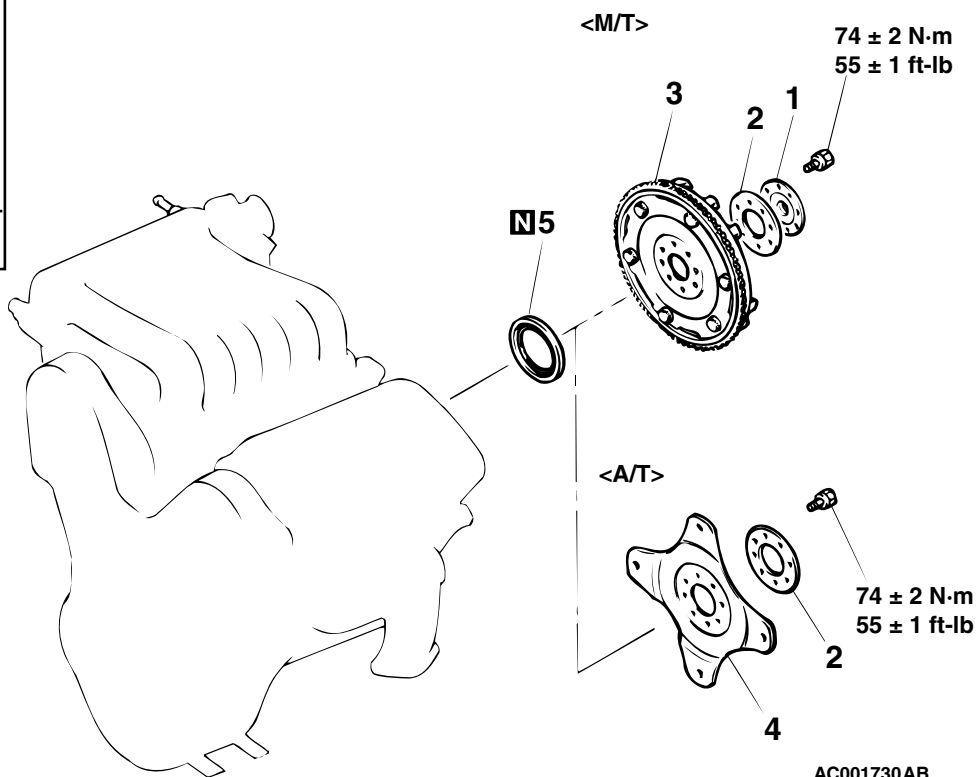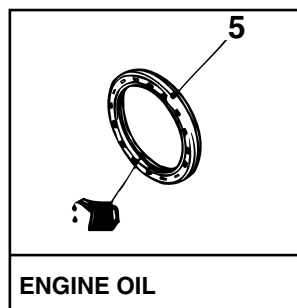

<<A>>

REMOVAL STEPS

- TRANSAXLE ASSEMBLY
- CLUTCH COVER AND CLUTCH DISC <M/T> (REFER TO GROUP 21B, CLUTCH [P.21B-2.](#))

<>

>>B<<

REMOVAL STEPS (Continued)

<>

>>B<<

1. PLATE <M/T>

<>

>>B<<

2. ADAPTER PLATE

<>

>>B<<

3. FLYWHEEL <M/T>

<>

>>B<<

4. DRIVE PLATE <A/T>

>>B<<

>>A<<

5. CRANKSHAFT REAR OIL SEAL

Required Special Tools:

- MD998718: Crankshaft Rear Oil Seal Installer
- MD998781: Flywheel Stopper

REMOVAL SERVICE POINTS


<<A>> TRANSAXLE ASSEMBLY REMOVAL

CAUTION

Do not remove the flywheel mounting bolt shown by the arrow. If this bolt is removed, the flywheel will become out of balance and damaged.


<M/T>: Refer to GROUP 22A, Transaxle Assembly [P.22A-16.](#)

<A/T>: Refer to GROUP 23A, Transaxle Assembly [P.23A-366.](#)

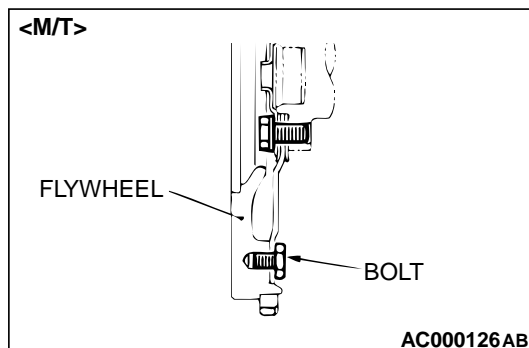

**<> PLATE <M/T>/ADAPTER PLATE/FLYWHEEL <M/T>/
DRIVE PLATE <A/T> REMOVAL**


Use special tool MD998781 to secure the flywheel or drive plate, and remove the bolts.

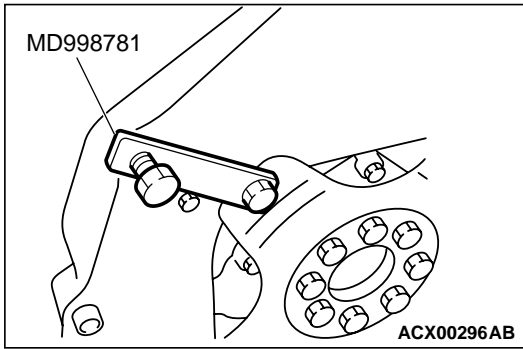

INSTALLATION SERVICE POINTS


>>A<< CRANKSHAFT REAR OIL SEAL INSTALLATION

1. Apply a small amount of engine oil to the entire circumference of the oil seal lip.
2. Use special tool MD998718 to tap in the oil seal as shown in the illustration.

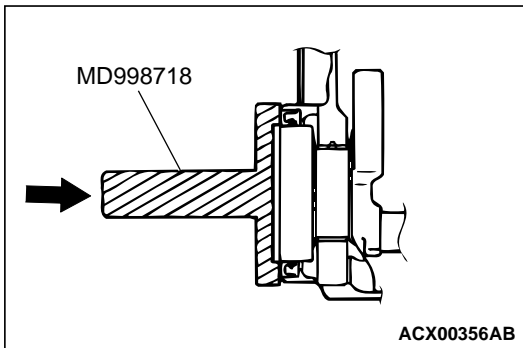

**>>B<< DRIVE PLATE <A/T>/FLYWHEEL <M/T>/ADAPTER
PLATE/PLATE <M/T> INSTALLATION**

Use special tool MD998781 to hold the flywheel or drive plate in the same manner as removal. Then install the bolts.

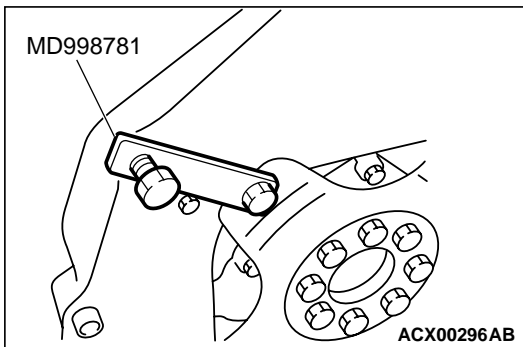


CYLINDER HEAD GASKET

REMOVAL AND INSTALLATION

M1112004000365

Pre-removal and Post-installation Operation

- Engine Coolant Draining and Refilling [Refer to GROUP 00, Maintenance Service – Engine Coolant (Change) [P.00-56.](#)]
- Timing Belt Removal and Installation (Refer to [P.11C-37.](#))
- Generator Removal and Installation (Refer to GROUP 16, Generator [P.16-14.](#))
- Intake Manifold Removal and Installation (Refer to GROUP 15, Intake Manifold [P.15-15.](#))
- Exhaust Manifold Removal and Installation (Refer to GROUP 15, Exhaust Manifold [P.15-19.](#))
- Water Inlet Pipe Removal and Installation (Refer to GROUP 14, Water Hose and Water Pipe [P.14-28.](#))

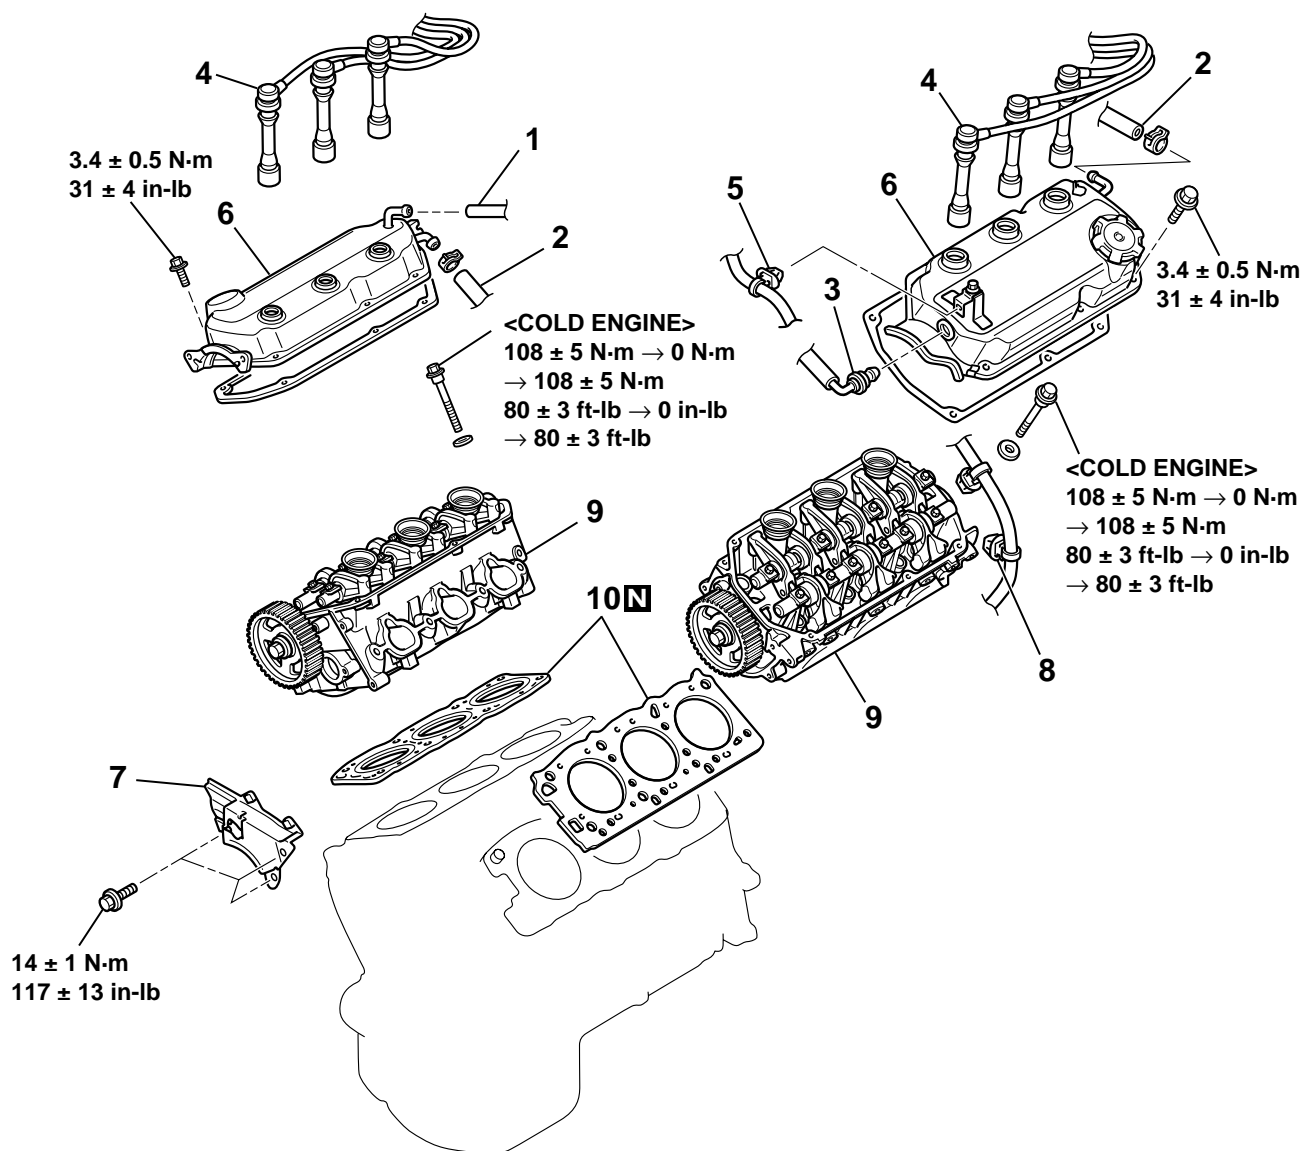

AC004838 AC

REMOVAL STEPS

1. BREATHER HOSE
2. BLOW-BY HOSE
3. PCV HOSE

REMOVAL STEPS (Continued)

4. SPARK PLUG CABLE
5. BATTERY CABLE CONNECTION

REMOVAL STEPS (Continued)

6. ROCKER COVER
7. TIMING BELT REAR COVER
8. BATTERY CABLE AND HARNESS BRACKET
- <<A>> >>B<< 9. CYLINDER HEAD ASSEMBLY
- >>A<< 10. CYLINDER HEAD GASKET


Required Special Tool:

- MD998051: Cylinder Head Bolt Wrench

REMOVAL SERVICE POINT

<<A>> CYLINDER HEAD ASSEMBLY REMOVAL

Using special tool MD998051, loosen the cylinder head bolts in two or three steps in the order of the numbers shown in the illustration, then remove the cylinder head assembly.

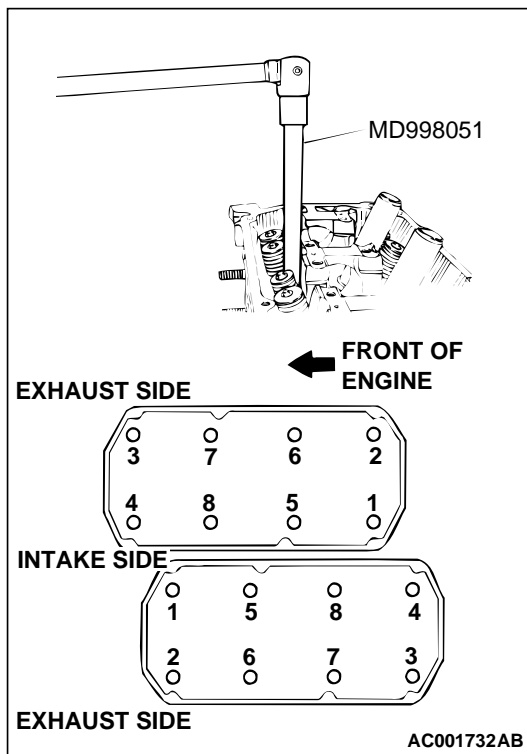

INSTALLATION SERVICE POINTS

>>A<< CYLINDER HEAD GASKET INSTALLATION


1. Wipe off all oil and grease from the gasket mounting surface.
2. Match the shapes of the cylinder head holes with their respective cylinder head gasket holes.

>>B<< CYLINDER HEAD ASSEMBLY INSTALLATION

⚠ CAUTION

Be careful that no foreign material gets into the cylinder, coolant passages or oil passages. Engine damage may result.

1. Use a scraper to clean the gasket surface of the cylinder head assembly.

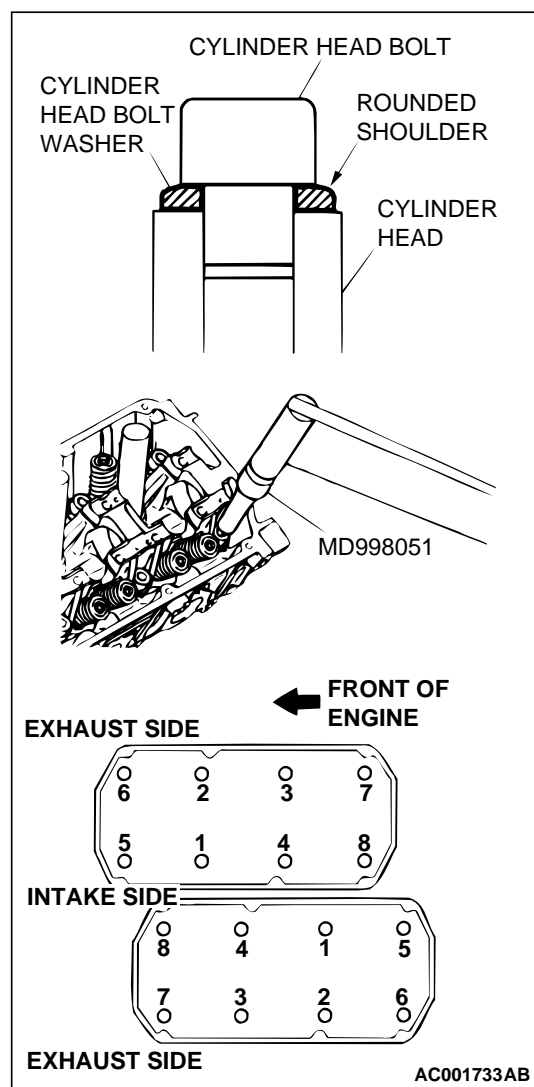**CAUTION**

Attach the cylinder head bolt washer in the direction shown in the illustration.

- Using special tool MD998051 and a torque wrench, tighten the bolts to the specified torque in the order shown in the illustration. (in two or three steps)

Tightening torque: 108 ± 5 N·m (80 ± 3 ft-lb)

- Loosen the mounting bolts in the reverse sequence to that shown.
- Tighten the mounting bolts progressively in the shown sequence to the specified torque again.

Tightening torque: 108 ± 5 N·m (80 ± 3 ft-lb)

TIMING BELT

REMOVAL AND INSTALLATION


M1112004300366

Pre-removal Operation

- Generator Removal (Refer to GROUP 16, Generator P.16-14.)
- Engine Mount Bracket Removal (Refer to GROUP 32, Engine Mounting P.32-4.)

Post-installation Operation

- Engine Mount Bracket Installation (Refer to GROUP 32, Engine Mounting P.32-4.)
- Generator Installation (Refer to GROUP 16, Generator P.16-14.)
- Drive Belt Tension Adjustment [Refer to GROUP 00, Maintenance Service – Drive Belts (Check Condition) P.00-44.]

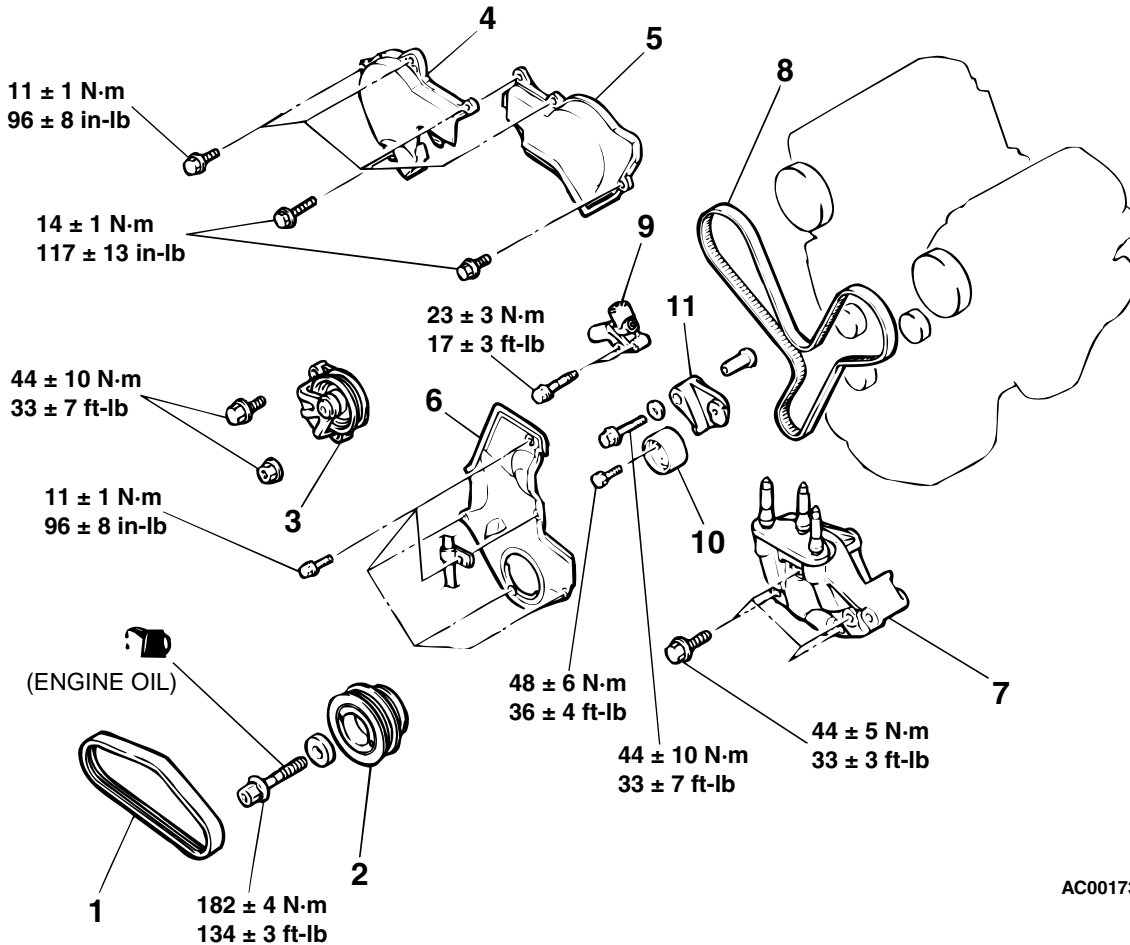

AC001734AB

REMOVAL STEPS

- <<A>> >>D<<
1. DRIVE BELT (POWER STEERING OIL PUMP)
 2. CRANKSHAFT PULLEY
 3. TENSIONER PULLEY ASSEMBLY (POWER STEERING OIL PUMP)
 4. TIMING BELT FRONT UPPER COVER, RIGHT
 5. TIMING BELT FRONT UPPER COVER, LEFT

REMOVAL STEPS (Continued)

- >>C<< <> >>B<< >>A<<
6. TIMING BELT FRONT LOWER COVER
 7. ENGINE SUPPORT BRACKET, RIGHT
 8. TIMING BELT
 9. AUTO-TENSIONER
 10. TENSIONER PULLEY
 11. TENSIONER ARM

Required Special Tools:

- MB990767: End Yoke Holder

- MD998715: Crankshaft Pulley Holder Pin
- MD998767: Tensioner Wrench
- MD998769: Crankshaft Pulley Spacer


REMOVAL SERVICE POINTS

<<A>> CRANKSHAFT PULLEY REMOVAL

CAUTION

Use only the specified special tools, or a damaged pulley damper could result.

Use special tools MB990767 and MD998715 to remove the crankshaft pulley from the crankshaft.

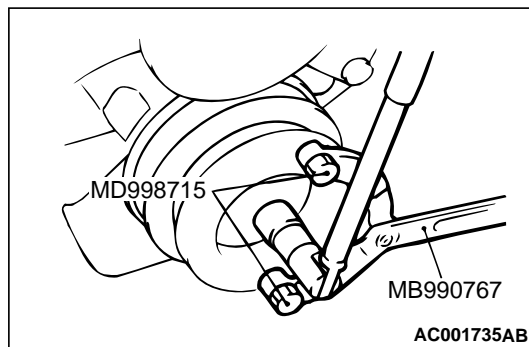


<> TIMING BELT REMOVAL

CAUTION

Never turn the crankshaft counterclockwise.

1. Turn the crankshaft clockwise to align each timing mark and to set the number 1 cylinder to compression top dead center.
2. If the timing belt is to be reused, chalk an arrow on the flat side of the belt, indicating the clockwise direction.
3. Loosen the center bolt of the tensioner pulley, then remove the timing belt.

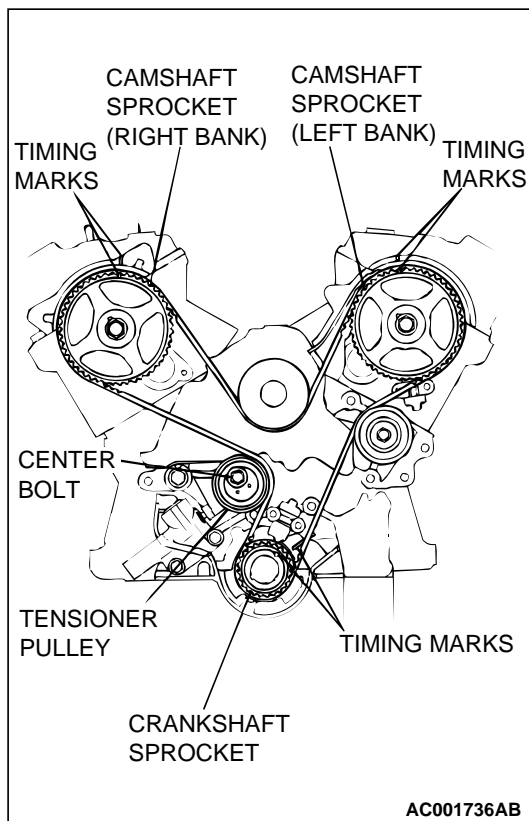

INSTALLATION SERVICE POINTS

>>A<< AUTO-TENSIONER INSTALLATION

1. While holding the auto-tensioner with your hand, press the end of the pushrod against a metal surface (such as the cylinder block) with a force of 98 – 196 N (22 – 44 pound) and measure how far the pushrod is pushed in.

Standard value: Within 1 mm (0.04 inch)

A: Length when no force is applied

B: Length when force is applied

A – B: Amount pushed in

2. If it is not within the standard value range, replace the auto-tensioner.

⚠ CAUTION

- Place the auto-tensioner perpendicular to the jaws of the vice.
- If there is a plug at the base of the auto-tensioner, insert a plain washer onto the end of the auto-tensioner to protect the plug.

3. Place two blocks in a vice as shown in the illustration, and then place the auto-tensioner in the vice.

⚠ CAUTION

Never compress the pushrod too fast, or it may be damaged.




4. Slowly compress the pushrod of the auto-tensioner until pin hole A in the pushrod is aligned with pin hole B in the cylinder.
5. Insert the setting pin into the pin holes once they are aligned.


NOTE: If replacing the auto-tensioner, the pin will already be inserted into the pin holes of the new part.

⚠ CAUTION

Do not remove the setting pin from the auto-tensioner.

6. Install the auto-tensioner to the engine.

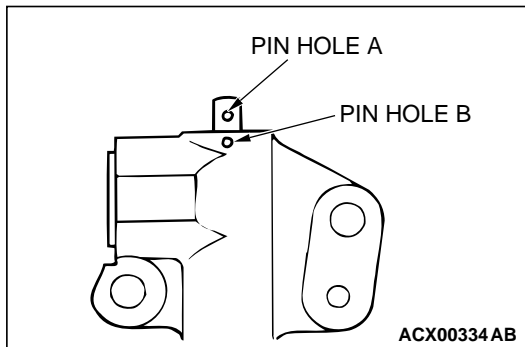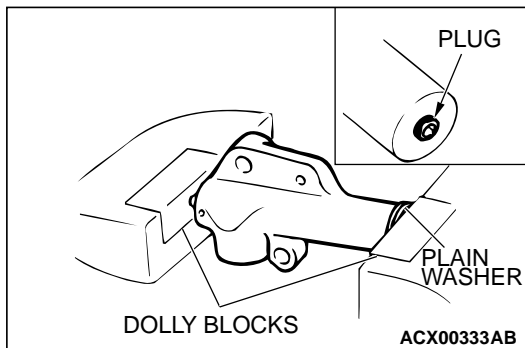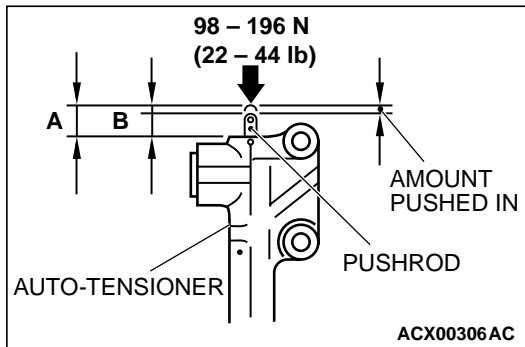


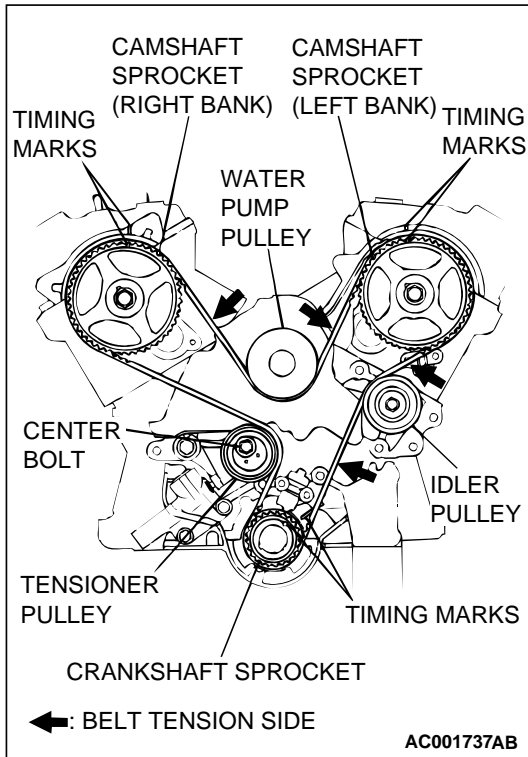
**>>B<< TIMING BELT INSTALLATION**


1. Align the timing marks on the camshaft sprockets with those on the rocker cover and the timing mark on the crankshaft sprocket with that on the engine block as shown in the illustration.

⚠ CAUTION

The camshaft sprocket (right bank) can turn easily due to the spring force applied, so be careful not to get your fingers caught.

2. Install the timing belt by the following procedure so that there is no deflection in the timing belt between each sprocket and pulley.
 - (1) Crankshaft sprocket
 - (2) Idler pulley
 - (3) Camshaft sprocket (Left bank)
 - (4) Water pump pulley
 - (5) Camshaft sprocket (Right bank)
 - (6) Tensioner pulley
3. Turn the camshaft sprocket (Right bank) counterclockwise until the tension side of the timing belt is firmly stretched. Check all the timing marks again.
4. Use special tool MD998767 to push the tensioner pulley into the timing belt, then temporarily tighten the center bolt.
5. Use special tool MD998769 to turn the crankshaft 1/4 turn counterclockwise, then turn it again clockwise until the timing marks are aligned.

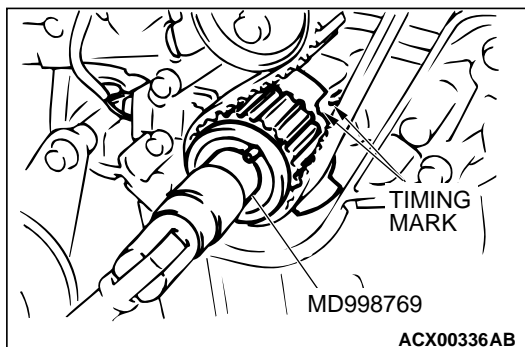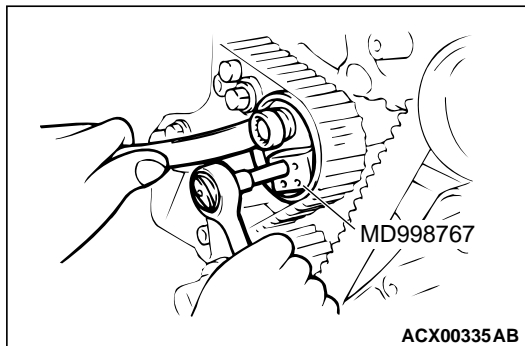

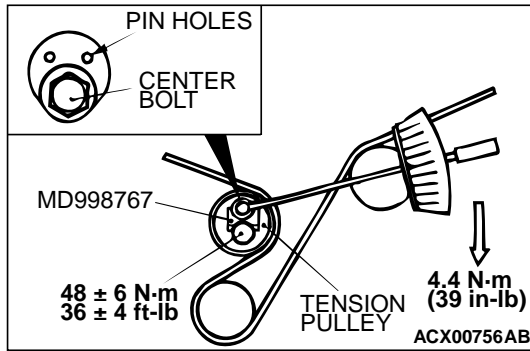

CAUTION

When tightening the center bolt, be careful that the tensioner pulley does not turn with the bolt.

6. Loosen the center bolt of the tensioner pulley. Use special tool MD998767 and a torque wrench to apply the tension torque to the timing belt as shown in the illustration. Then tighten the center bolt to the specified torque.



Standard value: 4.4 N·m (39 in-lb) <Timing belt tension torque>

Tightening torque: 48 ± 6 N·m (36 ± 4 ft-lb)

7. Remove the setting pin that has been inserted into the auto-tensioner.
8. Turn the crankshaft clockwise twice to align the timing marks.
9. Wait for at least five minutes, then check that the auto-tensioner pushrod extends within the standard value range.

Standard value (A): 3.8 – 5.0 mm (0.15 – 0.20 inch)

10. If not, repeat the operation in steps (5) to (9) above.
11. Check again that the timing marks of the sprockets are aligned.

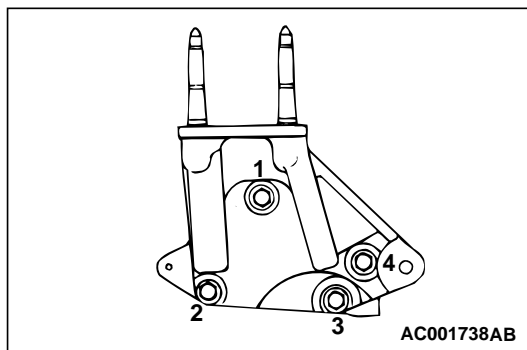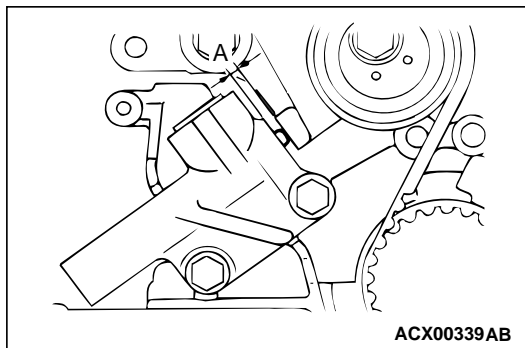


>>C<< ENGINE SUPPORT BRACKET INSTALLATION

Tighten the right engine support bracket mounting bolts in the order shown in the illustration.

>>D<< CRANKSHAFT PULLEY INSTALLATION


Use special tools MB990767 and MD998715 to install the crankshaft pulley.

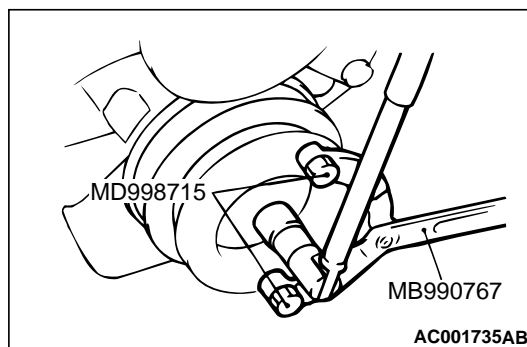

INSPECTION

M1112004400158

AUTO-TENSIONER

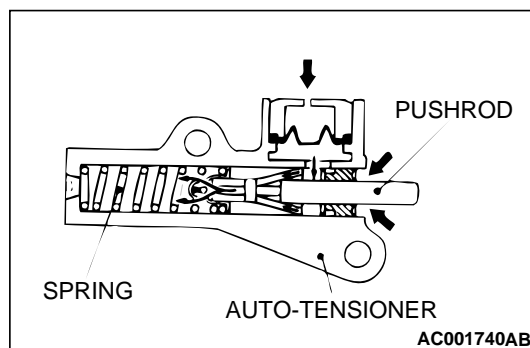

- Check the auto-tensioner for possible leaks.
- Check the pushrod for cracks.

SPECIFICATIONS

FASTENER TIGHTENING SPECIFICATIONS

M1111003800194

ITEMS		SPECIFICATIONS
Auto-tensioner attaching bolt		23 ± 3 N·m (17 ± 3 ft-lb)
Camshaft sprocket attaching bolt		88 ± 10 N·m (65 ± 7 ft-lb)
Camshaft thrust case attaching bolt		13 ± 2 N·m (109 ± 21 in-lb)
Control wiring harness protector attaching bolt		5.0 ± 1.0 N·m (44 ± 9 in-lb)
Crankshaft bolt		182 ± 4 N·m (134 ± 3 ft-lb)
Crankshaft position sensor attaching bolt		8.8 ± 1.0 N·m (78 ± 9 in-lb)
Cylinder head bolt <cold engine>		108 ± 5 N·m \rightarrow 0 N·m \rightarrow 108 ± 5 N·m (80 ± 3 ft-lb \rightarrow 0 in-lb \rightarrow 80 ± 3 ft-lb)
Distributor attaching nut		13 ± 2 N·m (109 ± 21 in-lb)
Drive plate bolt <A/T>		74 ± 2 N·m (55 ± 1 ft-lb)
Engine mount bracket attaching bolt	M10	86 ± 12 N·m (64 ± 8 ft-lb)
	M12	81 ± 12 N·m (60 ± 9 ft-lb)
Engine mount bracket attaching nut		86 ± 12 N·m (64 ± 8 ft-lb)
Engine mount stay attaching bolt		35 ± 6 N·m (26 ± 4 ft-lb)
Engine support bracket right attaching nut		44 ± 5 N·m (33 ± 3 ft-lb)
Flywheel plate bolt <M/T>		74 ± 2 N·m (55 ± 1 ft-lb)
Ground wire attaching bolt		5.0 ± 1.0 N·m (44 ± 9 in-lb)
High-pressure fuel hose attaching bolt		4.9 ± 1.0 N·m (44 ± 8 in-lb)
Lower oil pan attaching bolt		11 ± 1 N·m (96 ± 8 in-lb)
Oil dipstick guide attaching bolt		48 ± 6 N·m (36 ± 4 ft-lb)
Oil pan bolt hole cover attaching bolt		11 ± 1 N·m (96 ± 8 in-lb)
Oil pan drain plug		39 ± 5 N·m (29 ± 4 ft-lb)
Power steering oil pump attaching bolt		42 ± 7 N·m (31 ± 5 ft-lb)
Rocker arm and shaft assembly attaching bolt		31 ± 3 N·m (23 ± 2 ft-lb)
Rocker cover attaching bolt		3.4 ± 0.5 N·m (31 ± 4 in-lb)

ITEMS		SPECIFICATIONS
Starter attaching bolt		30 ± 3 N·m (23 ± 2 ft-lb)
Tensioner pulley assembly attaching bolt and nut		44 ± 10 N·m (33 ± 7 ft-lb)
Timing belt front lower cover attaching bolt		11 ± 1 N·m (96 ± 8 in-lb)
Timing belt front upper cover attaching bolt	M6	11 ± 1 N·m (96 ± 8 in-lb)
	M8	14 ± 1 N·m (117 ± 13 in-lb)
Timing belt rear cover attaching bolt		14 ± 1 N·m (117 ± 13 in-lb)
Timing belt tensioner arm attaching bolt		44 ± 10 N·m (33 ± 7 ft-lb)
Timing belt tensioner pulley attaching bolt		48 ± 6 N·m (36 ± 4 ft-lb)
Upper oil pan attaching bolt	M6	5.9 ± 1.0 N·m (52 ± 9 in-lb)
	M10	35 ± 6 N·m (26 ± 4 ft-lb)

SERVICE SPECIFICATIONS

M1111000300349

ITEMS	STANDARD VALUE	LIMIT
Basic ignition timing at idle	5°BTDC ± 3°	—
Actual ignition timing at idle	Approximately 15° BTDC	—
CO content %	0.5 or less	—
HC contents ppm	100 or less	—
Curb idle speed r/min	700 ± 100	—
Compression pressure (250 – 400 r/min) kPa (psi) <without VIC>	824 (119)	Minimum 575 (83)
Compression pressure (250 r/min) kPa (psi) <with VIC>	1,470 (212)	Minimum 1,029 (149)
Compression pressure difference of all cylinder kPa (psi)	—	98 (14)
Intake manifold vacuum at curb idle kPa (in Hg)	—	Minimum 60 (18)
Auto-tensioner pushrod movement mm (in)	Within 1.0 (0.04)	—
Auto-tensioner rod protrusion mm (in)	3.8 – 5.0 (0.15 – 0.20)	—

SEALANT

M1111000500246

ITEM	SPECIFIED SEALANT
Oil pan	MITSUBISHI GENUINE Sealant Part No. MD970389 or equivalent

NOTES